

The logo for Advanced Motion Controls features a stylized white triangle on the left, followed by the word "ADVANCED" in a large, white, serif font, and "MOTION CONTROLS" in a smaller, white, sans-serif font below it. The background is dark with faint red gear and network patterns.

ADVANCED
MOTION CONTROLS

AMC
CONFIGURATION
ENVIRONMENT

AMC Configuration Environment

User Guide

Setup Software
Operator's Manual



Preface

ADVANCED Motion Controls constantly strives to improve all of its products. We review the information in this document regularly and we welcome any suggestions for improvement. We reserve the right to modify equipment and documentation without prior notice.

For the latest revision of this manual, visit the company's website at www.a-m-c.com. Otherwise, contact the company directly at:

ADVANCED Motion Controls • 3805 Calle Tecate Camarillo, CA • 93012-5068 USA

This manual is for the exclusive use of *ADVANCED* Motion Controls. The reproduction, transmission or use of this document or its contents is prohibited without the expressed written permission of *ADVANCED* Motion Controls.

© 2021 *ADVANCED* Motion Controls. All rights reserved.

General Safety



Notice

You must install and operate *ADVANCED* Motion Controls motion control equipment so that you meet all applicable safety requirements. Ensure that you identify the relevant standards and comply with them. Failure to do so may result in damage to equipment and personal injury.

Read this entire manual prior to attempting to install or operate the drive. Become familiar with practices and procedures that allow you to operate these drives safely and effectively. You are responsible for determining the suitability of this product for the intended application. *ADVANCED* Motion Controls is neither responsible nor liable for indirect or consequential damages resulting from the inappropriate use of this product.



Caution

High-performance motion control equipment can move rapidly with very high forces. Unexpected motion may occur especially during product commissioning. Keep clear of any operational machinery and never touch them while they are working.



High voltage

Keep clear of enclosed units, motor terminals, and transformer terminals when power is applied to the equipment. Follow these safety guidelines:

- Always turn off the main power and allow sufficient time for complete discharge before making any connections to the drive.
- Make sure that the minimum inductance requirements are met. Pulse Width Modulated (PWM) amplifiers deliver a pulsed output that requires a minimum amount of load inductance for proper operation.
- Do not rotate the motor shaft without power. The motor acts as a generator and will charge up the power supply capacitors through the amplifier. Excessive speeds may cause over-voltage breakdown in the power output stage. Note that an amplifier having an internal power converter that operates from the high voltage supply will become operative.
- Do not short the motor leads at high motor speeds. When the motor is shorted, its own generated voltage may produce a current flow as high as 10 times the amplifier current. The short itself may not damage the amplifier but may damage the motor.
- Do not make any connections to any internal circuitry. Only connections to designated connectors are allowed.



Warning

The warning symbol instructs and directs you to avoid harming yourself. This ensures operator safety and protection.

ADVANCED Motion Controls, the combined isosceles trapezoid/right triangle logo, and DriveWare are either registered trademarks or trademarks of *ADVANCED* Motion Controls in the United States and/or other countries. All other trademarks are the property of their respective owners.

Some features shown in this manual are **not** available on all FlexPro models. More information on new features can be found in the ACE release notes. Please contact technical support for questions.

Document ID	Revision	Date	Changes
MNDGACUG-01	1.2019 - BETA	6/2019	First Release
MNDGACUG-02	1.2019.4	12/2019	- Added Initial Support for Jerk Limiting - Added Initial Support for AC Induction Motors
MNDGACUG-03	1.2020.1	3/2020	- Added Pre-Trigger Value field for BiSS-C Encoders
MNDGACUG-04	1.2021.1	6/2021	- Added note regarding current loop Ki display units

Document ID	Revision	Date	Changes
MNDGACUG-05	1.2021.4	11/2021	<ul style="list-style-type: none"> - Added Tamagawa/Nikon Envoder Feedback Parameters - Added 4.1.1 Auto-Tuning section - Added 4.1.2 Manual Current Loop Tuning - Updated Temperature table in Signal Definitions
MNDGACUG-06	1.2022.2	7/2022	<ul style="list-style-type: none"> - Updated "Incremental Encoder Feedback Parameters" table. - Updated "Absolute Encoder (EnDat® 2.2) Feedback Parameters" table. - Updated "Absolute Encoder (BiSS C-Mode) Feedback Parameters" table. - Updated "Tamagawa/Nikon Encoder Feedback Parameters" table. - Added information about storage location of motor database file in 3.4.6 Motor Database. - Updated "Velocity Feedback" table to include "Low Speed Estimator (incremental encoder feedback only." - Updated Section 4.1.1 - Added 4.3.1 Velocity Loop Auto-Tuning - Added A.1.3 Import

1 Introduction **1**

1.1 Getting Started	2
1.1.1 Software Files	2
1.1.2 Workspace Display	2
Menu Bar and Associated Toolbar Icons	3
System Browser	4
Status Panel	4
Dynamic Help Browser	4
Status Bar	4
Caption Bar	5
1.2 Using the Setup Software	6
1.2.1 Opening a File	6
1.2.2 Working with the Drive	6
Naming the Drive	6
Connecting to the Drive	6
Disconnecting from the drive	7
1.2.3 Hot Key	7
1.2.4 Working with the Command Toolbar	8
1.2.5 Working with the Setup Software Windows	9
Showing/hiding the Toolbars and Caption Bar	9
Showing/hiding Panels	9
Arranging the Windows	9
1.3 Getting Help	10
1.3.1 Dynamic Help	10
1.3.2 Technical Support	10
Software Version	10
Display the Drive Information	10
1.4 Saving Your Setup	11
1.4.1 Storing the Changes onto the Drive	11

1.4.2 Saving the Project File onto Your Computer	11
1.5 Exiting the Program	11

2 Connecting to the Drive **12**

2.1 Connecting to the Drive	13
2.2 Changing Communication Parameters	14

3 Configuring the Drive **15**

3.1 Configuration	16
3.1.1 Command Source	16
3.1.2 Command Limiter	19
3.2 Loop Feedback	21
3.2.1 Velocity Feedback Source	21
3.2.2 Position Feedback Source	21
3.3 Power-up Settings	22
3.4 Motor Parameters	23
3.4.1 Motor Selection	23
3.4.2 Motor Parameters	23
3.4.3 Feedback Type	25
3.4.4 Commutation	28
3.4.5 Braking	28
3.4.6 Motor Database	29
Manage Motor Database	29
3.5 AutoCommutation	31
3.6 Encoder Output	32
3.7 Inputs / Outputs	33
3.7.1 Analog Inputs	33
3.7.2 Analog Outputs	34
3.7.3 Digital Inputs	34
3.7.4 Digital Outputs	37
3.7.5 Extended I/O	37
3.7.6 Programmable Limit Switch	37
3.8 Limits	39
3.8.1 Current Limits	39
3.8.2 Velocity Limits	40

3.8.3 Position Limits	40
3.8.4 Stop	40
3.8.5 Voltage Limits	41
3.8.6 Temperature Limits	43
3.9 Events	44
3.9.1 Basic Events	45
3.9.2 Advanced Events	45
3.10 Network Settings	46
Drive Operation Mode	46
3.11 PDO Configuration	47
3.11.1 RPDOs - CAN Drive	47
3.11.2 TPDOs - CAN Drive	47
3.11.3 TPDO Events - CAN Drive	48
3.11.4 RPDOs and TPDOs - Ethernet Powerlink or EtherCAT	48
3.12 Tuning	49
3.12.1 Current Loop Gains	49
3.12.2 Gain Sets	49
Set Position	50
3.12.3 Filters	50
Velocity Feedback	50
Custom	50
3.12.4 Advanced Settings	51

4 Tuning and Commutation

52

4.1 Current Loop Tuning	54
4.1.1 Current Loop Auto-Tuning	54
Current Loop Auto-Tuning Procedure	54
Current Loop Auto-Tuning Warnings	55
4.1.2 Manual Current Loop Tuning	57
Step 1: Inputs/Outputs Configuration setup	57
Step 2: Waveform Generator Setup	57
Step 3: Oscilloscope setup	57
Step 4: Tuning	58
Step 5: (For AC Induction Motors Only) Flux Reference Loop - Waveform Generator Setup	59
Step 6: (For AC Induction Motors Only) Flux Reference Loop - Oscilloscope Setup	59
Step 7: (For AC Induction Motors Only) Flux Reference Loop - Tuning	59

Step 8: (For AC Induction Motors Only) Commutation . . .	60
4.2 Commutation	61
4.2.1 AutoCommutation™	61
AutoCommutation™ Warnings	62
4.2.2 Manual Commutation Procedure	63
Setting over speed limits	63
Performing Manual Commutation (Incremental Encoder, Sin/Cos Encoder)	64
Performing Manual Commutation (Absolute Encoder - BiSS, EnDat, Hiperface)	65
Re-Setting Over Speed Limits	65
4.2.3 Advanced Commutation	65
4.2.4 Phase Detect	66
4.3 Velocity Loop Tuning	68
4.3.1 Velocity Loop Auto-Tuning	68
Velocity Loop Auto-Tuning Procedure	68
Velocity Loop Auto-Tuning Warnings	69
4.3.2 Manual Velocity Loop Tuning	70
Step 1: Waveform Generator setup	70
Step 2: Oscilloscope setup	70
Step 3: Tuning	71
4.4 Position Loop Tuning	73
Step 1: Waveform Generator setup	73
Step 2: Oscilloscope setup	74
Step 3: Tuning	74

5 Motion Tasks 75

5.1 Motion Tasks	76
5.1.1 Homing	76
5.1.2 Indexes	78
Executing an Index Task	78
Dynamic Indexes	79
5.1.3 PVT	80
How To Construct A PVT Points File	80
5.1.4 Jogs	82
Executing a Jog Task	82
5.1.5 Sequences	82

6 Downloading the Firmware **85**

6.1 Prepare for Download	85
6.2 Open the Firmware Download Window	85
6.3 Downloading the Firmware	86

A Tools and Functions **87**

A.1 Digital Oscilloscope	87
Channel Select	87
Presets	88
Display	88
Trigger	88
Measure	88
A.1.1 Waveform Generator	89
A.1.2 Data Capture	89
A.1.3 Import	90
A.2 Multimeter	91
A.3 User Units	92
A.4 Motion Panel	93
Indexes	93
Dynamic Index	93
Jog	93
PVT	93
Motion Status	94
A.5 Motor Diagnostics	94
Procedure Settings	94
A.6 Signal Definitions	95
Current measurements	95
Velocity measurements	95
Position measurements	96
Commutation	96
Voltage	96
Command Limiter	96
Temperature	97
Torque	97
Drive	97
Feedback	97

Interface Input	97
Deadband Input	97
PWM Input	97
PLS	98
Capture	98
A.7 Drive Status	99
A.8 Critical Event Activity	100
A.9 Event Counters	100

B Current Limiting **101**

B.1 Understanding the Limit Envelope	101
B.2 Current Limiting Algorithm	105
B.2.1 Time-Based Peak Current Limiting	106
B.2.2 Time-Based Non-Peak Current Limiting	107
B.2.3 Time-Based Current Recovery	108
B.2.4 Charge-Based Peak Current Limiting	109
B.2.5 Charge-Based Non-Peak Current Limiting	110
B.2.6 Charge-Based Current Recovery	111
B.2.7 RMS Current Scaling	112
B.3 Calculating Current Limits	113
B.3.1 Example 1: Foldback Current	114
B.3.2 Example 2: Peak Current Recovery	115

C Control Loop Architecture **116**

D Filtering Velocity Feedback **117**

D.1 Effects of the Feedback Filter	118
D.1.1 Cutoff Frequency Set to Infinite	118
D.1.2 Cutoff Frequency Set to 300Hz	118
D.1.3 Cutoff Frequency Set to 50Hz	119
D.1.4 Cutoff Frequency Set to 10Hz	119
D.2 Conclusion	119

E Troubleshooting **120**

E.1 Setup Software Safety Actions	120
E.2 Potential External System Errors	120
E.3 Events and I/O Descriptions and Troubleshooting Methods ..	121

1 Introduction



This document provides instructions on how to use the setup software to connect to, set up and control digital servo drives.

These instructions walk you through the commissioning steps necessary to set drive limits, tune the current, velocity, and position control loops, and assign automated functions to drive events.

The following major sections are covered:

- [“Connecting to the Drive” on page 12](#)
- [“Configuring the Drive” on page 15](#)
- [“Tuning and Commutation” on page 52](#)

Follow the procedures in this chapter to get an overview of many functions. Familiarize yourself with the files on your computer, the software workspace and controls of the software. Later chapters provide more details in using these functions.

Before proceeding, you must accomplish the following actions:

- Read the release notes and installation text files for your setup software version.
- Install the setup software.

1.1 Getting Started

After installing the setup software on your computer, you can run the application from your Start > Programs menu or desktop icon.

When you first start the setup software, you see the following choices:

- **Open** - This will allow you to browse through the files on your computer to select a previously saved project file to open, without having to connect to a drive. The project can then be configured or modified before downloading the project file into a drive.
- **Connect** - This will allow you to immediately connect to a drive. The drive can then be set up and configured for operation, and the information saved as a project file.


1.1.1 Software Files

Look in the folder in which you placed the application; by default, this location is under C:\Program Files. This folder includes the subdirectories:

- **MotorDB** holding a library of *.xml *database files* making up the motor database.
- **My Firmware Files** holding a library of *.aff *firmware files* for various drives.
- **My Projects** holding a library of *.adf *project files*, each with the parameters and controls specific to a particular drive-and-motor setup.


1.1.2 Workspace Display

The software provides functions, tools and status to help you set up your drive.

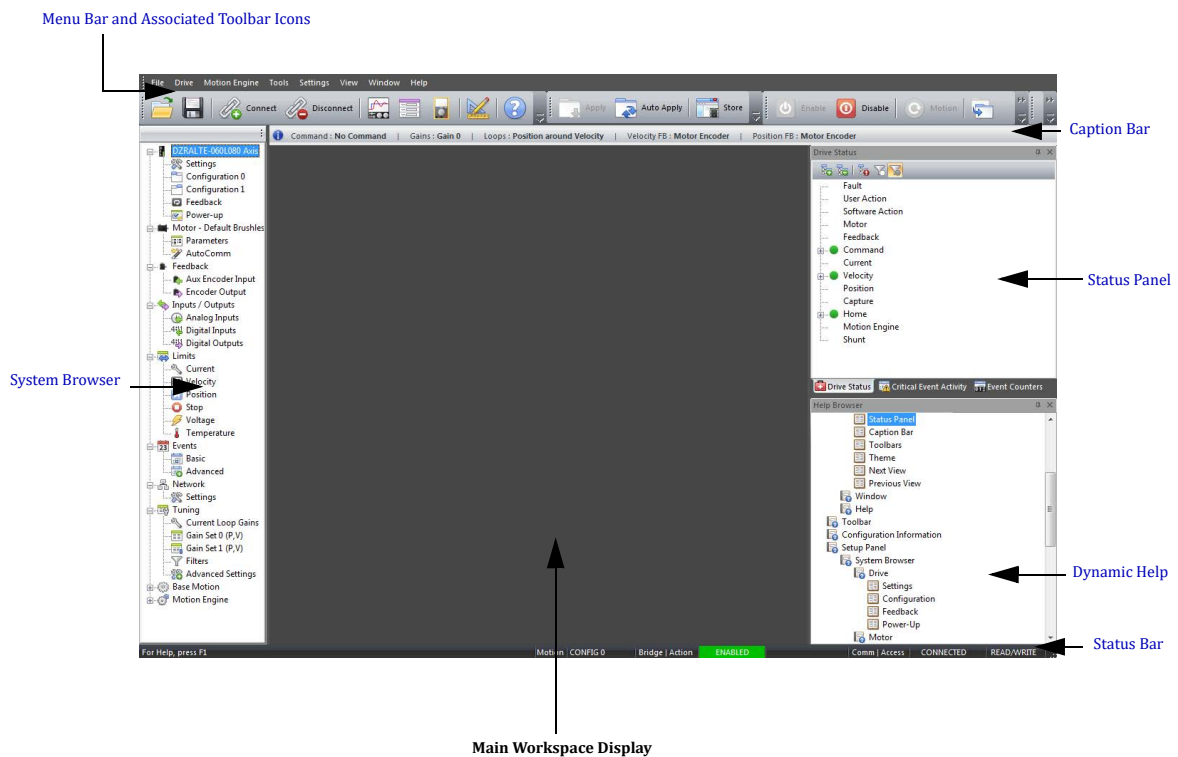

Menu Bar and Associated Toolbar Icons At the top of the screen are pull down menus and a toolbar for access to many tools and functions.




Function	Menu Pull-down	Toolbar	Keys	
Open a project file	File >	Open Project	 Ctrl+O	
Save a project file to PC		Save Project	 Ctrl+S	
Save a project file to PC as a file name		Save Project As...	---	
Apply changes made to active window		Apply Changes	 Ctrl+L	
Automatically apply changes made		Auto Apply	 Ctrl+U	
Close the program		Exit	---	
Power up or down the bridge	Drive >	Enable	 Alt+E	
		Disable	 Alt+D	
Allow motion to occur or disallow motion by sending a Stop command		Motion Ready	 Alt+G	
		Stop Motion	 Alt+P	
Change the active Configuration		Switch Configurations	 Alt+C	
Change the active Gain Set		Switch Gains	 Alt+A	
Connect to the drive or change connection settings once connected		Connect	 Ctrl+N	
Disconnect from the drive		Disconnect	 Ctrl+D	
Store project on the drive		Store to drive	 Alt+O	
Upload settings from drive		Restore from drive	---	
Update drive firmware		Firmware Download	---	
Display drive information		About Drive	---	
Turn the Motion Engine on or off		Motion Engine >	On	 Alt+R
Reset the Motion Engine			Reset	 Ctrl+R
Open the Scope/Tuning tool	Tools >	Scope/Tuning	 Ctrl+E	
Open the Multimeter tool		Multimeter	 Ctrl+M	
Brings up the Motion Panel window.		Motion Panel	 Ctrl+T	
Assign the Disable Drive Hotkey	Settings >	Hot Key Settings	---	
Open the User Units window		User Units	 Ctrl+R	

Function	Menu Pull-down	Toolbar	Keys
Show or hide the System Browser	View >	System Browser	---
Show or hide the Status Panel		Status Panel	---
Show or hide the Caption Bar		Caption Bar	---
Customize the Toolbar icons		Toolbar	---
Customize the display themes		Theme	---
Arrange software windows into horizontal tabbed group	Window >	New Horizontal Tab Group	---
Arrange software windows into vertical tabbed group		New Vertical Tab Group	---
Closes all open tabs		Close All Tabs	---
Re-arranges all toolbars and panels to their default locations		Reset Window Layout	---
Open the software Help file, or display the Dynamic Help Browser	Help >	Help...	 F1
Display software information, version number, and copyright.		About...	---

System Browser Navigate between the setup windows to configure the drive. Each panel contains multiple headings for specific drive parameters. Select a configuration item from the System Browser to open a window in the main workspace display.

Status Panel The Status Panel provides real-time information on drive events and actions.

- **Drive Status** - Shows drive events (current and history) and is a useful troubleshooting tool.
- **Critical Event Activity** - Lists drive faults and fault events along with the time they occurred.
- **Event Counters** - Lists the number of times faults have occurred since the drive has been in operation.

Dynamic Help Browser Dynamic Help tracks user movements through the software workspace and automatically navigates to the appropriate Help topic in the list. Select a topic from the Dynamic Help Panel to open a new tab with the Help information. The Dynamic Help automatic tracking feature can be toggled on or off by clicking the Pause button  in the Help Browser pane. The Back  and Forward  buttons will navigate between previously viewed Help Topics.

Status Bar The Status Bar provides information on the drive configuration, bridge state, connection status, and accessibility. From left to right across the bottom of the workspace window, the Status Bar provides information on:

- **Motion** - Displays motion tasks the drive is currently performing when the motion engine is enabled. Will be blank if no task is currently active.
 - **Config 0:** Configuration 0 is currently selected, and no autonomous modes are active.
 - **Config 1:** Configuration 1 is currently selected, and no autonomous modes are active.
 - **Ready:** Motion Engine is on and the drive is ready to receive commands from the Motion Engine. No motion tasks are currently active.
 - **Home:** Drive is actively in homing mode.
 - **Jog:** Drive is actively in jog mode.
 - **Index (# or name):** Drive is running an index.

- **Waveform:** The Waveform Generator is controlling the axis.
- **AutoComm:** The AutoCommutation process is controlling the axis.
- Bridge - Shows the status of the drive.
 - **Enabled:** Drive is enabled (note that a Stop condition is considered enabled).
 - **Disabled:** Drive is disabled (note that a Dynamic Brake condition is considered disabled).
- Action - Shows the present bridge action as the result of a drive or system event. Hovering the mouse pointer over the Action status will display the event causing the action.
 - **Bridge Disabled:** The bridge is disabled.
 - **Negative Disabled:** Disable negative direction action is active.
 - **Positive Disabled:** Disable positive direction action is active.
 - **Dynamic Braking:** Dynamic brake action is active.
 - **Negative Stopped:** Negative stop is active.
 - **Positive Stopped:** Positive stop is active.
 - **Stopped:** Stop is active.
- Comm - Shows whether the setup software is connected to a drive. Hovering the mouse pointer over the Connection status of a connected drive will provide information about the connection type.
 - **Connected:** Software is connected to a drive.
 - **Not Connected:** Software is not connected to a drive.
- Access - Shows whether the setup software has full control or monitoring access. Will be blank if the drive is not connected.
 - **Read/Write:** The drive is connected and the software has Read/Write access (full control).
 - **Read-Only:** The drive is connected and the software has Read-Only access (monitoring only).

Caption Bar Displays details about the current drive configuration.

- Command - Shows the present Command Source (either as configured in the active Configuration window or as selected for motion, tuning, waveform, or commutation functions).
- Gains - Displays the presently selected Gain Set.
 - **Set 0:** Gain Set 0 is active.
 - **Set 1:** Gain Set 1 are active.
- Loop Configuration - Displays the present loop configuration.
 - **Position Around Velocity:** All loops are enabled.
 - **Position Around Current:** Only the position and current loops are enabled.
 - **Velocity:** Only the velocity and current loops are enabled.
 - **Current:** Only the current loop is enabled.
- Velocity Feedback - Shows the present velocity feedback device as configured in the Feedback window.
- Position Feedback - Shows the present position feedback device as configured in the Feedback window.


1.2 Using the Setup Software

The setup software provides many tools to configure and monitor the settings for the drive. Later chapters go into detail about these tools, but briefly, this section describes how to:

- Open a project file
- Name the drive
- Connect to and disconnect from the drive
- Enable and disable the power bridge
- Set the drive behavior when you disable the power bridge
- Use a Hot Key to disable the power bridge
- Show and hide the toolbars
- Move, scroll and arrange the windows

1.2.1 Opening a File

The setup software must be *disconnected* from the drive before performing this task.

1. To open an existing project file from your computer, perform one of the following actions
 - Select *File > Open* on the main menu bar.
 - Click on the Open icon  on the tool bar.
2. Browse your computer to the My Projects subdirectory or wherever your project files are saved, and select a project (.acf extension).

Once opened, you can connect to the drive and if the configuration settings in the drive don't match the configuration settings in the setup software, you can choose to either download the project file configuration settings into the drive, or upload the configuration settings from the drive into the setup software. For more information, see "[Connecting to the Drive](#)" on page 12.


1.2.2 Working with the Drive

There are several tasks you must accomplish to configure and set up the drive. Later chapters go into detail about these tasks.

Naming the Drive The Drive Name data field allows you to assign a unique name to the drive (such as "X-Axis"). You may enter a name up to 32 characters.

1. Select *Settings* from the [*DriveName*] heading in the System Browser.
2. In the data field, type the name of the drive.
3. Click on the OK button.

Connecting to the Drive You must start communicating with the drive before performing any configuration and setup. Choose one of these actions:


- Select *Drive > Connect* on the main menu bar.
- Click on the Connect icon  on the tool bar.

When you connect, you decide whether to upload the configuration settings currently in the drive or download the current project from the setup software into the drive.

While connected to the drive, the status bar in the lower, right-hand corner of the workspace reads CONNECTED and you can perform most configuration tasks.

See “Connecting to the Drive” on page 12 for more information.

Disconnecting from the drive When it is time to stop communicating with the drive, you must disconnect from the drive. Choose one of these actions:

- Select *Drive > Disconnect* on the main menu bar.
- Click on the Disconnect icon  on the tool bar.

After terminating communication with the drive, the status bar in the lower, right-hand side of the workspace reads NOT CONNECTED.

1.2.3 Hot Key

The Hot Key Settings window allows you to select the behavior associated with a specified Hot Key. It does not apply to user inhibits or event-related inhibits. Select *Settings > Hot Key Settings* on the main menu bar.

This window allows you to assign a Hot Key to either disable the bridge or stop motion.

Disable Bridge	The Hot Key will issue a Software Disable. The action associated with a Software Disable may be specified in the Events window.
Stop Motion	The Hot Key will issue a Stop command*.

*Stop behaves differently depending which mode the drive is in. For current mode, Stop will command zero current. For velocity mode, Stop will decelerate and command a zero velocity. For Position mode, Stop will decelerate and hold position.

When you press the Hot Key, it is the same action as disabling the drive or stopping motion through the Menu Bar or clickable icons on the Command Toolbar. You can use the Hot Key at any time. However, if the Hot Key is set to Stop Motion, it will have no function if the drive is already disabled. To assign keystrokes for the Hot Key:

1. Select *Settings > Hot Key Settings* from the menu bar.
This action displays a window allowing you to reassign the key combinations.
2. Make sure the cursor is placed in the edit box.
3. Press the desired function keys (F2-F11).
4. Click the OK button.

1.2.4 Working with the Command Toolbar

The Command Toolbar has four main functions:







- Controls whether the power bridge circuit is enabled or disabled
- Controls whether the drive is ready to respond to motion commands.
- Switches between user configurations
- Switches between gain sets



Caution

In later chapters, when you actually enable the bridge, the motor will have power and can move. You must take care so as to avoid damage to equipment or injuries to people.

Command Toolbar Buttons

	Icon	Action	Description
Enable / Disable		Enable Drive	Clicking on the Enable Button will send an Enable instruction to the drive. If there are no active errors or digital inputs causing the bridge to be disabled, the bridge will become enabled, allowing the drive to react to motion commands.
		Disable Drive	Clicking on the Disable Button will send a Software Disable instruction to the drive. If the bridge was enabled prior to clicking the button, the bridge will be disabled. This action will turn off the power bridge circuit. The Stop/Allow Motion button is greyed out when the drive is disabled. You may configure events to automatically disable the bridge from within the Events window.
Motion / Stop		Motion	Clicking on the Motion Button will release the drive from the stopped state. This action allows the drive to react to motion commands. In order to perform functions in the setup software such as Phase Detect, AutoCommutation, and tuning tasks, motion must be enabled. Keep in mind that when the drive has been set to allow motion commands, the drive is software enabled, but a hardware event (digital input, invalid hall state, etc.) could still prevent motion.
		Stop	Clicking on the Stop Button will send a Stop instruction to the drive. This action prevents the drive from sending motion commands to the motor such that no movement is allowed to occur. Note that stopping motion is not the same as disabling the power bridge. The bridge will still be enabled when motion has been stopped. The behavior of a Stop command depends on the mode of operation the drive is in. If the drive is controlling velocity or position, the motor will decelerate according to the deceleration limit (specified in the Stop window). When the motor has decelerated to zero speed, it will continue to servo in this state until the Stop is released or the bridge becomes disabled. If the drive is controlling current, activating the Stop will issue a zero current command to the drive. A zero current command will continue until the Stop is released or the bridge becomes disabled. You may configure events to automatically Stop motion from within the Events window.
Switch Active Configuration		Switch Active Configuration	Clicking on the Switch Active Configuration button will change the active user configuration from Configuration 0 to Configuration 1, or vice versa. Settings for the user configurations can be configured under <i>Configuration 0</i> or <i>Configuration 1</i> in the System Browser. The Caption Bar will display the currently active user configuration.
Switch Active Gain Set		Switch Active Gain Set	Clicking on the Switch Active Gain Set button will change the active gain set from Gain Set 0 to Gain Set 1, or vice versa. Values for the gain sets can be input under <i>Tuning > Gain Set 0</i> or <i>Gain Set 1</i> in the System Browser. The active gain set can also be assigned in the user configuration windows.

1.2.5 Working with the Setup Software Windows

The setup software allows for customization of the workspace display for selected features.

Showing/hiding the Toolbars and Caption Bar To allow more room in the workspace, you can hide the Toolbar icons and Caption Bar. It is recommended to leave the Toolbars and Caption Bar visible.

To show/hide the toolbars:

1. Select *View > Toolbars* on the main menu bar.
2. Select or deselect the desired Toolbars, depending on your preference.
3. Alternatively, select the drop-down arrow at the end of each portion of the Toolbar, and using the Add or Remove Buttons option, choose which icons and customization selections to have visible.
4. Each portion of the Toolbar can also be dragged off into a floating menu by clicking and dragging on the Toolbar handle for each portion.

To show/hide the Caption Bar:

1. Select *View > Caption Bar* to show/hide the Caption Bar.

Showing/hiding Panels To allow more room in the workspace, you can hide the System Browser, Status Panel, and the Dynamic Help panel. It is recommended to leave all the panels visible.

1. Select *View > System Browser* or *View > Status Panel* to show/hide the System Browser or Status Panel, respectively.
2. Select *Help > Dynamic Help* to show/hide the Dynamic Help panel.

Arranging the Windows

- To arrange open windows into a tabbed group, select either *New Vertical Tab Group* or *New Horizontal Tab Group* from the *Window* menu. Note that not all windows are able to be arranged into tabbed groups. Typically it is recommended to use the tabbed grouping option to allow the digital oscilloscope to be visible with the active gain set window to allow for real-time gain adjustments. It is also helpful to have the Dynamic Help Browser open in a tabbed group to provide useful information based on the active window.
- To close all open tabs, select *Windows > Close All Tabs* on the main menu bar.
- To re-arrange all toolbars and panels to their default locations, select *Windows > Reset Window Layout* on the main menu bar.

1.3 Getting Help




The Help topics offer assistance with the setup software. “[Troubleshooting](#)” on page 120 in this manual also offers descriptions and recommended troubleshooting techniques for some common issues.

To open the help documentation, either:

- Select *Help > Help...* on the main menu bar.
- Press the F1 key.

1.3.1 Dynamic Help

The Dynamic Help panel offers a direct link to the Help file topic associated with the active software window. Clicking on certain items or opening certain windows will automatically shift the Dynamic Help index to the appropriate topic. Click on the topic to open a tab containing help information.


The Dynamic Help automatic tracking feature can be toggled on or off by clicking the Pause button  in the Help Browser pane. The Back  and Forward  buttons will navigate between previously viewed Help Topics.

Alternatively, users can navigate manually through the help index in the Help Browser panel to find the desired help topic.

1.3.2 Technical Support

If you need to contact technical support with a problem or question, please have this information readily available.

Software Version To display the version number of your copy of the setup software, select *Help > About...* on the main menu bar.

Display the Drive Information To display information about the drive’s internal hardware and software, select *Drive > About Drive* from the menu bar. In the Drive Information window, click the  button in the lower right corner of the window to expand/collapse detailed drive information.

1.4 Saving Your Setup

After you have configured your drive, be certain to save all parameters and settings.

1.4.1 Storing the Changes onto the Drive

The setup software must be *connected* to the drive before performing this task.

After you configure and adjust the drive's settings, use the store function. The drive settings stored in the drive's nonvolatile memory (NVM) are used by the drive after an off-on power cycle.


To save the current drive settings in nonvolatile memory, you would either:

- Select *Drive > Store to Drive* on the main menu bar.
- Click on the Store icon  on the tool bar.

1.4.2 Saving the Project File onto Your Computer

Use this command to save the active configuration project file to its current name and directory. When you save a project for the first time, the software displays the Save As dialog box so you can name your project.

To overwrite your project file on the computer with your current changes in the setup software, you would either:

- Select *File > Save* on the main menu bar.
- Click on the Save icon  on the tool bar.

If you want to change the name and directory of an existing project file before you save it, choose the Save As command.

1. Select *File > Save as* on the main menu bar.
2. Enter a file name in the dialog box.

1.5 Exiting the Program

Use this command to end your configuration session. To exit the program, either:

- Select *File > Exit* on the main menu bar.
- Double-click on the upper left corner of the main window.

The software will prompt you to save documents with unsaved changes.

- **Apply Changes to Drive** - Apply changes to the drive before exiting.
- **Save Project to File** - Saves the current project file to the PC before exiting.
- **Store Changes to the Drive NVM** - Saves the current project settings to the drive non-volatile memory before exiting.

2 Connecting to the Drive



Before proceeding, you must accomplish the following actions:

- Read the data sheet for the drive and the specification sheet for the motor and be familiar with their capabilities.
- Cable your computer to the drive.
- Wire the drive to the motor.
- Provide electrical power to the drive; the drive, in turn, provides power to the motor.

2.1 Connecting to the Drive


When you first start the setup software, you see the following choices:



1. Select *Connect*.

The Connect To Drive window appears when Connect is selected from the opening window. You must initially connect to the drive using the factory default settings stored in nonvolatile memory. Once the communication settings have been configured, click *Connect*.


Ace has the ability to check for updated firmware. If available, a download prompt is shown on the screen.

Connect To Drive Window Settings					
Option	Default Settings				Description
	RS232	RS485	Ethernet	USB	
Drive Address	63	63	1	63	Selects the address of the drive that is connected to the PC. The valid range of addresses is 1 - 63.
Baud Rate*	115200	115200	--	--	Selects the communication baud rate. The recommended baud rate setting is 115200 for RS232, and 115200 or higher for RS485. If necessary, a baud rate of 9600 can be used to connect to the drive, but the baud rate should be increased prior to commissioning the drive.
Communication Interface					Selects the appropriate interface for your application.
Interface Access Control					Under normal circumstances, Read/Write should be selected. You may select Read Only to put the software in a state that allows monitoring through the configuration software while writing through another interface. Restricted R/W (Read/Write) control allows Read/Write access to certain tuning features while writing through another interface. The tuning controls accessible in Restricted R/W mode are: Current Loop Gains, Gain Set 0, Gain Set 1, Velocity Feedback Filter Frequency, and Advanced Settings.
USB Device					The <i>USB Device</i> option will allow selection of the appropriate drive via the drop-down menu. Click the USB Search button  to search for compatible drives using the current address entered in the <i>Drive Address</i> field. Drives will be listed by their serial number for selection.
IP Address (Ethernet communication only)					Allows entry of a user defined IP address.
Connect					Establishes a connection with the specified settings. If you have a project open, you can choose to download the current project settings to the drive, or to upload the stored drive settings into the project. The status bar in the lower right corner of the setup software will change from NOT CONNECTED to CONNECTED.
Restore Defaults					Returns connection settings to the factory default values.
Help					Brings up this help document.

If the drive has previously been configured, these settings may have changed.

2.2 Changing Communication Parameters

Once communication is established, you may change interface settings.

1. Choose one of the following actions:
 - Select *Drive > Connect* from the menu bar.
 - Click on the Connect icon  on the tool bar.
2. Choose your desired settings.
3. Click the OK button.

The new settings take effect immediately. In order to retain the new settings upon power-up, they must be stored in the drive's nonvolatile memory (see [“Storing the Changes onto the Drive” on page 11.](#))

ACE has the ability to check if there is updated firmware and prompts the user for a download.

3 Configuring the Drive

Before proceeding, you must accomplish the following actions:

- Wire the drive to the motor.
- Connect your computer to the drive.
- Use the setup software to successfully recognize the drive.

Configuration requires you to decide upon several parameters for your drive based on the requirements of your application. The drive must have information about scale factors, feedback devices, motor parameters, and limits. The setup software provides windows for you to:

- Enter the motor constants.
- Configure the primary feedback.
- Assign the user units of measurements.
- Decide which analog and digital signals will provide input and output for the drive.
- Set the limits for temperature, current, voltage, velocity and position and decide options for power-up and brake/stop behavior.
- Specify the command source.

All these parameters are collected in a *project file*. You can save several project files on your computer (they have the *.adf extension). From your computer, a file can be downloaded to—or uploaded from—the drive. Once in the drive, you must store the file in the drive's non-volatile memory.

This chapter discusses each setup software window and function. Once you have completed configuration, the drive will be ready for tuning and commutation.



Note

The Restore function loads into your computer's project file the parameters stored in the drive's non-volatile memory. Use Restore when you wish to revert back to the parameters last stored in the drive if you find your recent changes result in poor performance.

Select *Drive > Restore* from drive on the main menu bar.

3.1 Configuration

The Configuration windows are used for defining the Loop Configuration, Gain Set and Command Source and allows two separate configurations to be saved for mode switching purposes. Open the desired configuration window by selecting *[DriveName] > Configuration 0* or *Configuration 1*. Note that Mode Switching must be enabled in order for Configuration 1 to be available to edit. Mode Switching can be enabled in the Drive Settings window (*[DriveName] > Settings*) by checking the *Enable Second Configuration* checkbox. Typically it is only necessary to define the parameters for one configuration, but for systems where switching between two configurations is desired, the setup software can switch between Configuration 0 and Configuration 1 in any of the following ways:

- Use the **Switch Config** icon on the Toolbar
- Set up the [Digital Inputs](#) to switch Configurations
- Configure the [Power-up Settings](#) to switch Configurations

Loop Configuration

The Loop Configuration option allows selection between the four control loop choices: Current, Velocity, Position Around Current, and Position Around Velocity. Set the loop configuration for the final application of the drive system. For instance, if the desired configuration is Position Around Velocity, it is not necessary to change the loop configuration from Current to Velocity to Position Around Velocity while tuning each control loop. See [“Tuning and Commutation” on page 52](#) for information on tuning the control loops.

Gain Set

Most applications will not require gain switching, and therefore should use the default Gain Set 0. For advanced configurations, a particular gain set can be associated with the configuration, and can be initiated automatically each time the configuration is initiated or the drive is power cycled. If the application requires more than one configuration, a single gain set can be used on both configurations, or a separate gain set may be used for each. See [“Gain Sets” on page 49](#) for more information.

3.1.1 Command Source

The Command Source option allows selection between any command source supported by the drive hardware and firmware. After selecting a command source, the available settings for the chosen command will appear to the right in the Configuration window.

Some command sources may require a specific Loop Configuration for proper operation. In this case, a message will appear with information on which Loop Configuration is required. The command source change cannot be applied until the compatible Loop Configuration is selected.

No Command

This assigns no command source to the drive. Typically, No Command will be automatically assigned when major control loop changes are performed. This is a protection feature to minimize sudden motor movement.

Analog Input

Selects an analog input as the command source for the drive.

Configuration of this input can also be done in the Analog Inputs window. All analog inputs are shown. If more than one is available, you may select it from the *Select available input box*. If an input is disabled (grayed out), that means it is already assigned to another task, and cannot be selected as a command source.

Configuration allows the assignment of parameter values for the applicable Analog Input.

- **Scaling:** Provides a ratio between the input command voltage and the drive output, in terms of applicable user units.
- **Offset:** Used to apply an offset to the input command signal.
- **Deadband:** Sets a deadband range in which the input command signal will have no effect. Deadband will automatically be enabled when an analog input is applied as the command source, even if the Deadband value is zero.

Status allows for monitoring of the input command signal.

- **Measured Value:** The value measured at the analog input.
- **Commanded Value:** The value after applying the specified scaling and offset values, measured in applicable user units.

Step & Direction

Selects the step and direction inputs to control the motor in a simulated stepper motor configuration.

Configure input scaling allows entry for the number of input pulses desired to move the motor by a given amount, defined in the second entry field. Conversion varies depending on which loop is in control; for example, input counts to amps for Current, input counts to speed units for Velocity, and input counts to position units for Position.

PWM & Direction

Allows the user to select from either PWM & Direction or Single Input PWM as the command source input type. The PWM & Direction command option consists of separate PWM (0-100%) and Direction inputs, while the Single Input PWM option consists of only a single PWM input signal (Direction input connections are left unconnected). When using Single Input PWM, a duty cycle in the range of 0-50% will command motion in one direction, while a duty cycle in the range of 50-100% will command motion in the opposite direction. The PWM input signal for both command selections has a range of 1kHz to 125kHz.

Configuration allows for parameter setup and configuration of the PWM input signal.

- **Scaling:** Assigns the command input in terms of applicable user units that will be associated with 100% PWM duty cycle. This value may be positive or negative.
- **Offset:** The offset applied *after* logic polarity is interpreted. If this offset places the PWM input signal outside of the available range of 0-100%, the duty cycle will saturate at its limits. This value may be positive or negative.
- **Invert PWM Logic:** Inverts the logic polarity of the PWM input.
- **Invert Direction Logic:** Inverts the logic polarity of the Direction input. This option is only available for PWM & Direction type input.

Status allows for monitoring of the PWM input signal.

- **Measured Value:** The value measured at the digital input. This represents the duty cycle of the input. It does not reflect the polarity of the command.
- **Commanded Value:** The value after applying the specified logic polarity, offset, and unit scaling, measured in applicable user units.

Encoder Following

Selects the secondary encoder input to drive the motor in a master/slave configuration.

Input Type selects the type of input that will be used during Encoder Following.

- Auxiliary encoder will configure the drive to receive input commands from an auxiliary encoder.
- Virtual encoder will configure the drive to receive input commands via the communications channel.

Configure input scaling sets the number of quadrature input pulses desired to move the motor by a given number of output counts. If using an encoder for primary feedback, *Input Counts* represents the number of encoder counts to move. If using a resolver for primary feedback, *Input Counts* represents the number of resolver counts as determined by the specified resolver resolution. Values entered in either field may be positive or negative.

Interface Input

Used for RS-485/RS-232 as the command source.

Communication Channel

This command is assigned when the drive is being controlled by an outside source. This capability is available with network interface products. Selecting Communication Channel will display the current network settings. Clicking the *Edit* button will open the Network Settings window to change the network communication settings.



Notice

Do not connect to the drive in Read/Write mode while sending commands over the communication channel. Instead, connect to the drive in Read Only mode.

DriveLibrary

Selecting this option will automatically configure the current project file to operate with DriveLibrary. DriveLibrary is a high-level API for developers of motion control solutions. The DriveLibrary API defines a collection of control functions that support the majority of motion control applications. DriveLibrary applications are written and developed in C++. Users should be familiar with the C++ language in order to properly develop motion control applications in DriveLibrary.

Selecting DriveLibrary as the Command Source will automatically configure the current project file to operate with DriveLibrary. The present network settings will be displayed with an Edit button to open the Network Settings window to change communication settings if desired.

Once DriveLibrary is selected, if necessary a list will appear containing a list of the drive parameters that need to be modified in order to configure the drive for operation with DriveLibrary. Selecting *Apply* will accept the changes, and the project file will automatically be configured for compatibility with DriveLibrary. DriveLibrary will not be assigned as the Command Source until the parameter requirements are met.

If any attempt is made to change a drive parameter that is required for compatibility with DriveLibrary (such as disabling the Position Loop) the setup software will provide a notification window alerting the user that continuing with that action will cause DriveLibrary compatibility to be lost, and the Command Source will be set to No Command.

3.1.2 Command Limiter

The Command Limiter allows you to limit the change in the input command signal as seen by the drive. The resulting effect is dependent on the operating mode. This is a command *smoother*, not a drive limiter. In other words, it will change how the command is seen by the drive, but if an event occurs which is not affected by the command, the drive will react according to drive limits. To change drive limits, see the Limits window.

The Command Limiter has a corresponding drive event, *Command Limiter Active*, that will be high (active) if the Command Limiter is enabled and the command is being actively limited by the Command Limiter settings. The state of this event is dependent upon the target value only and not the measured value. The Command Limiter parameters will change automatically depending on the current Loop configuration.

Current Mode

- **Linear Ramp:** Limits the jerk, or change in commanded current.

Velocity Mode

- **Linear Ramp:** Limits the acceleration and deceleration independently for positive and negative velocities.

Position Mode

- **Accel/Decel:** Allows acceleration and deceleration limits to be set. Selecting Accel/Decel will also enable the Jerk Limiting feature.

Jerk Limiting

- The Jerk Limiting feature is available in Position modes when the Command Limiter is set to Accel/Decel.
- What is Jerk Limiting?
 - Jerk is the third derivative of position, or the rate of change of acceleration. When a command is issued, rapid changes in acceleration occur which can cause wear and tear on the system's components. Jerk limiting is needed to prevent any permanent damage from occurring.
 - Most drive operating modes have no jerk limiting protection built in. Instead, a constant acceleration is used to get from one command to the next. Supplemental jerk limiting can be attached to the Command Limiter and found when using Position around Current and Position around Velocity.
 - When using networks to command the drive (EtherCAT, CANopen, RS485, etc.) Profile Position mode will also be able to use the Jerk Limiting feature, since the Command Limiter is used for trajectory generation. For Cyclic Synchronous Position mode, jerk limiting must be provided by the master.
- How to Fix a Move
 - The velocity target is put through a low pass filter, making the velocity trajectory follow an S-Curve. The smooth S-Curve motion of the velocity means that the acceleration is no longer constant, eliminating the negative consequences from high dynamic movements.
- How to Adjust Jerk Limiting
 - The Jerk Limiting feature can be adjusted by changing a time value with units of milliseconds. This value is the time constant of the filter. A larger time constant increases the time needed to reach the velocity target, but creates smoother motion.

3.2 Loop Feedback

The Loop Feedback window allows specification of which feedback device is used for the velocity and/or position loop. Open the Loop Feedback window by selecting [*DriveName*] > *Loop Feedback* in the System Browser.

For descriptions of the feedback parameters, see “[Feedback Type](#)” on page 25.

3.2.1 Velocity Feedback Source

Analog	The velocity is derived from an analog input. Typically used in case of a motor mounted tachometer. The analog signal must be conditioned not to go outside the hardware limits of the drive (typically $\pm 10V$). Select which analog input to use, and configure the Scaling (ratio between the input voltage and the measured velocity) and Offset.
Network Interface	The velocity is provided over the communication interface. Select which interface input to use from the available inputs.
FB1 - Incremental	The velocity is derived from the motor mounted incremental encoder (Feedback 1 connector). The Polarity, Resolution, and Index selection can be defined in this window. Encoder configuration is also available in the Motor window.
FB1 - BiSS	The velocity is derived from the motor mounted BiSS C-Mode absolute encoder (Feedback 1 connector). The BiSS encoder parameters can be defined in this window or on the Motor Parameters page.
FB2 - Incremental	The velocity is derived from the motor mounted incremental encoder (Feedback 2 connector). The Polarity, Resolution, and Index selection can be defined in this window. Encoder configuration is also available in the Motor window. This selection is not available if Encoder Following is selected as the command source.
Halls	The velocity is derived from the motor mounted Hall sensors. When configured for Hall velocity mode, the drive will define 1 count to be equal to 1 hall state change (that is, a 4-pole motor has 12 counts per revolution).

For reference, see “[Filtering Velocity Feedback](#)” on page 117.

3.2.2 Position Feedback Source

Analog	The position is derived from an analog input. Typically used in case of a load-mounted potentiometer. The analog signal must be conditioned not to go outside the hardware limits of the drive (typically $\pm 10V$). Select which analog input to use, and configure the Scaling (ratio between the input voltage and the measured position) and Offset.
Network Interface	The position is provided over the communication interface. Select which interface input to use from the available inputs.
FB1 - Incremental	The position is derived from the motor mounted incremental encoder (Feedback 1 connector). The Polarity, Resolution, and Index selection can be defined in this window. Encoder configuration is also available in the Motor window.
FB1 - BiSS	The position is derived from the motor mounted BiSS C-Mode absolute encoder (Feedback 1 connector). The BiSS encoder parameters can be defined in this window or on the Motor Parameters page.
FB2 - Incremental	The position is derived from the motor mounted incremental encoder (Feedback 2 connector). The Polarity, Resolution, and Index selection can be defined in this window. Encoder configuration is also available in the Motor window. This selection is not available if the incremental encoder pins on the Feedback 2 connector are assigned to other functions.

3.3 Power-up Settings

The Power-up window (*[DriveName] > Power-up*) is used to configure certain software settings and parameters when the drive initially receives power.

Bridge Status	Selecting Software Enable will issue an Enable command upon power-up. Depending on other software settings or external hardware faults, the drive may remain disabled. Selecting Software Disable will issue a Disable command upon power-up.
Configuration Select	Select the Configuration set the software will default to upon power-up.
Phase Detect	Allows for the configuration of Phase Detect power-up settings. Under most circumstances, the appropriate setting is On First Enable Following Power-up. However, other options may be used depending on the configuration of your drive and motor.
Set Position	Selecting the Set Position checkbox will set the value of the measured position and target position to the value defined in the Preset Position field defined in the active Gain Set window.
Motion Engine	Selecting Enable will enable the Motion Engine upon power-up.

3.4 Motor Parameters

The Motor Parameters window can be accessed by going to *Motor > Parameters* in the System Browser. The motor data is stored in:

- The drive
- The project file

The Motor Parameters window is where you will input the motor ratings, motor-specific data, feedback information, and commutation information. The values entered in the Motor Parameters window will have an effect on the values entered in the Limits window.

3.4.1 Motor Selection

From within the Motor window, enter the motor information based on a default template for a selected motor type.

Motor Type	The type of motor used. Selections for rotary motors are Brushed, Brushless, Stepper, and AC Induction. Selections for linear motors are Voice Coil and Linear Brushless.
Manufacturer	The name of the motor manufacturer.
Model	The motor model.

- To enter the motor information:
 - Select the Motor Type from the *Select Motor* drop-down options.
 - Enter the information for both Manufacturer and Model (optional).
 - Begin entering data in the Motor Parameters and Feedback Type fields (see “[Motor Parameters](#)” on page 23 and “[Feedback Type](#)” on page 25 for field descriptions).
 - Once the motor and feedback information have been entered, click the *Apply* button in the toolbar. The motor information will now be saved in the project file.

Rotation Direction

The motor rotation direction can be selected independently of the motor and feedback selection. Changing the rotation direction will change the direction of the motor for a given command. Typically, the rotation direction is not determined during initial motor configuration, but is changed after commutation has been established.

3.4.2 Motor Parameters

Depending on the selected Motor Type, the information available for editing will change in the Motor Parameters field. Consult the motor datasheet to determine the appropriate values.

Brushed, Brushless, Linear Brushless, Stepper, and Voice Coil Motor Parameters

Motor Field	Description
Cont Current	The nominal (continuous) current that the motor can handle. The setup software will not allow the drive continuous current to be configured greater than this value. (Note: The specified current is in units of Adc. For sinusoidally commutated motors, this is the peak of the sine wave through any phase of the motor within one electrical cycle. To calculate the RMS current, divide the DC value by 1.414. This calculation should not be used when the motor is commutated trapezoidally.)
Peak Current	The peak operating current that the motor can handle. This does not correspond to the de-magnetizing current, which is typically much higher than the maximum operating current. The setup software will not allow the drive peak current to be configured greater than this value. (Note: The specified current is in units of Adc. For sinusoidally commutated motors, this is the peak of the sine wave through any phase of the motor within one electrical cycle. To calculate the RMS current, divide the DC value by 1.414. This calculation should not be used when the motor is commutated trapezoidally.)
Max Speed	Corresponds to the maximum rated speed of the motor. The setup software will not allow the drive positive velocity limit, negative velocity limit, or motor over speed to be configured greater than this value.
Motor Poles / Pole Pitch	(Brushless, Linear Brushless, and Stepper motors only) The number of poles, in case of rotary motors, corresponds to twice the number of electrical cycles per motor revolution. The pole pitch, in case of linear motors, corresponds to the length of one electrical cycle (360 degrees). The numerical value and units can be selected independently (the numerical value will NOT be automatically re-calculated when a different unit is selected).
Motor Resistance	In case of Brushed motors it corresponds to the armature resistance. In case of Brushless motors it corresponds to the phase-to-phase resistance.
Motor Inductance	In case of Brushed motors it corresponds to the armature inductance. In case of Brushless motors it corresponds to the phase-to-phase inductance.
Motor Ke	The voltage constant corresponds to the motor back-EMF constant. The numerical value and units can be selected independently (the numerical value will NOT be automatically re-calculated when a different unit is selected).
Motor Kt	The motor torque (Brushless) or force (Brush) constant. The numerical value and units can be selected independently (the numerical value will NOT be automatically re-calculated when a different unit is selected).
Max Motor Temp	Maximum allowable motor temperature (recommended if using an analog input for motor temperature).

AC Induction Motor Parameters

Motor Field	Description
No Load Current	The no-load (magnetizing) current as specified by the motor manufacturer.
Peak Current	The peak operating current that the motor can handle. This does not correspond to the de-magnetizing current, which is typically much higher than the maximum operating current. The setup software will not allow the drive peak current to be configured greater than this value. (Note: The specified current is in units of Adc. For sinusoidally commutated motors, this is the peak of the sine wave through any phase of the motor within one electrical cycle. To calculate the RMS current, divide the DC value by 1.414. This calculation should not be used when the motor is commutated trapezoidally.)
Max Speed	Corresponds to the maximum rated speed of the motor. The setup software will not allow the drive positive velocity limit, negative velocity limit, or motor over speed to be configured greater than this value.
Rated Speed	The rated speed as specified by the motor manufacturer.
Motor Poles	For rotary AC induction motors, the number of motor poles as specified by the motor manufacturer. For linear AC induction motors, the distance required for one electrical cycle.
Connection	Specifies the type of connection used for the motor ratings.
Base Frequency	The rated frequency for base speed as specified by the motor manufacturer.
Rated Voltage	The rated motor voltage as specified by the motor manufacturer.

Motor Field	Description
Max Motor Temp	Maximum allowable motor temperature (recommended if using an analog input for motor temperature).
Motor Power	Motor power as specified by the motor manufacturer.
Phase Parameters	Selects either Equivalent Circuit or Name Plate Parameters. The selected item will display the phase parameters associated with that item.
	Equivalent Circuit - R1: as determined by the motor's equivalent circuit model - R2: as determined by the motor's equivalent circuit model - X1: as determined by the motor's equivalent circuit model - X2: as determined by the motor's equivalent circuit model - Xm: as determined by the motor's equivalent circuit model
	Name Plate Parameters - Stator Resistance: The stator transient resistance as specified by the motor manufacturer. - Stator Transient Inductance: The stator transient inductance as specified by the motor manufacturer.
Power Factor	The power factor as specified by the motor manufacturer.
Efficiency	The motor efficiency as specified by the motor manufacturer.

3.4.3 Feedback Type

The Feedback Type area holds information about the motor feedback device. The feedback device and parameters listed will be dependent on the drive model and the firmware currently used in the drive.

- The primary feedback device will be shown along with the configurable parameters.
- For universal feedback drives, the present primary feedback device will be shown as a selection option.
 - To change the primary feedback device, choose the new type of feedback from the selections. A message will appear stating that a firmware change is required to support the selected feedback device. Click 'OK' to open the Firmware Download window to download the required firmware into the drive.
 - Once the download is complete, return to the Motor window, and the primary feedback device will reflect the firmware change.

The parameters for each type of feedback device are as follows:

Incremental Encoder Feedback Parameters

Field	Description
Commutation Polarity	Represents the polarity of the feedback device signal used for commutation. Autocommutation will determine Commutation Polarity.
Feedback Polarity	Represents which rotation direction corresponds to an increase in feedback device counts. Feedback Polarity can be used to change this rotation direction without affecting commutation.
Resolution	Represents the lines per revolution (lines/rev) for a rotary motor, or the lines per distance (lines/in or lines/mm, depending on the units selected for pole pitch) for a linear motor.
Index / Ref Marker	Indicates if there is an encoder index pulse.

Absolute Encoder (EnDat® 2.2) Feedback Parameters

For EnDat 2.2 encoders, specify the data width, then enter the resolution. Entered data width should match the encoder resolution specified on the encoder datasheet. The resolution fields are the number of bits used of the corresponding data width.

Field	Description
Multi-Turn Resolution	Enter the Multi-Turn Resolution of the EnDat 2.2 encoder.
Single-Turn Resolution	Enter the Single-Turn Resolution of the EnDat 2.2 encoder.
Commutation Polarity	Represents the polarity of the feedback device signal used for commutation. Autocommutation will determine Commutation Polarity.
Feedback Polarity	Represents which rotation direction corresponds to an increase in feedback device counts. Feedback Polarity can be used to change this rotation direction without affecting commutation.
Multi-Turn Data Width	Encoder Multi-Turn Data Width (this is the bit resolution specified by the manufacturer).
Single-Turn Data Width	Encoder Single-Turn Data Width (this is the bit resolution specified by the manufacturer).
Total Number Of Bits Used	This field displays the total number of bits used. This field cannot be changed. The total number of bits is limited to 31.
Single-Turn Reserved Bits	Specifies the number of bits within the Single-Turn data field that are reserved to be zero.
Multi-Turn Reserved Bits	Specifies the number of bits within the Multi-Turn data field that are reserved to be zero.

Absolute Encoder (BiSS C-Mode) Feedback Parameters

For BiSS C-Mode encoder parameters, it is recommended to begin with selecting the manufacturer of the BiSS encoder in use from the *Data Format* drop-down menu. Verify the parameters match the values given in the manufacturer's encoder datasheet.

Field	Description
Multi-Turn Resolution	Enter the Multi-Turn Resolution of the BiSS encoder. The graphic in the Feedback Type panel will update with the corresponding bit usage.
Single-Turn Resolution	Enter the Single-Turn Resolution of the BiSS encoder. The graphic in the Feedback Type panel will update with the corresponding bit usage.
Polarity	Represents the polarity of the BiSS encoder.
Data Format	Select from the list of BiSS C-Mode encoder manufacturers to auto-populate manufacturer-specific standard encoder parameters.
Pre-Trigger Value	Some BiSS-C encoders have a longer delay between the start of the first clock and the return of the first bit of the data frame. Changing the Pre-Trigger Value allows the drive to wait longer for the first bit of data. Known examples of encoders to require a non-zero value are Celera/Zettlex IncOrders. It is recommended for all other encoders to use a value of zero.

BiSS C-Mode Advanced Fields

By default, the *Advanced* fields are hidden from view as they should not be edited when using a standard manufacturer template. To view these fields, select the *Advanced* check box in the Feedback Type panel. Note that the values entered are subject to the following requirements:

- The sum of the Single- and Multi-Turn Data Widths cannot exceed 64.
- The Single-Turn Resolution cannot be greater than the Single-Turn Data Width.

- The Multi-Turn Resolution cannot be greater than the Multi-Turn Data Width.
- The Single-Turn Resolution cannot be greater than 31.
- The sum of the Single- and Multi-Turn Resolutions cannot exceed 31.
- The recommended selection for Encoder Clock Frequency is 5MHz.
- The Single-Turn Reserved Bits value specifies the number of bits within the Single-Turn data field that are reserved to be zero. The value must not exceed 8.

The Multi-Turn Reserved Bits value specifies the number of bits within the Multi-Turn data field that are reserved to be zero. The value must not exceed 8.

Tamagawa/Nikon Envoder Feedback Parameters

For Tamagawa encoders, specify the data width, then enter the resolution. Entered data width should match the encoder resolution specified on the encoder datasheet. The resolution fields are the number of bits used of the corresponding data width.

Field	Description
Multi-Turn Resolution	Enter the Multi-Turn Resolution of the Tamagawa/Nikon encoder.
Single-Turn Resolution	Enter the Single-Turn Resolution of the Tamagawa/Nikon Encoder.
Multi-Turn Data Width	Encoder Multi-Turn Data (this is the bit resolution specified by the manufacturer).
Single-Turn Data Width	Encoder Single-Turn Data Width (this is the bit resolution specified by the manufacturer).
Total Number of Bits Used	This field displays the total number of bits used. This field cannot be changed. The total number of bits is limited to 31.

Note that values entered are subject to the following requirements:

- The Single-Turn Resolution cannot be greater than the Single-Turn Data Width.
- The Multi-Turn Resolution cannot be greater than the Multi-Turn Data Width.
- The sum of the Single-Turn and Multi-Turn Resolutions cannot exceed 31.

Unknown Single-Turn Resolution:

If the single-turn Data Width of the encoder is unknown, set the Single-Turn Resolution to the same value as the Single-Turn Data Width. Then, turn the motor one revolution while monitoring the position measured. The number of counts will correspond with the actual Single-Turn Data Width. E.G., If setting a value of 15-bits in each field and measuring 131,072 counts per revolution, the encoders single-turn Data Width is 17-bits.

3.4.4 Commutation

The commutation section allows configuration of basic commutation settings. The available settings will depend on the type of motor and feedback in use:

Field	Description
Commutation Sensors (Halls)	Indicates that commutation sensors are to be used.
Commutation Angle	Selects the Hall phasing angle. Note that the Hall phasing angle will be automatically selected after running AutoCommutation. If the Hall sensor phasing differs from 60° or 120° by more than 10 electrical degrees, "Other" will be automatically selected.
Trapezoidal / Sinusoidal	Selects between Trapezoidal or Sinusoidal commutation. Trapezoidal is disabled for Resolver and Absolute Encoder feedback, and is only enabled for other types of feedback if Commutation Sensors is checked and a valid Commutation Angle of 60° or 120° is selected.
Reset Commutation	Reset Commutation is used primarily for systems unable to complete AutoCommutation that need commutation angles set to known good angles. - If the existing commutation setting is 120°, Reset Commutation will reset the commutation angles to the drive default angles for 120° phasing. - If the existing commutation setting is 60°, Reset Commutation will reset the commutation angles to the drive default angles for 60° phasing. - If the existing commutation setting is "Other", Reset Commutation will change the commutation angle to 120° and reset the commutation angles to the drive default angles for 120° phasing.
External Commutation Between Phases	Selects the two phases the drive will output current to when using a brush type motor.

3.4.5 Braking

The *Brake* checkbox allows a brake to be assigned with an event action. The brake can be assigned to a digital output in the Inputs/Outputs window. Checking or unchecking the *Brake* checkbox may result in certain event actions changing. Look in the Advanced Events window to view the assignments. The following event actions will be affected:

- When "Brake" is checked, events configured for "Disable Bridge" or "Dynamic Brake" will be changed to "Apply Brake and Disable Bridge" or "Apply Brake and Dynamic Brake", respectively.
- When "Brake" is unchecked, events configured for "Apply Brake and Disable Bridge" or "Apply Brake and Dynamic Brake" will be changed to "Disable Bridge" or "Dynamic Brake", respectively.

In addition, the brake output can be configured to use delays between external braking and enabling/disabling the drive. This delay is designed to prevent loads from falling or coasting when the effects of gravity or other external forces are seen in the system.

Field	Description
Brake Applied Delay	Delay after applying external brake before disabling power bridge or performing dynamic braking.
Brake Released Delay	Delay before releasing external brake after enabling power bridge or discontinuing dynamic braking.

3.4.6 Motor Database

The Motor Database allows motor information to be saved and stored in a database for convenient access. Motor information can be saved directly from the *Motor Parameters* window, or imported via an .XML file. Motor information from the database can also be exported as an .XML file. Importing and exporting of motor information is accomplished in the Tools > Manage Motor Database Menu Bar window.

- To save motor information:
 - Enter the motor information into the *Motor Parameters* window.
 - Click the *Save* button in the Motor Database pane.
 - The motor information is now stored in the User Database section in the Motor Database.
 - The Motor Database is saved in the default installation folder where the "My Projects" folder is located.
- To select and load previously saved motor information:
 - Click the *Select* button in the Motor Database pane.
 - In the *Motor Database Selection* window that opens, expand the heading of the User Database category.
 - Motors are organized in the following structure: [Database Name] > [Manufacturer] > [Model]. Locate the desired motor, and click *Select* at the bottom of the *Motor Database Selection* window.
 - The desired motor information will auto-populate into the *Motor Parameters* fields.
- To edit previously saved motor information:
 - Load the desired motor information as described above.
 - Modify fields in the *Motor Parameters* window. Do not change the *Manufacturer* or *Model* fields. Changing these will save the information as a separate motor in the database.
 - Click the *Save* button in the Motor Database pane.
 - The motor information in the database will be updated with the new changes.

Manage Motor Database The *Manage Motor Database* window is used to import, export, and delete motor information from the Motor Database. Motor information is imported or exported in .XML file format.

Contact the setup software manufacturer for assistance in creating an .XML file that is compatible with the Motor Database.

Import

Allows an .XML file that contains motor parameters for one or more motors to be imported into the Motor Database. Click *Import*, then navigate to the .XML file in the window that opens. The imported information will then be saved in the User Database section of the Motor Database.

Export

Creates an .XML file that contains motor parameters from the Motor Database. Check the box for the desired motor from the available options, and then click *Export* to choose the save

location of the .XML file. Note that information for multiple motors can be exported into the same .XML file.

Delete

Deletes one or more motor database entries. Check the box(es) for the motor entry to be removed from the database, then click *Delete*. Click *OK* in the warning prompt to delete the motor entry.

3.5 AutoCommutation

The AutoCommutation routine detects the motor feedback type and polarity, and then configures the drive commutation parameters appropriately.

Before running AutoCommutation:

- Enter in the correct motor information in the Motor Parameters window.
- Specify the correct feedback information.
- Specify limits to protect the motor.
- Tune the current loop.
- De-couple the motor from any load and secure the motor. Sudden motion will occur!

If you have not done the preceding, see the corresponding sections in this manual.

See [“AutoCommutation™” on page 61](#) for information on how to run the AutoCommutation routine.

3.6 Encoder Output

Certain drive models that support a 1Vp-p Sin/Cos encoder or Absolute encoder feature either a Buffered Encoder Output or an Emulated Encoder Output that emit a 5V square wave that can be used to synchronize the command to other axes or to close the position loop. The buffered encoder output has a 1:1 input-to-output ratio, while the emulated encoder input-to-output ratio is configurable.

The Divide Amount field sets a value by which the interpolated encoder resolution is divided to get the emulated encoder output resolution (counts/rev). The Emulated Index Position field allows you to specify an absolute position for the output index relative to the emulated output counts. Additionally, you may select to have this index repeat for every specified number of output counts in the Emulated Index Period field. The index period is specified as the number of emulated counts between emulated indices. The index period must be zero, or divisible by 4. If zero is used, the effective period will be 2^{32} emulated counts.

For Sin/Cos feedback, the emulated output will be re-initialized each time the absolute position of the drive is initialized (i.e. via homing, Set Position, etc.). Until the drive position is initialized, no emulated index will be output by the drive.

For certain drive models that support resolver feedback, the emulated output will match the resolver resolution setting. For example, selecting Low Resolution (12-bit) will give an equivalent 2^{12} (4096) counts/rev at the output. There will be a small phase lag between the sinusoidal feedback to the drive and the emulated output due to the time required to process the emulated signal.

3.7 Inputs / Outputs

Inputs / Outputs allows configuration and diagnostics of all digital and analog programmable inputs and outputs.

The following tabs are available:

- Analog Inputs
- Analog Outputs
- Digital Inputs
- Digital Outputs

3.7.1 Analog Inputs


Each programmable analog input can be assigned a certain drive function through the Command, Feedback, or Limits windows. When a function is assigned to an analog input, the Analog Inputs window will display the assignment, the configuration settings, and the currently measured value. Analog Inputs cannot be assigned to a function in the the Analog Inputs window.

Check the drive datasheet to find the number of available analog inputs.

Each assigned input can be scaled, according to the selected function, to provide an optimal range by entering a value in the "Scale" column. Entering the numerical value of the chosen function for a 1V input signal performs the scaling. An offset (in volts) can also be defined.

A programmable deadband can be configured for analog inputs assigned to the command source. The deadband sets a voltage range which will have no effect on the command. This is particularly useful when the analog command source is configured to control velocity.

The drive handles anything within the deadband range as zero, and subtracts the deadband value from all other values. For example, with a deadband setting of ± 100 mV, the drive ignores any signal between -100 mV and +100 mV.

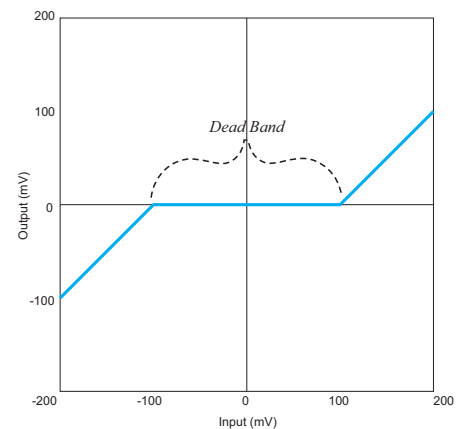

Note

Selections become effective after clicking the Apply button.

3.7.2 Analog Outputs

Each programmable analog output can be assigned to a certain drive variable.

Each output can also be scaled, according to the selected variable, to provide an optimal range. Entering the numerical value of the chosen variable for a 1V output signal performs the scaling. An offset (in volts) can also be defined.



Note

Selections become effective after clicking the Apply button.

Check the drive data sheet to find the number of available analog outputs. A list of available output signals and their definitions can be found in [“Signal Definitions” on page 95](#).

3.7.3 Digital Inputs

To assign a function to a digital input, drag-and-drop one or more functions from the *Input Functions* field to the desired digital input in the *Input Assignments* field. High Speed Capture functions may only be assigned to High Speed (HS) digital inputs, while other functions may be assigned to either General Purpose (GP) or High Speed digital inputs. The [Capture Panel](#) allows configuration of High Speed Capture functions once they have been assigned to a High Speed input.

The present status of each input is displayed by the LED graphic beside each digital input number (clear = Not Active, green = Active). The Active column displays the input polarity. Active Low means the input must be pulled-down for the input to be considered ON. Set the input polarity by selecting either the *Active Low* or *Active High* button at the bottom of the window. Each input can be assigned to one or more functions. If more than one function is assigned to a single input, the following priority rules apply (from highest to lowest):

1. Inhibit
2. Dynamic brake
3. Positive or negative limit
4. Phase Detection

The User Disable, User Aux Disable, and the Motor Over Temperature functions depend on the selected Action in the Events windows.

Functions can be removed from a digital input by highlighting the selected function, then hitting Delete on the keyboard, or the  button in the Digital Inputs window.



Note

Selections become effective after clicking the Apply button.

Capture Panel

Captured Signal	This field shows the selected signal to be captured.
Captured Value	This shows the last value captured by the drive.
Trigger Edge	You may select between Rising, Falling, or Both to set when the signal will be captured.
Trigger Mode	Single mode will allow the signal to be captured only once per set/reset. Continuous will allow the signal to be captured any time it is triggered while capture is set.
Set / Reset Input	Displays the Digital Input assigned to reset the capture signal.

Digital Input Definitions


User Disable	(Level Sensitive) Disables the drive. User Disable can be set to either Disable Power Bridge or Dynamic Brake in the Advanced Events window. The default configuration assigns Disable Bridge to this function.
Use Aux Disable	(Level Sensitive) Disables the drive. User Aux Disable can be set to either Disable Power Bridge or Dynamic Brake in the Advanced Events window. The default configuration assigns Dynamic Brake to this function.
User Stop	(Level Sensitive) Activates the User Stop event. When User Stop is active, the drive will issue a Stop command to halt motor motion.
User Positive Limit	(Level Sensitive) Activates the User Positive Limit event. User Positive Limit can be set to either Positive Stop or Disable Positive Direction in the Events window to cease motor motion in the positive direction. The default configuration assigns Positive Stop to this function.
User Negative Limit	(Level Sensitive) Activates the User Negative Limit event. User Negative Limit can be set to either Negative Stop or Disable Negative Direction in the Events window to cease motor motion in the negative direction. The default configuration assigns Negative Stop to this function.
Motor Over Temp	(Level Sensitive) Activates the Motor Over Temperature event. Motor Over Temperature can be assigned to a number of different setup software safety actions to prevent the motor from over-heating. The default configuration assigns Bridge Disable to this function.
Phase Detect	(Edge Sensitive) Activates the Phase Detect routine. Phase Detect is a function used to initialize the correct commutation angle for brushless motors lacking commutation sensors. The drive can be configured to run Phase Detect automatically on power-up in the Power-up window.
Zero Position Error	(Edge Sensitive) When triggered, a pulse command is sent to the position target, setting it equal to the measured position. Note: if the position command source is an absolute source such as an analog input, the target position will immediately be overwritten by the command source with the next position loop update.

Set Position	(Edge Sensitive) When triggered, a pulse command is sent to both the position measured and position target, setting both equal to the value defined in the "Preset Position" field within the position gain set. Note: if the command source and/or position feedback device is an absolute device such as an analog input, the target position and/or measured position will immediately be overwritten with the next position loop update.
Home Execute	(Edge Sensitive) Enables and initiates the selected Home routine. Note: If the Motion Engine is not enabled, this input must remain active until the homing procedure is completed.
Home Switch	(Edge Sensitive) Acts as a Home Switch when a compatible homing routing is selected.
Reset Events	(Edge Sensitive) When triggered, latching and history status events are reset. Note: Certain critical events cannot be reset via the digital input, and instead require a drive reset or network commands to reset. These events are: Drive Internal Error, Current Overshoot, Parameter Store Error, and Parameter Restore Error, Phase Detection Failure, Software Disable.
Configuration Select	(Edge Sensitive) Changes the active configuration when two configurations are used. Falling Edge = Configuration 0. Rising Edge = Configuration 1.
Gain Select	(Edge Sensitive) Changes the active gain set when two gain sets are used. Falling Edge = Configuration 0. Rising Edge = Configuration 1.
Motion Execute	(Edge Sensitive) When triggered, the selected Index or Sequence will initiate (depending on whether the drive is in Indexer or Sequencer mode). Note: the motion engine must be enabled before the drive will respond to this function.
Motion Select 0,1,2,3	(Level Sensitive) Defines the selected Index or Sequence (depending on whether the drive is in Indexer or Sequencer mode). Represents a binary number allowing up to 16 Indexes or Sequences to be independently selected. Motion Select 0 represents the least significant bit with Motion Select 3 representing the most significant bit. Active = 1. Inactive = 0. The Motion Engine must be enabled before motion can be executed.
Motion Enable	(Edge Sensitive) Enables the Motion Engine. The Motion Engine must be enabled before Indexes or Sequences can be executed.
Motion Mode	(Edge Sensitive) Toggles the drive between Indexer or Sequencer mode. Active = Sequencer; Inactive = Indexer.
Motion Reset	(Edge Sensitive) Resets the Motion Engine when a Motion Engine fault has occurred.
Jog Select 0, 1	(Level Sensitive) Defines the selected jog velocity when jogs are used. Represents a binary number allowing up to 4 jogs to be independently selected. Jog Select 0 represents the least significant bit with Jog Select 1 representing the most significant bit. Active = 1. Inactive = 0. The Motion Engine must be disabled before jogging can be executed.
Jog Forward	(Edge Sensitive) Activates the selected Jog speed in the forward direction. The Motion Engine must be disabled before jogging can be executed.
Jog Reverse	(Edge Sensitive) Activates the selected current Jog speed in the reverse direction. The Motion Engine must be disabled before jogging can be executed.

3.7.4 Digital Outputs

To assign a function to a digital output, drag-and-drop one or more functions from the *Output Functions* field to the desired digital output in the *Output Assignments* field.

The present status of each output is displayed by the LED graphic beside each digital output number (clear = Not Active, green = Active). The Active column displays the output polarity. Active High means the output is pulled-down if the output is considered OFF. Set the output polarity by selecting either the *Active Low* or *Active High* button at the bottom of the window.

Each output can be assigned one or more functions. If more than one function is assigned to a single output, the functions are OR-ed, which means that if one of the functions is true, the output will be turned ON. Functions can be removed from a digital output by highlighting the selected function, then hitting Delete on the keyboard, or the  button in the Digital Outputs window.



Note

Selections become effective after clicking the Apply button.

3.7.5 Extended I/O

Certain drive models allow the allocation of additional external digital and analog I/O beyond the standard number of I/O pins available on the drive hardware. The I/O Allocations pane in the Inputs / Outputs > Extended I/O window determines the number of drive I/O that will be assigned for external I/O expansion. Selecting a value in the drop-down combo boxes will automatically assign pre-determined drive I/O for expansion purposes, and the appropriate I/O will appear labeled as such in the Digital I/O windows. Attempting to assign a drive action or event to I/O that is allocated for external I/O expansion will bring up a dialog box warning of the I/O resource conflict. For more information on expanded I/O capabilities, please contact technical support.

3.7.6 Programmable Limit Switch

The setup software is configurable to support two independent programmable limit switch (PLS) outputs. These allow the drive to activate digital outputs that are position dependent. The pulse time and repeatability are configurable. The following requirements must be met before the PLS outputs can be used:

- A free digital output must be available to be assigned to the PLS function.
- A compatible position loop feedback device must be configured and connected. The position loop does not need to be closed.
- An absolute position must be defined. If using an incremental encoder to close the position loop, an absolute position can be set using Homing or the Set Position function.

It is recommended to use the setup software to configure the PLS function. It is also possible to configure using direct network commands. For more information on PLS configuration using

network commands, refer to the appropriate communication manual for the supported network type.

Programmable Limit Switch Parameters

Field	Description
Source	Allows selection of either Position Demand or Position Measured as the input signal to the PLS outputs.
Rollover	Selecting the Rollover checkbox will place the PLS outputs in Rotary Mode, and allow the configuration of a <i>Rollover Count</i> value (in user units) that specifies the position value at which the PLS position counter will return to zero. In Rotary Mode, the following requirement must be met: $0 < \text{Lower Edge} < \text{Upper Edge} < \text{Rollover Count}$
Level	Specifies the active polarity of the digital output(s) mapped to the PLS
Direction	Specifies the direction of motion that will trigger the PLS function (rising edge sensitive). Selecting <i>Bidirectional</i> will trigger the PLS in both rising edge <i>Forward</i> and rising edge <i>Reverse</i> directions.
Type	Sets the width of the PLS pulse to be either Position or Time based. When configured for Position, the pulse width is defined by the position values entered in the <i>Lower Edge</i> and <i>Upper Edge</i> fields. When configured for Time, the pulse width is defined by the time value entered in the <i>Pulse Time</i> field. For a single trigger that occurs at the same location regardless of direction, set the <i>Lower Edge</i> and <i>Upper Edge</i> fields to the same value. For different trigger locations depending on direction, set the <i>Lower Edge</i> to be the trigger position for the forward direction, and the <i>Upper Edge</i> to be the trigger for the reverse direction.
Lower Edge	Starting location for the PLS pulse (position user units).
Upper Edge	Ending location for the PLS pulse when position based, or a separate directional pulse when time based (position user units)
Pulse Time	Sets a fixed time width of the PLS pulse when time based.
Repeats	Sets the number of pulses to be repeated. Selecting the <i>Infinite</i> checkbox will cause the PLS pulse to continue repeating until the <i>Rollover Count</i> is reached (in Rotary Mode) or the maximum allowable position value is reached (in Linear Mode).
Repeat Delta	Sets the distance between repeated pulses (position user units). Note that when specifying a repeat pattern, the following requirement must be met: $(\text{Lower Edge} + \text{Repeat Delta}) > \text{Upper Edge}$



Note

The parameters for PLS1 and PLS2 will become active when the *Source* signal has been chosen and the *Enable* checkbox for the respective PLS output has been selected.

3.8 Limits

Limits allows configuration of general drive parameters.

The following selections are available regardless of which loops are enabled:

- Current
- Velocity
- Position
- Stop
- Voltage
- Temperature

3.8.1 Current Limits

Use this window to set the drive output current limits within the hardware capabilities of the drive.



Note

The specified current is in units of peak current. This is the peak value allowed to go through any phase of the motor within one electrical cycle. To calculate the RMS current, divide the peak value by 1.414. This calculation should not be used when the motor is commutated trapezoidally. For an in-depth explanation of how the drive limits current, see ["Current Limiting" on page 101](#).

Peak Current	Maximum output current (limited output time).
Peak Current Time	The maximum time duration of peak current.
Continuous Current	The maximum continuous current level the drive will output.
Foldback Time	The time the drive will use to reduce the current to the continuous current level setting.
Current Limiting Algorithm	Selects between Time-Based Limiting or RMS Charge-Based Limiting (for supported drive models only). RMS Charge-Based Limiting will allow the drive to output more continuous current during motor movement. See "Current Limiting Algorithm" on page 105 for detailed information on current limiting.
Current Limit Scaling Source	You may assign an input to change the current limit dynamically. The scaling value can be adjusted in the I/O Configuration window (see "Inputs / Outputs" on page 33).

The drive can output its rated peak current for a maximum of 2 seconds with a foldback time within 10 seconds. This defines the maximum current capability curve. Current profiles that intersect with the maximum current capability curve will be limited to stay within this envelope.

3.8.2 Velocity Limits

The following velocity-related limits can be set:

Motor Over Speed	The maximum speed in which the motor should be able to go. The action following a motor overspeed event can be defined in Event Manager (active in all operating modes).
Zero Velocity Window	The measured velocity values, within which the motor is considered to be at zero velocity (active in all operating modes).
At Velocity Window	The "At Velocity" event will be set when the measured velocity reaches the target velocity, within the "At Velocity" window (active in velocity mode only).
Velocity Following Error	The maximum allowed velocity error (difference between target velocity and measured velocity), prior to setting the "Velocity Following Error" event (active in velocity mode only).
Positive Velocity Limit	The maximum allowed demand velocity in the positive direction (active only when the velocity loop is closed).
Negative Velocity Limit	The maximum allowed demand velocity in the negative direction (active only when the velocity loop is closed).

3.8.3 Position Limits

The following position-related limits can be set:

In-Home Position Window	Defines a window around the Home Position Value, such that when the measured position is within this window, the In Home Position event will be active.
In-Position Window	Defines a window around the target position, such that when the measured position is within this window, the At Command event will be active.
Position Following Error Window	The maximum allowed position error (difference between target position and measured position) prior to setting the "Position Following Error" event (active in position mode only).
Max Measured Position Limit	Maximum allowed measured position. The Max Measured Position event will become active if the measured position exceeds this value.
Min Measured Position Limit	Minimum allowed measured position. The Min Measured Position event will become active if the measured position exceeds this value.
Max Target Position Limit	Maximum allowed target position. The Max Target Position event will become active if the target position exceeds this value.
Min Target Position Limit	Minimum allowed target position. The Min Target Position event will become active if the target position exceeds this value.
Disable Position Limits Checkbox	Allows you to disable position limits so the motor has no maximum or minimum position value.

Note that position limits will be ignored during homing routines. This setting can be changed via network commands.

3.8.4 Stop

The Stop window configures software deceleration behavior. This field controls the deceleration limit for all stop actions and direction stops. If the drive is controlling velocity or position, the load decelerates according to the user-defined deceleration limit. If the drive is controlling current, the drive will command zero current with no deceleration control.

Events that trigger the Stop function can be configured in ["Events" on page 44](#). Be sure to use deceleration values that are realistic and physically possible given the system constraints. For example, the more inertia a motor has, the longer it will take to stop. If you try to use limits that are not physically possible, the motor may move unpredictably during the deceleration period.

3.8.5 Voltage Limits

Use this window to set the User Under- and Over-Voltage limits. These limits are restricted to fall within the hardware capability of the drive. The Nominal DC Bus Voltage should contain the normal operating DC voltage supplied to the drive. If using an AC input drive, the Nominal DC Bus voltage is equal to the AC voltage multiplied by 1.41.

Shunt regulator operation

The shunt regulator (if available, depending on drive model) can be enabled/disabled and its turn-on voltage can be set at any given voltage below the hardware over-voltage limit of the drive. The internal shunt resistor parameters, if present, are displayed.

If the drive has provision for connection of an external shunt resistor, the parameters for that resistor can be entered. If that provision is not available, these fields will not be available. Check the data sheet for your drive to see if an external shunt resistor can be connected.

The shunt regulator method is used to dissipate excess energy during periods of rapid deceleration. In most cases, this energy can be consumed in a matter of milliseconds. If a longer regeneration time is needed, the drive will limit the output to the resistor according to the following information.

- Measured Bus Voltage
- Shunt resistor Power
- Shunt resistor Resistance
- Shunt resistor Inductance (if unknown, use zero)



Note

If the stated resistor power or resistance is incorrect, the drive cannot reliably regulate the power dissipated.



Caution

There is a limit to the amount of current the drive can output to the shunt without damaging the circuitry. The resistance of the external resistor should be large enough to handle this current. Follow the table below to determine the absolute minimum resistance that the shunt circuitry can handle.

Drive Power Module	Minimum Shunt Resistance (Ohms)
015A400	N/A
030A400	20
060A400	10
100A400	10
030A800	Consult Factory
060A800	40
C060A400	20
C100A400	25

External shunt resistor power selection

During a regenerative event, the shunt output will initially turn on for 10ms, and the entire bus voltage is placed across the shunt resistor to allow the excess bus voltage to fall below the shunt enable threshold during normal regeneration.



Caution

This initial turn-on is independent of the shunt resistor information entered; therefore the power dissipated through your shunt resistor may exceed the rated power during the first 10ms. If using an external shunt resistor, be sure the resistor can handle this 10ms pulse.

After this initial pulse, if the bus voltage is still higher than the shunt turn on voltage, the shunt output will turn on and off rapidly in order to regulate the power dissipated. For both external and dual shunt modes, the on time and period are adjusted such that the shunt is on for approximately 3 time constants while maintaining the same duty cycle. The highest duty cycle attainable is 50%. The drive sets the on-time PWM output to a duty cycle such that:

$$\frac{V_{bus}^2}{R} \times DC = P_{max}$$

V_{bus} = measured bus voltage (Vdc)

R = shunt resistance (ohms) - specified in setup software for external shunt

P_{max} = maximum shunt power (W) - specified in setup software for external shunt

DC = PWM duty cycle

The period of the PWM output is set as $[V_{bus}^2 / (R * P_{max})] * T_{on}$, with $T_{on} = 2 / F_s$, where F_s is the switching frequency of the drive (Hz). The average current going through the shunt resistor will be less than or equal to $V_{bus} / 2R$. The average power through the shunt resistor during this time will be less than or equal to $(V_{bus})^2 / 4R$.

3.8.6 Temperature Limits

The Temperature Limits tab allows configuration of an external temperature sensor. Configuration options are dependent upon the specific drive hardware. Certain drives accept an external temperature sensor in the form of either a switch or a thermistor. Use the "Sensor Type" pull down list to select the type of sensor in use.

Switch

For applications using a switch as an external temperature sensor, select whether the Motor Over Temperature event will occur when the switch is open or closed.

Thermistor

For applications using a thermistor as an external temperature sensor, input the resistance value when Motor Over Temperature will activate, and at what resistance Motor Over Temperature will become inactive. Acceptable input values range from 0 to 5000 Ω . Both negative thermal coefficient (NTC) and positive thermal coefficient (PTC) thermistors are supported. The setup software will automatically determine the thermistor type based on the values entered in the *Event Action* fields.

If the *Event Action Active Level* is greater than or equal to the *Event Action Inactive Level*, then:

- The Motor Over Temperature event will turn on when the resistance becomes **higher** than the *Event Action Active Level*.
- The Motor Over Temperature event will turn off when the resistance becomes **lower** than the *Event Action Inactive Level*.

If the *Event Action Active Level* is set less than the *Event Action Inactive Level*, then:


- The Motor Over Temperature event will turn on when the resistance becomes **lower** than the *Event Action Active Level*.
- The Motor Over Temperature event will turn off when the resistance becomes **higher** than the *Event Action Inactive Level*.

Other drives are capable of accepting an analog temperature sensor that can be connected to an analog input of the drive. You can configure a maximum allowable motor temperature at which point the drive will be disabled. The motor temperature level at which the drive can be re-enabled can also be configured. For a digital temperature sensor, see the digital inputs section of ["Inputs / Outputs" on page 33](#).

3.9 Events

The Basic and Advanced Events windows let you configure or review actions associated with certain drive events. For a full list of drive events and recommended troubleshooting methods, see “[Events and I/O Descriptions and Troubleshooting Methods](#)” on page 121.

The diagrams below illustrate the behavior of an event and the corresponding event action.

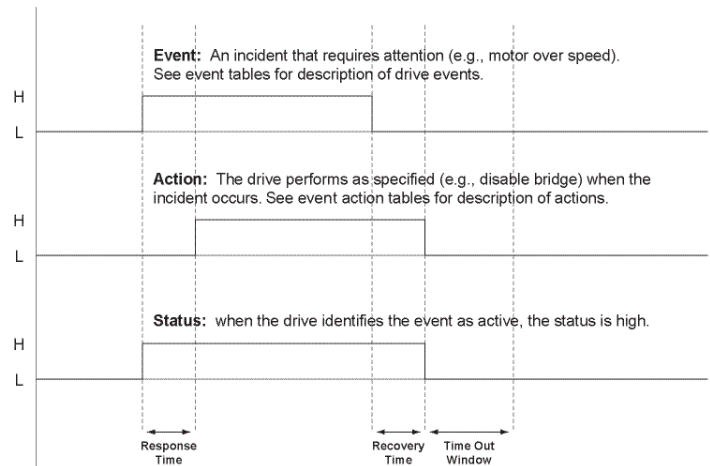

The Event Actions that can be assigned to drive events are as follows (note that not all event actions are available for each event):

Event Action	Description
No Action	Event Action is disabled
Disable Power Bridge	No power is delivered to the motor. Motor is allowed to move freely.
Disable Positive Direction	Disables the drive from outputting to the motor in the positive direction, while allowing commanded motion in the negative direction. The result is dependent on the mode of operation. This action is not recommended in vertical applications because the load will be free to fall once the limit is activated. For vertical loads, we recommend using 'Positive Stop'.
Disable Negative Direction	Disables the drive from outputting to the motor in the negative direction, while allowing commanded motion in the positive direction. The result is dependent on the mode of operation.
Dynamic Brake	Motor leads are virtually shorted together internally. However, the bridge enables to protect motor by regulating motor current.
Positive Stop	If the drive is controlling velocity or position, the load decelerates according to the deceleration limit specified in the Stop Limits window. If the drive is controlling current, the drive will command zero current with no deceleration control. Commanded motion in the positive direction has no affect. Motor continues to servo with zero command in the positive direction.
Negative Stop	If the drive is controlling velocity or position, the load decelerates according to the deceleration limit specified in the Stop Limits window. If the drive is controlling current, the drive will command zero current with no deceleration control. Commanded motion in the in the negative direction has no affect. Motor continues to servo with zero command in the negative direction.
Stop	If the drive is controlling velocity or position, the load decelerates according to the deceleration limit specified in the Stop Limits window. Commanded motion has no affect. Motor continues to servo with zero command.
Apply Brake then Disable Bridge	Brake output is turned on, and then the bridge is disabled. The delay is set in the Braking window.
Apply Brake then Dynamic Brake	Brake output is turned on, and then the dynamic brake is applied. The delay is set in the Braking window.

3.9.1 Basic Events

The Basic Events window allows for simple configuration of some common drive events. Select an Event Action from the drop-down lists for each drive event.

- **Latch:** If the latch box is checked, the selected Event Action will remain active until the event is removed or you perform one of these actions:
 - Cycle power to the drive
 - Refresh the Drive Status

3.9.2 Advanced Events

The Advanced Events window allows in-depth customization of the way the drive responds to certain drive events. Events under Advanced Settings can correspond to one of the following groups.

Group	Description
Fault	Critical events that result in the drive being disabled.
User Action	Event actions that are activated via a digital input or other external interface.
Software Action	Event actions that are a result of an internal event.
Motor	Events directly related to the motor.
Feedback	Events directly related to the motor feedback signals.
Command	Events related to the command source or command signal.
Current	Events related to the current output as measured by or limited by the drive.
Velocity	Events related to the velocity as measured by or limited by the drive.
Position	Events related to the position as measured by or limited by the drive.
Shunt	Applicable to drives that support a shunt regulator only. Event indicates when the shunt regulator is active.

Each event has several programmable attributes that can be edited by clicking on an event row:

- **Delay:** The time delay between the actual occurrence of the event and the event action.
- **Action:** The action to be taken by the drive after the response time has elapsed. For safety reasons some actions are not available with some events.
- **Recovery:** The time after which the selected event action will be removed when the cause of the event is no longer present.
- **No Repeat:** The time, after the recovery time and subsequent removal of the event action, during which the drive will NOT consider an occurrence of the event as a new occurrence. The Event Action will still be applied in case an event does occur within this window. However, that occurrence will not be counted as a new occurrence with regard to the Maximum Recoveries attribute.
- **Recoveries:** The number of occurrences of the event prior to a permanent event action. The number of recoveries can be set to a specific value, or to Latch or Unlimited.

3.10 Network Settings

The *Network > Settings* window allows configuration of network communication settings. Note that the settings entered in the Network Settings window are not necessarily the same as the connection settings used to connect to the drive. Network Settings fields may only be changed when connected over USB. The window display is specific to the type of network the drive hardware is compatible with (note the type of Ethernet protocol is selected in the *[Drive Name] > Settings* window in the System Browser).

Network Type	Configurable Settings	Description
CANopen	Address	Sets the CANopen Node ID (1 - 127)
	Baud Rate	Selects the CAN bus speed (kbit/s).
	Initial Mode of Operation (6060)	Specifies the mode of operation (6060) initial value. This is the initial mode after a communication reset or power cycle. The mode changes will be applied upon drive reset.
	Cyclic Mode Period	Defines the cyclic interpolation cycle time (ms). Value should be equal to the target update rate sent by the host in cyclic position, velocity, or torque mode.
	Guard Time	Guard Time and Life Time Factor (both in ms) determine a "Lifetime" for each NMT slave in the network (Lifetime = Guard Time x Life Time Factor). If a node does not receive a Node Guard message within its Lifetime, the node assumes communication with the host is lost and triggers a communication error event. Each node may have a different Lifetime.
	Life Time Factor	
RS485/232	Drive Address	Sets the RS485 drive address (1 - 63)
	Baud Rate	Selects the RS485 communication baud rate (kbit/s).
	Serial Type	Selects the interface type for serial communication. Depending on the drive model, additional configuration via DIP Switches on the drive/mounting card may be required.
EtherCAT	Station Alias	Sets the Station Alias of the drive (0 - 256)
	Initial Mode of Operation (6060)	Specifies the mode of operation (6060) initial value. This is the initial mode after a communication reset or power cycle. The mode changes will be applied upon drive reset.
	Cyclic Mode Period	Defines the cyclic interpolation cycle time (ms). Value should be equal to the target update rate sent by the host in cyclic position, velocity, or torque mode.
Ethernet/IP	Node ID	Sets the Node ID (1 - 255)
	User Defined IP	Allows entry of a user defined IP address by selecting the checkbox.
	Initial Mode of Operation (6060)	Specifies the mode of operation (6060) initial value. This is the initial mode after a communication reset or power cycle. The mode changes will be applied upon drive reset.
	Cyclic Mode Period	Defines the cyclic interpolation cycle time (ms). Value should be equal to the target update rate sent by the host in cyclic position, velocity, or torque mode.

Drive Operation Mode On certain drives, the *Drive Operation* options in the *[Drive Name] > Settings* window are available to configure the drive for Network Mode or Stand-Alone Mode.

- *Network Mode* should be used when the drive will be controlled over the network, and will restrict the drive to use the state machine defined by the network. This means a network command is required to transition the drive out of the fault state before the bridge can be enabled.
- *Stand-Alone Mode* should be used when the drive will not be connected to a network. Stand-Alone Mode allows the drive to automatically recover from disabling events such as User Disable when the event is no longer active.

3.11 PDO Configuration

The PDO Configuration windows are available for drives that support the CANopen communication protocol and are opened by selecting the appropriate option under the *Network* heading in the System Browser.

The PDO Configuration windows allow the configuration of PDO mapping assignments, and the option of exporting the project file as a .DCF (CANopen drives) file by clicking the *Export DCF* button.

3.11.1 RPDOs - CAN Drive

The CAN drive RPDO mappings are pre-configured and cannot be changed in the setup software. However, each RPDO can be manually enabled or disabled in one of two ways:

- Click on the *Load Preset* button to select a pre-determined RPDO configuration.
- Select the desired RPDO in the *Object Assignments* box, then check or uncheck the *PDO Enabled* checkbox.

The *PDO Settings* box allows further RPDO configuration:




Setting	Description
COB-ID	Enter the COB-ID for the selected RPDO (181h - 57fh)
Transmission Type	Set the transmission type for the selected RPDO

3.11.2 TPDOs - CAN Drive

The CAN drive TPDO configuration and settings controls function in the same way as the RPDOs (“RPDOs - CAN Drive” on page 47) with the addition of RTR and period configuration.

Setting	Description
RTR Allowed	Allow or disallow RTR (Remote Transmission Request) access for the selected TPDO
COB-ID	Enter the COB-ID for the selected TPDO (181h - 57fh)
Transmission Type	Set the transmission type for the selected TPDO
Period	For Sync Cyclic transmission type, enter the number of sync pulses for the selected TPDO

Except for TPDO 26, the CANopen TPDO mappings are pre-configured and cannot be changed in the setup software. TPDO 26 can hold up to eight objects, or 64 bits. The number of objects that can be assigned will be limited by the size of the objects.

To map an object to TPDO 26, drag an object from the *Available Objects* box over to the *Object Assignments* field. Objects will be relegated to TPDO 26 automatically in the order in which they are assigned. To change the order of a selected object assigned to TPDO 26, use the  and  buttons. The  button will remove the selected object from TPDO 26.

The *Mapping Capacity* bar displays how much space remains for objects to be assigned to TPDO 26.

Mapping Capacity: 

3.11.3 TPDO Events - CAN Drive

The CAN drive TPDO Events tab is used to assign TPDOs to specific events. Drag TPDOs from the *Available PDOs* box to one of the event fields. By clicking on a desired event, the *Event Settings* box can then be used to further configure the event, or to remove the assigned TPDO(s).

Timer Events

Sets the cycle time of the assigned TPDOs. If the cycle time is set to 0, the assigned TPDOs will be transmitted continuously.

Bit Monitor Events

The Bit Monitor identifies an object which is observed continuously. Select an object from the *Observed Object* drop down box. If the observed bits change the TPDO(s) assigned to the Bit Monitor will be sent. The observed bits are defined by the *Bit Mask* field (0 to FFFF in hex).




Value Events

The Value Changed event observes an object continuously, defined by the *Observed Object* drop down box. If the object changes by the user defined value entered into the *Target Value* field the assigned TPDO(s) will be sent.

The Value Reached event observes an object continuously, defined by the *Observed Object* drop down box. If the object reaches the user defined value entered into the *Target Value* field in the selected *Direction*, the assigned TPDO(s) will be sent.

3.11.4 RPDOs and TPDOs - Ethernet Powerlink or EtherCAT

When using an Ethernet Powerlink or EtherCAT network, up to 16 words can be mapped to the RPDO and TPDO. A 16-bit object will take up 1 word, and a 32-bit object will take up 2 words. Objects can be assigned in one of two ways:

- Click on the *Load Preset* button to select a pre-determined RPDO or TPDO configuration.
- Drag-and-drop objects from the *Available Objects* field to the *Object Assignments* field. Use the , , and  buttons to change the order or remove assigned objects.

3.12 Tuning

The selections under *Tuning* in the System Browser are used to set the control loop gains and configure filters and other tuning tools.

3.12.1 Current Loop Gains



Note

Note that as of ACE version 1.2021.1 the display units for the Ki parameter have been changed to Hz. Values from older project files will be converted to the new display units when opened in ACE version 1.2021.1. It is recommended to confirm that the current loop gains still result in a stable current loop response during first connection with ACE version 1.2021.1 to a drive used with previous versions of ACE.

There are two options for current loop (torque and flux) parameters:

- **Proportional Gain and Integral Gain:** Set the gain values according to conventional PI tuning rules.
- **Proportional Gain and Motor Pole:** Use for zero-placement in the current loop algorithm. The proportional gain setting is the overall gain of the current loop algorithm. When the Motor Pole value matches the actual motor electrical pole (the inverse of the motor electrical time constant), a critically damped response can be obtained with the largest overall proportional gain.

The Calculate button can be used to automatically set the current loop gains based on the values entered in the Motor and Limits windows. Typically these values will provide a good starting point and further gain adjustment is required for optimal tuning. Make sure proper motor and application data are entered prior to using this function.

3.12.2 Gain Sets

For a motion control system to work properly, the drive must be correctly tuned to the motor and/or system. This is accomplished with a set of gain values for each of the control loops in the drive. Most applications will not require gain switching, and therefore should use the default Gain Set 0. However, more than one set of gains may be required as the machine mechanics may change shape (effecting inertia) or the system is loaded or unloaded. The setup software allows the configuration of two separate sets of gain values, Gain Set 0 and Gain Set 1. Each gain set can be assigned to either Configuration 0 or Configuration 1 in the [Configuration](#) window.

To set the gain values, access the Gain Set windows by clicking on *Tuning > Gain Set 0* or *Gain Set 1* from the System Browser. Note that Gain Switching must be enabled in order for Gain Set 1 to be available to edit. Gain Switching can be enabled in the Drive Settings window (*Drive > Settings*). For a step-by-step guide to tune the drive to the system, see [“Tuning and Commutation” on page 52](#).

The Gain Set values can be set according to conventional PID tuning rules:

Proportional Gain (Kp)	Increase for faster response and increased stiffness. Excessive proportional gain can cause overshoot and oscillation.
Integral Gain (Ki)	Increase to eliminate steady-state error and increase accuracy (i.e. amount torque/force per deflection). Excessive integral gain can cause instability and jitter.
Derivative Gain (Kd)	Increase to dampen response and reduce overshoot. Excessive derivative gain results in a more sluggish response. Depending on the feedback source, it may cause excessive jitter and noise.
Accel Feed Forward (Aff)	Creates a direct current demand, based on the change in velocity demand (Velocity Loop) or the second derivative of the position demand (Position Loop). This gain does not affect closed loop behavior, but can help improve velocity/position-tracking capability.
Velocity Feed Forward (Vff) (Position Loop only)	Creates a direct velocity demand based on the change in position demand. This gain does not affect closed loop behavior, but can help improve position-tracking capability. In the case that the velocity and position loop feedback are the same source, the value of Vff should always be $1/(\text{Velocity Loop Update Rate in Hz})$.

Set Position The Set Position function will change the value of the measured position and target position to the values defined in the "Preset Position" field. It is recommended to use the Set Position feature to avoid unexpected motor movement when enabling the bridge, as a large difference between the measured and target position may cause the motor to spin rapidly upon receiving power.

3.12.3 Filters

The Filters selections (*Tuning > Filters*) allow configuration of additional gain parameters that can be used for more in-depth loop tuning behavior. Note that the values entered in the Filters windows will effect both Configuration 0 and Configuration 1:

Velocity Feedback

Parameter	Description
Feedback Filter Cut-off Frequency	Sets the cutoff frequency for the velocity feedback filter. This low-pass filter reduces velocity ripple (due to digitization). However, this will also affect closed loop performance. A typical setting is between 50 Hz and 1500 Hz.
Low Speed Smoothing (incremental encoder feedback only)	When using a standard incremental encoder, Low Speed Smoothing stabilizes the velocity loop during low-speed movement. To tune the low speed gain, use the Waveform Generator to command a low speed (1 or 2 rpm) and look at the velocity measured with the oscilloscope. Adjust the low speed gain to minimize the velocity spike as seen by the scope. Alternatively, this gain can be used to reduce jitter when position is tuned around the velocity loop.
Low Speed Estimator (incremental encoder feedback only)	The Low Speed Estimator is used by the drive for better velocity control at lower speeds by estimating fractional incremental encoder counts. If the bandwidth from the calculated velocity loop gains during Auto-tune is lower than expected for your system, this option can be unchecked before trying the velocity Auto-tune process again.

Custom The Custom Filters window allows the specification of biquad filter coefficients for different locations in the servo drive's control loop. A separate biquad filter can be enabled for both Configuration 0 and Configuration 1. See "[Control Loop Architecture](#)" on page 116 for biquad filter locations. Note that only one biquad filter can be enabled at a given time for each Configuration. Determination of biquad coefficients is accomplished using a data computing language such as MATLAB or a similar programming environment. Most servo applications will not require the use of custom biquad filters. Implementation of the digital filter in the drive is according to Direct Form II, which results in a transfer function in z domain:

$$Y_{BQ}(z) = K * (b_0 * z^2 + b_1 * z + b_2) / (z^2 - a_1 * z - a_2)$$

Note that numbers may be rounded due to the fixed-point representation. It is the responsibility of the user to determine system stability when user-specified coefficients are used.

3.12.4 Advanced Settings

The Advanced Settings window (*Tuning > Advanced Settings*) allows configuration of the Velocity and Position Integrator Decay functions.

Parameter	Description
Integrator Decay	Enabling Integrator Decay will reduce the integrator output each sampling cycle by the specified rate (0-100%) of the Integral Gain. This prevents the integrator from commanding a high current while trying to resolve a small error signal in high stiction applications. When Velocity Integrator Decay is enabled, decay will trigger if the velocity error going into the integrator is within the specified decay Active Window. When Position Integrator Decay is enabled, decay will trigger if the position error is within the specified decay Active Window.

4 Tuning and Commutation

Before proceeding, you must accomplish the following actions:

- Configure the limits and events parameters
- Connect the motor power and feedback

Drive tuning is a multi-step process that involves proper tuning of up to three different servo loops. Before tuning, the drive should have the appropriate parameters and limits configured as per the "[Limits](#)" on page 39. Following are the summary tasks you must perform; later in this chapter you will find the actual procedures with individual steps.



Caution

Sudden motion may occur! Tuning should only be performed after you have specified motor information, drive limits and events, and user units.

1. **Current Loop Tuning:** Once the drive parameters are configured properly, the current loop must be tuned. This is the innermost loop and forms the basis of all motion. You can select to have the current loop gains calculated based on motor and application data. This will typically provide a good starting point although some applications may require further refinement of the tuning parameters.



Notice

Make sure the drive is disabled before selecting Calculate Gains.

2. **AutoCommutation™:** This routine collects data on the motor and feedback parameters and asks the user to verify that they match what is entered into the Motor Data page. Some applications may have motors that cannot perform this routine due to mechanical constraints. See "[Manual Commutation Procedure](#)" on page 63 if you must perform manual commutation.



Notice

It is crucial to make sure the motor is unloaded during commutation; any load applied to the motor will skew the results of the routine.

- 3. Velocity Loop Tuning:** If you want to operate the drive in velocity mode, you must tune the current loop and set up the drive to commutate the motor (steps 1 and 2). A very tight current loop inside of a relatively tight velocity loop may cause audible noise. If maximum bandwidth is not necessary, de-tuning the current loop usually removes most of the audible noise. The velocity loop will have to be adjusted any time the current loop tuning is changed.
- 4. Position Loop Tuning:** You can either tune the position loop around the velocity loop, or around the current loop. Generally, it is much easier to tune a position loop around a velocity loop because only the proportional gain is needed. When tuning position around the current loop, a high derivative gain may be necessary on top of both proportional and integral gains.

For a diagram of how the setup software control loop architecture is implemented, see "[Control Loop Architecture](#)" on page 116.

4.1 Current Loop Tuning

Before beginning current loop tuning, make sure that the motor is free to move and de-coupled from the load, as sudden motion may occur. The motor and drive limits information must be correctly specified in the Motor and Limits windows before tuning the current loop. For current loop tuning, the Loop Configuration in the active Configuration can be set to any of the available options.

It is recommended to disable the drive by clicking on the Disable icon on the toolbar before beginning tuning. The procedure below will prompt you to enable the drive when necessary for tuning.

4.1.1 Current Loop Auto-Tuning

Auto-tune automatically calculates optimal current loop gains and can be used as an alternative to manual tuning. Before you run Auto-Tune, be sure you have:

- Specified Limits to protect the motor

Proceed as follows:


Current Loop Auto-Tuning Procedure

1. Navigate to the Limits and Setup window.
2. Verify the motor parameters are correct.
3. Navigate to the Current Loop Window
4. Click Identify Model to determine the transfer function for the system. The Step-Response and Bode plots on the page will be populated with the system's open loop information once this step is complete.

The calculated transfer function can be viewed by clicking the Transfer Func button (this will appear after running Identify Mode). The transfer function will persist during a single ACE session.



Some motor vibration will occur.

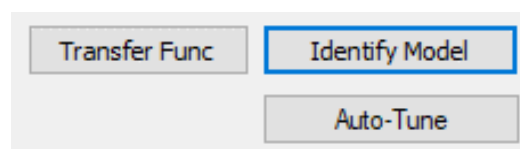

5. If ACE is disconnected or the Reset Drive command is used, then Identify Model will need to be rerun to continue using the auto-tune function.
6. In addition, Identify Model should be rerun if system parameters such as input voltage or current limits are changed after the transfer function has been determined.

- Click Auto-Tune to generate/calculate the optimal current loop gains.



Warning


Some motor vibration will occur.

The calculated gains are displayed at the top of the Current Loop window after running Auto-Tune.


To run the step response with different gain values, make the desired changes and click the Evaluate Gains box to return the step-response with the new values.

The Frequency Verification button will command frequency sweep through the current loop. The Step-Response and Bode plots on the page will be populated with the system's closed loop information once this step is complete.

Current Loop Auto-Tuning Warnings If the following error appears, double check that the AMC Service_Autotune is running in the Services windows application and that MATLAB Runtime 9.4 is installed correctly in the Program and Features list.

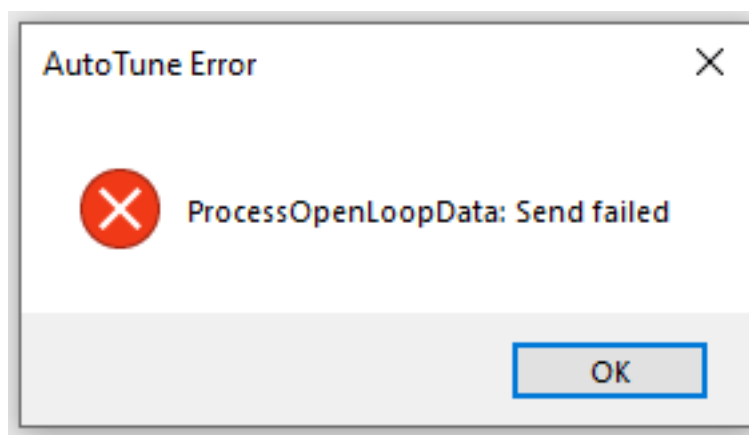

If the error persists, the user can clear the MATLAB Runtime cache by restarting AMC Service_Autotune via the Service application.

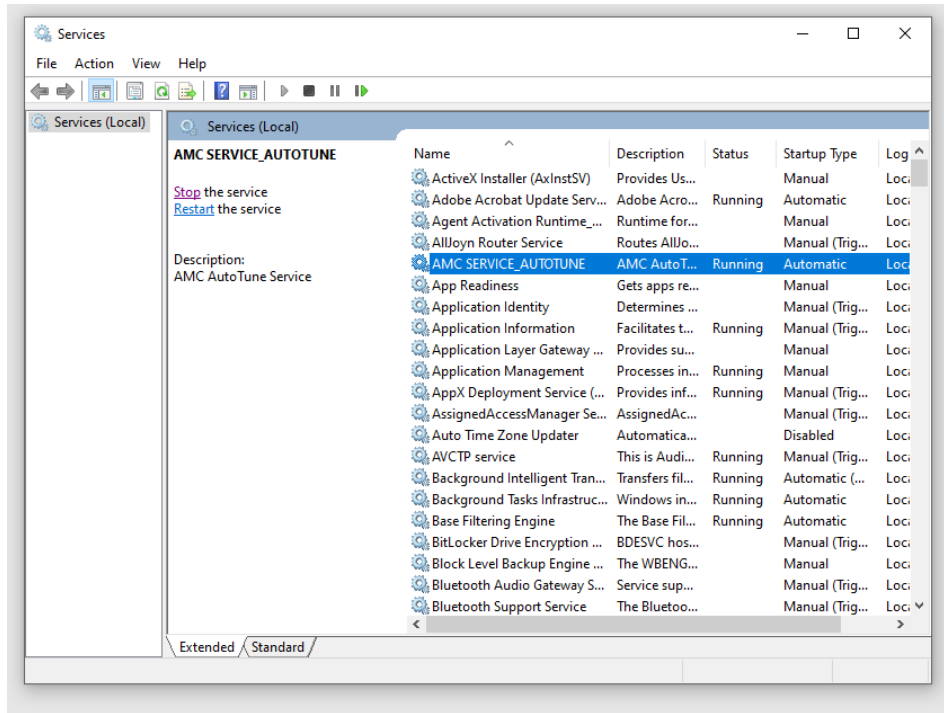


4.1.2 Manual Current Loop Tuning

It is recommended to disable the drive by clicking on the Disable icon on the toolbar before beginning tuning. The procedure below will prompt you to enable the drive when necessary for tuning.

Step 1: Inputs/Outputs Configuration setup

1. Select *Inputs/Outputs > Digital Inputs* from the System Browser.
2. If an external Inhibit/Enable circuit is used during setup, assign the digital input that will be used to the User Disable function, and set the proper polarity (e.g., active high or active low).
3. If no external Inhibit/Enable circuit is to be used during setup, then the Enable/Disable icons on the toolbar will be used to control drive enabling.

Step 2: Waveform Generator Setup


1. Open the Scope/Tuning tab by clicking on the Scope/Tuning icon  from the toolbar.
2. In the Waveform Generator pane, select the waveform *Target* as *Current Loop*.
3. Select the *Square* waveform *Type*.
4. Set *Frequency* to 100 Hz. If your motor has low inertia and is very responsive, use 150 Hz or 200 Hz.
5. Ensure *Offset* is zero.
6. Ensure *Symmetry* is 50%.
7. Set the waveform *Amplitude* to an appropriate value. Begin with 10% of the drive continuous current rating or 50% of the motor continuous current rating, whichever is lower.
8. Click the *ON* button to turn on the Waveform Generator.

Step 3: Oscilloscope setup


1. Select the *Current* oscilloscope preset from the Presets drop-down menu in the Scope/Tuning tab, or to manually configure the settings follow the steps below.
2. Change the channel 1 signal to **Current Target**.
3. Change the channel 2 signal to **Current Measured**.
4. Change the Trigger Source to Current Target with the Level set to zero.
5. Ensure Trigger Mode is Normal.
6. Change Time/Div to either 1 msec or 500 μ sec.



Step 4: Tuning

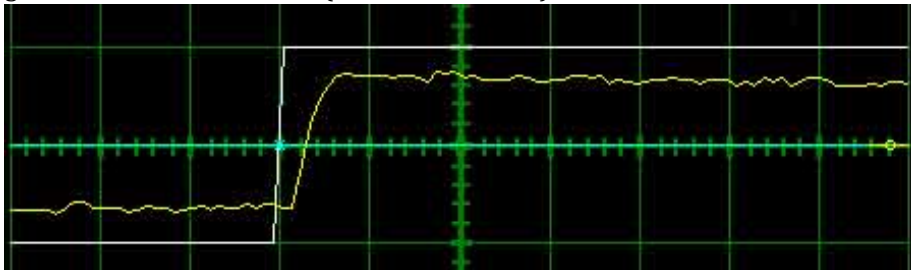1. With the Scope/Tuning window still open, select *Tuning > Current Loop Gains* from the System Browser.
2. To set starting values for the Current (Torque) Loop proportional (Kp) and integral (Ki) gains, click the *Calculate* button to calculate gains that utilize the values entered into the Motor Parameters, Feedback, and Limits windows. The specified motor inductance, resistance, and bus voltage determine the accuracy of the calculated values. If accurate data is not available, begin with Proportional Gain = 1 and the Integral Gain = 0.
3. Enable the drive by clicking the Enable icon. The motor should emit an audible noise but remain still.
4. Proper current loop tuning starts with zero integral gain while increasing the proportional gain until a 'knee' is formed (with no overshoot) in the Current Measured trace.

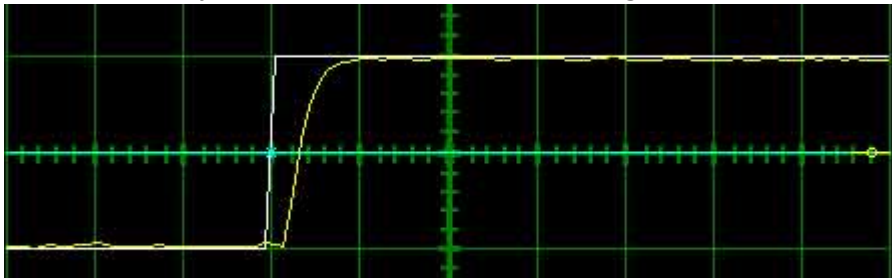

5. At this point, the proportional gain is done and the Integral gain must be slowly increased to close the steady state error between the Current Target and Current Measured traces.




6. Tuning changes with signal amplitude. Therefore you should now re-adjust the current amplitude in the Waveform Generator tab according to your most common application current requirements and re-tune. Contouring applications generally use small signal transients while point-to-point applications use larger signal transients.
7. When current loop gain adjustments are complete, disable the drive .
8. Turn off the Waveform Generator to remove the command signal from the drive by clicking the *OFF* button in the Waveform Generator pane.
9. Click Store  on the toolbar to store the parameters to the drive's nonvolatile memory.
10. For Brushed or Brushless motors, no further current loop tuning is required. Skip to ["Commutation" on page 61](#) to continue the Tuning and Commutation process. For AC Induction motors, continue to Step 5.

For reference, see ["Current Limiting" on page 101](#).

Step 5: (For AC Induction Motors Only) Flux Reference Loop - Waveform Generator Setup

The preceding Steps 1 through 4 must also be performed for AC Induction motors.


1. Open the Scope/Tuning tab by clicking on the Scope/Tuning icon  from the toolbar.
2. In the Waveform Generator pane, select the waveform *Target* as *Flux Reference Current*.
3. Select the *Square* waveform *Type*.
4. Set *Frequency* to 1 Hz.
5. Ensure *Offset* is zero.
6. Ensure *Symmetry* is 50%.
7. Set the waveform *Amplitude* to the No Load Current (as entered on the *Motor Parameters* page).
8. Click the *ON* button to turn on the Waveform Generator.

Step 6: (For AC Induction Motors Only) Flux Reference Loop - Oscilloscope Setup


1. Change the channel 1 signal to **Flux Ref. Current Target**.
2. Change the channel 2 signal to **Flux Ref. Current Measured**.
3. Change the Trigger Source to Flux Ref. Current Target with the Level set to zero.
4. Ensure Trigger Mode is Normal.
5. Change Time/Div to 100 msec.

Step 7: (For AC Induction Motors Only) Flux Reference Loop - Tuning

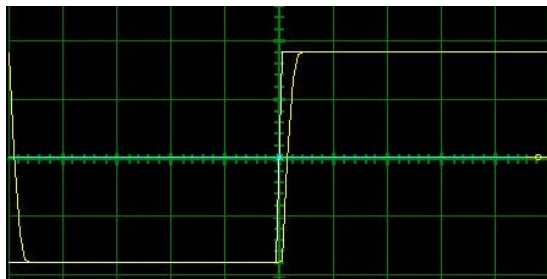

1. With the Scope/Tuning window still open, select *Tuning > Current Loop Gains* from the System Browser.
2. To set starting values for the Flux Loop proportional (Kp) and integral (Ki) gains, click the *Calculate* button that calculates gains that utilize the values entered into the Motor Parameters, Feedback, and Limits windows. The specified motor inductance, resistance, and bus voltage determine the accuracy of the calculated values.
3. Enable the drive by clicking the Enable icon. The motor should emit an audible noise but remain still.
4. Proper loop tuning will look similar to the figure below. Adjust Kp and Ki accordingly to remove any overshoot.



5. When flux reference loop gain adjustments are complete, disable the drive .

6. Turn off the Waveform Generator to remove the command signal from the drive by clicking the *OFF* button in the Waveform Generator pane.
7. Click Store  on the toolbar to store the parameters to the drive's nonvolatile memory.

Step 8: (For AC Induction Motors Only) Commutation

1. For AC Induction motors, all that is required for motor commutation is to command a DC current into the current loop.
2. Open the Scope/Tuning tab by clicking on the Scope/Tuning icon  from the toolbar.
3. Select the waveform *Target as Current Loop*.
4. Select the *DC* waveform *Type*.
5. Set the waveform *Amplitude* to an appropriate value.
6. Click the *ON* button to turn on the Waveform Generator.
7. Enable the drive by clicking the Enable icon. The motor should spin quickly and smoothly in a constant direction. If the motor does not spin, or spins very slowly, it is likely the feedback polarity will need to be changed. Disable the drive . From the System Browser, select *Motor > Parameters* and change the feedback polarity, then Apply the change. Return to the Scope/Tuning window, and command the same DC current into the drive. The motor should now spin quickly and smoothly.
8. No further motor commutation is required for AC Induction motors. Skip to "[Velocity Loop Tuning](#)" on page 68 to continue the tuning process.

4.2 Commutation

Motor commutation is dependent on the type of motor and feedback available from the motor. Brushed motors have a commutator built into the motor housing; therefore the drive does not have to be configured to commutate them. Brushless DC (Trapezoidal), and AC (Sinusoidal), motors require a correctly configured drive to commutate.

Commutation of a permanent magnet servomotor is the process that maintains an optimal angle between the permanent magnet field and the electromagnetic field created by the motor current(s). This process ensures optimal torque or force generation at any motor position, regardless of speed, for brushless motors.

There are two ways to configure a digital drive to commutate a motor:

- AutoCommutation™: Most applications can use the AutoCommutation routine for configuring a drive to a specific motor. This routine will detect the feedback devices attached to the motor and ask the user to verify them against the motor's datasheet.
- Manual Commutation requires more time, and may not be as accurate as AutoCommutation. You will have to perform this method if:
 - Your motor is mechanically restrained such that it is not free to move 2 revolutions + 1 electrical cycle in both directions (3 electrical cycles for a Brushless linear motor).
 - Your motor or load has a significant amount of inertia.
 - Your motor cannot be unloaded, or is a vertical load.
 - Your motor has a high degree of stiction.

4.2.1 AutoCommutation™

The AutoCommutation routine detects the motor feedback type and polarity, and then configures the drive commutation parameters appropriately.

Brushless and linear motors with insufficient travel distance (two revolutions plus one electrical cycle for rotary motors, or three electrical cycles for linear motors) or large amounts of inertia will require the Manual Commutation Procedure instead. AutoCommutation detection is not required for brush-type motors.

Before you run AutoCommutation, be sure you:

- Enter in the correct motor information in the Motor window page.
- Specify the correct feedback information.
- Specify limits to protect the motor.
- Tune the current loop.
- De-couple the motor from any load and secure the motor. Sudden motion will occur!

If you have not done the preceding, see the corresponding sections in this manual.

For brushless, stepper, and linear motors with sufficient travel distance, proceed as follows:

1. In *Motor > Parameters*, ensure that Sinusoidal Commutation is selected in the Commutation section of the window.
2. Open the AutoCommutation window (*Motor > AutoComm*).
3. If the drive is disabled, click the Enable icon to enable the drive.
4. Click *Start AutoCommutation* to begin the process. During the AutoCommutation process, monitor the distance traveled in each direction. The motor will move at 60 electrical degrees per second. Rotary motors will turn two revolutions plus one electrical cycle in each direction. Linear motors will move three electrical cycles in each direction. Motors with a high pole count will take a longer time to complete.
5. When AutoCommutation is complete, select whether the motor has moved the proper distance or has not moved the proper distance. If the motor did not move the proper distance, verify the pole count or pole pitch in the motor parameters window.
6. Once the motor has properly completed the AutoCommutation routine, verify the proper commutation and synchronization settings:
 - *Commutation*:
 - Trapezoidal - The drive uses Hall Sensors to commute trapezoidally.
 - Sinusoidal - The drive uses a feedback device to perform sinusoidal commutation.
 - External Commutation (Brush) - The drive does not commute the motor. Commutation is performed externally.
 - *Synchronization*: (It is recommended to synchronize on the index any time that an index exists. This will allow the drive to home to an index. If a different method of synchronization is selected other than on the index, the drive will not be able to home to an index.)
 - None - No synchronization is performed.
 - Halls - each hall cycle - Synchronization is performed on every rising edge of Hall A.
 - Index - Synchronization is performed on the rising edge of the encoder index pulse.
7. Click *Apply* from the toolbar to save the AutoCommutation parameters.
8. Click the *Store Settings* icon to store parameters to non-volatile memory.



Note

For brushless or stepper motors with encoder feedback and no Hall Sensors, the Phase Detection function must be utilized whenever power to the drive is cycled or a loss of sinusoidal commutation occurs. See "[Phase Detect](#)" on page 66.

AutoCommutation™ Warnings After running AutoCommutation, it is possible that a warning (or warnings) may appear due to wiring errors or discrepancies between the information on the Motor Data page and the results of AutoCommutation.

Follow these steps to successfully complete AutoCommutation:

1. Review the information in the AutoCommutation warning box, then select **OK**.
2. Select 'Edit Motor Data' from the options in the lower right hand corner.
3. Click 'OK' in the Pre-Loaded data dialog box.
4. On the Motor Data page, the relevant information will have been changed to correspond with the AutoCommutation results. Click 'OK', then click 'OK' in any dialog boxes to return to the AutoCommutation window.
5. Select 'Accept' in the AutoCommutation window. If the 'Accept' button is still grayed out, consult the general guidelines in the following table to diagnose and correct any AutoCommutation warnings, then re-run AutoCommutation.

AutoCommutation Warning Text	Warning Description
Primary Feedback Polarity Opposite from Motor Data	AutoCommutation detected that the feedback polarity of the primary encoder is the opposite of what is specified on the Motor Data page. This does not necessarily indicate an error, only that the observed polarity is different. In this case, it is best to trust AutoCommutation.
Different Feedback Devices from Motor Data	AutoCommutation detected a feedback device (usually Hall Sensors) that was not specified on the Motor Data page. Check motor data to be sure accurate information was entered.
Other Hall Phasing	AutoCommutation found Hall Sensor spacing that is outside the normal range for 60 degree or 120 degree Hall spacing. This does not necessarily indicate an error. It is acceptable to run with other Hall spacing.
Invalid Hall Sensors	AutoCommutation detected inconsistent Hall Sensors. This usually means one or more Hall Sensors are shorted or not properly connected. Check Hall wiring between motor and drive.
Inconsistent Index Transitions	AutoCommutation did not find the index signal consistently during its travel. Check to make sure the index signal of the encoder is properly wired to the drive. Can also indicate a noise issue. Check to make sure cables are properly shielded.
Inconsistent Encoder Transitions	AutoCommutation did not find encoder transitions during its travel. Check to make sure that the encoder's A and B channels are properly wired to the drive, and that the encoder is properly powered. Can also indicate a noise issue. Check to make sure cables are properly shielded.

4.2.2 Manual Commutation Procedure

The large majority of applications do not require this method for configuring a drive to commutate the motor. However, because some applications cannot use the AutoCommutation routine, each drive defaults to a standard switching sequence that will commutate one of the six motor phase wiring combinations for a given feedback wiring configuration.

Before you perform manual commutation, be sure you have:

- Entered in the correct motor information in the motor data page.
- Specified the correct feedback information.
- Specified limits to protect the motor.
- Tuned the current loop.
- De-coupled the motor from any load and secured the motor. Sudden motion will occur!


Setting over speed limits

1. From the System Browser, go to the *Limits > Velocity* window, and set the maximum speed you wish the motor to spin for this test. Set this fairly high but not so fast it is dangerous if the motor spins away.


- From the System Browser, go to the *Events > Advanced* window. In the Motor group, set the Motor Over Speed event Action to Disable Power Bridge and Unlimited Recoveries.

Performing Manual Commutation (Incremental Encoder, Sin/Cos Encoder)

- If the drive is enabled, click the Disable icon to issue a Software Disable and disable the drive.
- Check the Drive Status panel for any faults or user inhibits that may be disabling the drive or preventing operation, and take corrective action to clear them. Software Disable should remain applied.
- In the *Motor > Manual Commutation* window, it is recommended to use the default settings for *Current*, *Rate*, and *Offset* in the Drive Parameters and Procedure Settings and Status panes.
- Enable the drive. Click and hold the *Move Positive* or *Move Negative* button in the Measurement pane. The needle in the diagram will begin to revolve. The measured commutation settings will appear as solid lines in the diagram.

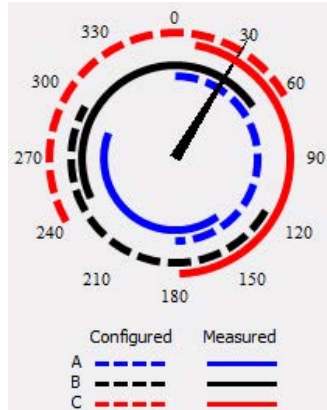

- Once the needle has travelled a complete rotation, release the *Move...* button. (Optionally, after completing a full rotation in one direction, click and hold the *Move...* button in the opposite direction for another full rotation to increase resolution). If the measured commutation settings (solid lines) do not match up with the configured commutation settings (dashed lines), change the *Commutation Sequence* from the Drive Parameters pane so that the solid lines line up with the dashed lines.

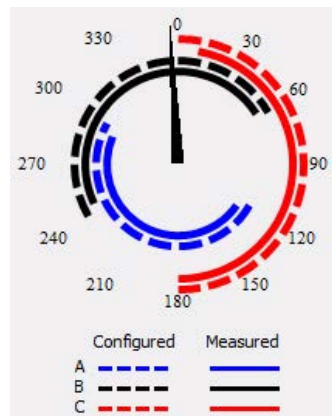

6. To set the proper *Encoder Direction*, click and hold the *Move Positive* button. As the needle rotates, pay attention to the *Position* counter field. If the value is increasing as the needle moves forward, *Encoder Direction* should be set to Standard. If the value is decreasing as the needle moves forward, *Encoder Direction* should be set to Inverted.
7. Apply the commutation settings by clicking the *Apply* button in the Toolbar.

Performing Manual Commutation (Absolute Encoder - BiSS, EnDat, Hiperface)

1. If the drive is enabled, click the Disable icon to issue a Software Disable and disable the drive.
2. Check the Drive Status panel for any faults or user inhibits that may be disabling the drive or preventing operation, and take corrective action to clear them. Software Disable should remain applied.
3. In the *Motor > Manual Commutation* window, it is recommended to use the default settings for *Holding Current*, *Holding Time*, and *Commanded Phase Angle* in the Procedure Settings pane.
4. Enable the drive. Click the *Start* button. The motor should begin to rotate slowly (the current and position can be monitored in the Status pane).
5. Once the configured *Holding Time* has been reached, the *Calculated Null Torque Angle (NTA)* will be displayed in the Drive Settings pane. The *Feedback Polarity* will also be automatically adjusted to the correct setting, if necessary.
6. Apply the commutation settings by clicking the *Apply* button in the toolbar.

Re-Setting Over Speed Limits

1. In the *Limits > Velocity* window set the desired application Motor Over Speed.
2. In the *Events > Advanced* window, configure the desired event actions for the application.
3. Click the *Store Settings* icon on the toolbar to store the parameters to the drive non-volatile memory. The drive is now ready either for tuning the outer loops, or final commissioning and use.

4.2.3 Advanced Commutation

The *Advanced Commutation* window provides setup and commutation information for more advanced or non-typical commutation configurations or environments. Most applications will not require any adjustment of the *Advanced Commutation* values.

Note that not all of the *Advanced Commutation* parameters listed below are available for every drive. Only the commutation parameters specific to the drive and feedback device in use will be displayed in the setup software.

Changing settings in the *Advanced Commutation* window will automatically adjust settings that are also available in other windows (i.e. wiring polarities, commutation type, synchronization source, etc.).

Commutation Parameter	Description
Wiring	Configures motor and feedback rotation and wiring information Rotation Direction - Specifies the direction of motor rotation Wiring Polarity - Specifies the polarity of the motor wiring Feedback Polarity - Specifies the polarity of the feedback device connections. The proper setting for Feedback Polarity is necessary to prevent a motor runaway condition.
Phase Registration	Displays the counts per electrical cycle of the motor, and the Null Torque Angle at Zero Count. The NTA is configurable when using an absolute encoder.
Halls	For drives using Hall Sensors for commutation, displays the Hall Sensor phase centers.
Commutation	Configures the drive for Sinusoidal or Trapezoidal commutation. Also enables or disables Synchronization via an Index or Halls, and allows the configuration of Null Torque Angle values for the First Edge and Second Edge.

4.2.4 Phase Detect

Phase Detect is required for use with brushless and stepper motors with encoder feedback and without hall sensors. This routine must be performed before the motor can properly be commutated each time the drive power is cycled, or anytime sinusoidal commutation is lost.



Notice

The Phase Detect window will not be available in all cases, as the Phase Detect routine is not required for setup in all scenarios.

The reason is that without hall sensors, the motor position is initially unknown, and therefore cannot be properly commutated until a positioning routine is followed. Phase Detect will require motor motion for several seconds, and can be set up to be performed via a digital input, or automatically on power-up.

Be sure to enter motor data and run AutoCommutation if possible before running Phase Detect. Couple the motor to the load before you perform Phase Detection. Phase Detect is also used with absolute feedback devices (i.e., resolver or absolute encoder). This form of Phase Detect does not require motor motion.

- **Power-up Option:** Under most circumstances, the appropriate setting in the *[DriveName] > Power-up* tab is *On First Enable Following Power-up*. However, other options may be used depending on the configuration of your drive and motor.
- **Disable Events:** The positive and/or negative limit switches may be disabled in the *Phase Detect* window by checking the disable checkboxes under *Configuration*. This will prevent the limit switches from causing a premature phase detect failure.
- **Settling Time:** For Phase Detect to complete successfully, the absolute position must be determined when the motor is at a standstill. For motors with high inertia or low friction, the motor may take a longer time to come to a stop after the initial Phase Detect movement. Entering a Settling Time value greater than the amount of time that the motor takes to settle will allow Phase Detect to complete successfully in these cases. Depending on the motor, typical settling time values may range from one second to several seconds. The

current that the drive will command to hold the motor at a standstill for the Settling Time duration will be the maximum continuous current value allowed by the hardware, or the software Peak Current level (if set below the hardware continuous current). If the Settling Time is longer than the software Peak Current Time, then the commanded current will foldback to the software Continuous Current value.

- **Restrict Motion:** Unrestricted motion is recommended if the system will allow it for the best chance of successful Phase Detection. Unrestricted motion Phase Detection can be used against a hard stop. Restrict Motion should be used when sudden motor motion of up to $\pm 1/2$ electrical cycle is unacceptable in the system. Enable the Restrict Motion checkbox, and enter a motion value within the physical limits. The required motion for the Phase Detect routine is no more than $\pm 1/2$ of an electrical cycle. Phase Detect can complete successfully with less motion, but the success rate will be reduced.
- **Pulse Current:** This is the current used to excite the motor during a restricted motion Phase Detect. It should be large enough to move the motor (and load) smoothly, but not so much that the motor overshoots. A good starting current is one quarter of the RMS current to be used in your application. If you are trying to perform Phase Detect with no load on the motor, very little current will be required.

To perform Phase Detection, use the following procedure:

1. You may wish to monitor the following status events: Phase Detection, Phase Detection Complete, and Phase Detection Fault. These can be monitored with the Drive Status panel or can be assigned to digital outputs and monitored with a controller.
2. Configure the Phase Detect settings for Settling Time and Disable Positive/Negative Limits for what is appropriate for the system. For a restricted motion Phase Detect, select the Restrict Motion checkbox, and enter a motion value within the physical limits of the system, and an appropriate Pulse Current value.
3. Click the Phase Detect Button. Motion will occur, before the drive will hold the motor in a fixed location. This process may repeat multiple times while the drive collects data. If a restricted motion window has been defined, the motion will be confined within that window. Otherwise, Phase Detect will command several small moves of 45 electrical degrees.
4. Check Drive Status to make sure the Phase Detect routine was successful.
5. If Phase Detect was unsuccessful, the routine may automatically repeat again. It may be necessary to vary the Pulse Current and motion parameters to ensure successful Phase Detection.

4.3 Velocity Loop Tuning

Tuning of the velocity loop should only be performed after current loop tuning and motor commutation. Velocity loop tuning is dependent on the mechanical load, and therefore will change with any mechanical system changes. Velocity loop tuning should be performed with the motor installed in the system and connected to the load. Make sure that the load is free to move as sudden motion may occur. For velocity loop tuning, the Loop Configuration setting in the active Configuration must be set to either Velocity or Position around Velocity.

It is recommended to disable the drive by clicking on the Disable icon on the toolbar before beginning tuning. The procedure below will prompt you to enable the drive when necessary for tuning.

4.3.1 Velocity Loop Auto-Tuning

Auto-tune automatically calculates optimal velocity loop gains and can be used as an alternative to manual tuning. Before you run Auto-Tune, be sure you have:

- Specified Limits to protect the motor

Proceed as follows:


Velocity Loop Auto-Tuning Procedure

1. Navigate to the Velocity Loop window.
2. Click Identify Model to determine the transfer function for the system. The Bode plots on the page will be populated with the system's open loop information once this step is complete.

The calculated transfer function can be viewed by clicking the Transfer Func button (this will appear after running Identify Mode). The transfer function will persist during a single ACE session. If ACE is disconnected or the Reset Drive command is used, then Identify Model will need to be rerun to continue using the auto-tune function. In addition, Identify Model should be rerun if system parameters such as input voltage or velocity limits are changed after the transfer function has been determined.



Some motor vibration will occur.

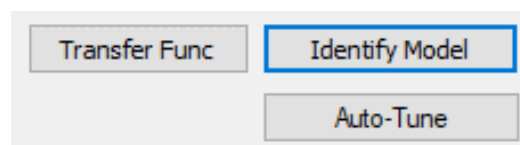


- Click Auto-Tune to generate/calculate the optimal velocity loop gains.



Some motor vibration will occur.

The calculated gains are displayed at the top of the Velocity Loop window after running Auto-Tune.

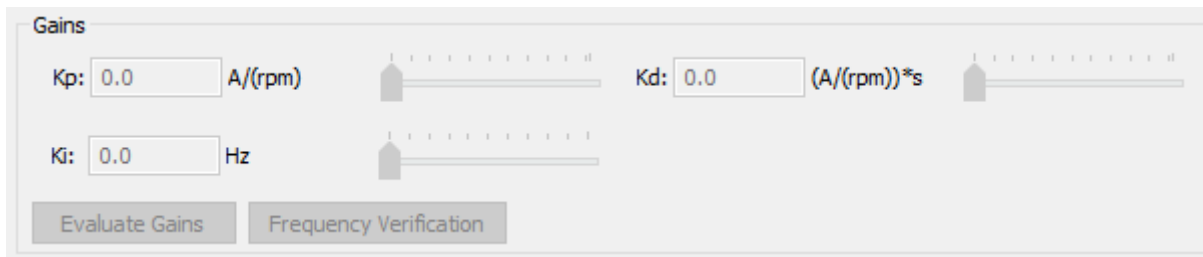


To run the step response with different gain values, make the desired changes and click the Evaluate Gains button to return the step-response with the new values.


The Frequency Verification button will command frequency sweep through the velocity loop. The Step-Response and Bode plots on the page will be populated with the system's closed loop information once this step is complete.

The Max and Min Freq parameters can be used to change the range of the frequency sweep command during Identify Model and Frequency Verification.

Velocity Loop Auto-Tuning Warnings If the following error appears, double check that the AMC Service_Autotune is running in the Services windows application and that MATLAB Runtime 9.4 is installed correctly in the Program and Features list.

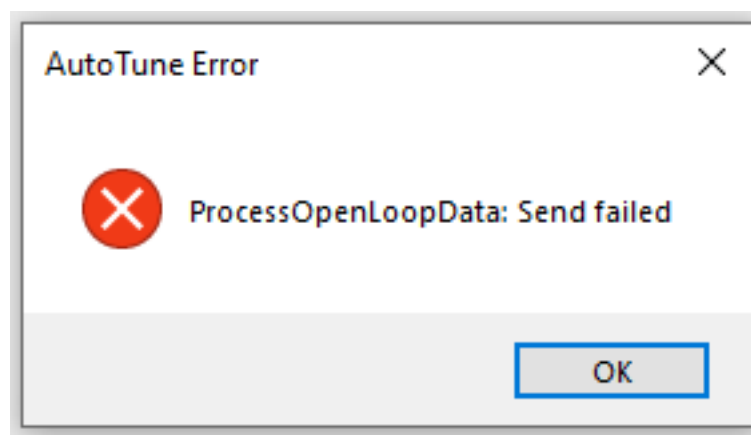


If the error persists, the user can clear the MATLAB Runtime cache by restarting AMC Service_Autotune via the Service application.

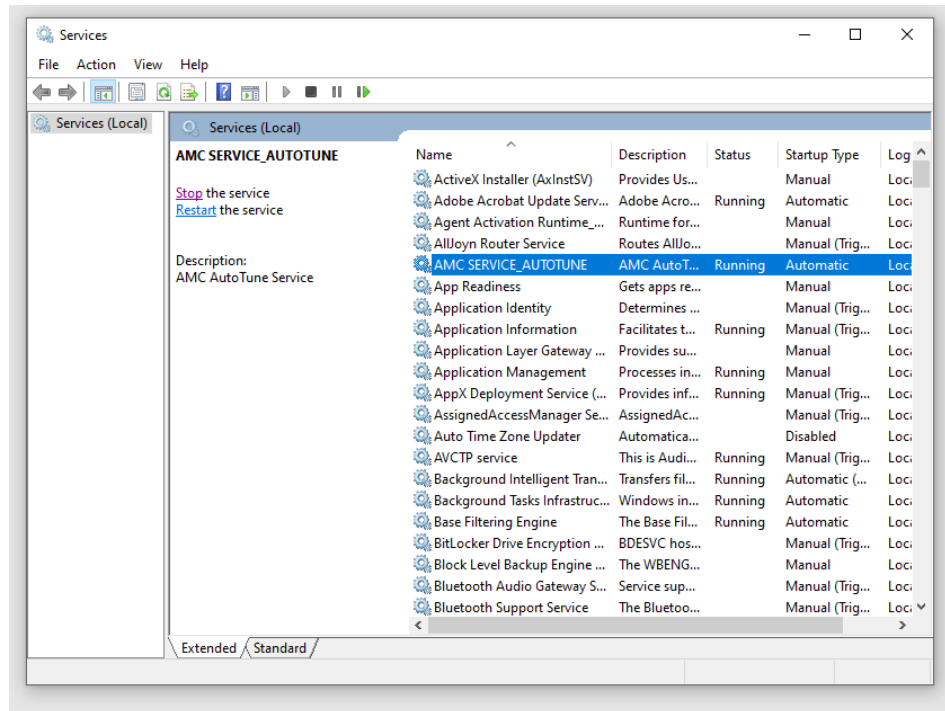

4.3.2 Manual Velocity Loop Tuning

Step 1: Waveform Generator setup

1. Open the Scope/Tuning tab by clicking on the Scope/Tuning icon  from the toolbar.
2. Select the waveform *Target* as *Velocity Loop*.
3. Select the *Square* waveform *Type*.
4. Set *Frequency* to around 1-3 Hz. The frequency should be slow enough to achieve commanded velocity, but fast enough to prevent the system from reaching a mechanical limit.
5. Ensure *Offset* is zero.
6. Ensure *Symmetry* is 50%.
7. Set the waveform *Amplitude* to approximately 10% of motor nominal speed.
8. Click the *ON* button to turn on the Waveform Generator.


Step 2: Oscilloscope setup

1. Select the Velocity Scope Preset, or to manually configure the settings follow the steps below.
2. Change the channel 1 signal to **Velocity Target**.
3. Change the channel 2 signal to **Velocity Measured**.


4. Change the Trigger Source to Velocity Target with the Level set to zero.
5. Ensure Trigger Mode is Normal.
6. Change Time/Div to 10-20msec.

Step 3: Tuning

1. With the Scope/Tuning tab still open, select *Tuning > Gain Set 0* or *Gain Set 1* from the System Browser, depending on which Gain Set is currently used for the active Configuration.
2. Begin by setting all the velocity loop gains to zero (Kp-Proportional, Ki-Integral, Kd-Derivative, Aff-Feedforward).
3. Enable the drive by clicking the Enable icon.
4. Proper Velocity loop tuning starts with zero integral gain while increasing the proportional gain until a "knee" is formed (with no overshoot) in the Velocity Measured trace as shown below. There may or may not be an error between the Target and Measured traces, the key is to have a smooth knee shape.

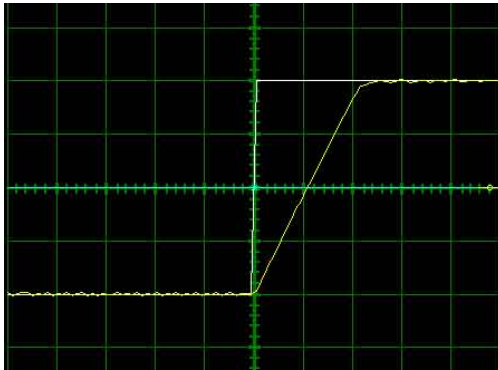


5. At this point the Proportional gain is left alone and the Integral gain is increased slowly until the "knee" begins to deform as shown below. It is OK if the waveform does not start to distort until the integral gain is very high. When the distortion occurs, back off the Integral gain until the knee becomes smooth again.

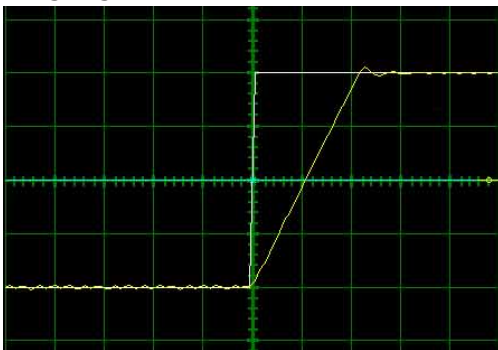

6. Next, in order to improve the smoothness of the response, it may be beneficial to adjust the velocity feedback filter cutoff frequency in the *Tuning > Filters* window. The Filter Frequency is used to dampen oscillations and noise in the velocity measurements. For most systems, the ideal cutoff frequency will be somewhere between 50Hz and 1500Hz.
7. Most systems will be tuned properly at this point. If your system requires fine-tuning, you may adjust the derivative and feed-forward gains. If the motor starts to make audible

noise, increase the Low Speed Smoothing in the Loop Filters window until the vibration and noise stops.

8. When tuning is complete, disable the drive by clicking the Disable icon on the toolbar. Turn off the Waveform Generator by clicking the *OFF* button in the waveform generator pane.
9. Click Store  on the toolbar to store the parameters to the drive's nonvolatile memory.

4.4 Position Loop Tuning

Position loop tuning is dependant on the mechanical load, and therefore will change with any mechanical system changes. Position loop tuning should be performed with the motor installed in the system.


The position loop can be closed around velocity or current (torque) mode. If it is closed around velocity mode, the position loop algorithm output becomes the new velocity set point. If it is closed around torque mode, the position loop algorithm output becomes the new current (torque) set point. There are some important differences in the tuning process and application of these two approaches:

- **Position around Velocity:** This mode is most common in "contouring" application, where a position trajectory must be tracked very closely. The velocity loop provides additional "stiffness", and keeps the dynamic position errors minimal, since the system now reacts to not just position errors, but also velocity errors (which can be interpreted as position error changes). It is important to start with a stable yet responsive velocity loop. Typically, it is sufficient to just use the position loop proportional gain. Feedforward gain can be added to improve tracking performance (i.e. minimize the difference between commanded and actual position). It is best to use a small step command as a reference signal during tuning.
- **Position around Current (Torque):** This mode is most common in point-to-point applications, where actual motion between start and end point is not very critical. In this case, velocity loop tuning can be avoided. This can be advantageous if the velocity feedback is poor (e.g., low resolution encoder, poor encoder quadrature, etc.). In this case, the tuning process requires that the position loop proportional and derivative gain are increased simultaneously, unless the system has sufficient friction, in which case no derivative gain is necessary. Once a stable response is achieved, integral gain can be added to improve stiffness. It is best to use a triangular waveform or a step command with the Command Limiter enabled as a reference signal during tuning.

For position loop tuning, the Loop Configuration setting in the active Configuration must be set to either *Position around Current* or *Position around Velocity*.

It is recommended to disable the drive by clicking on the Disable icon on the toolbar before beginning tuning. The procedure below will prompt you to enable the drive when necessary for tuning.

Step 1: Waveform Generator setup


1. Open the Scope/Tuning tab by clicking on the Scope/Tuning icon  from the toolbar.
2. Select *Position Loop* as the waveform *Target*.
3. Select the *Square* waveform *Type*.
4. Set *Frequency* to around 1-3 Hz. The Frequency should be slow enough to allow the motor to settle in position.
5. Set *Offset* to zero.
6. Ensure *Symmetry* is 50%.
7. Leave the *Amplitude* at zero for the moment.
8. Click the *ON* button to turn on the Waveform Generator.

Step 2: Oscilloscope setup

1. Select the Position Scope Preset, or to manually configure the settings follow the steps below.
 1. Change the channel 1 signal to **Position Target**.
 2. Change the channel 2 signal to **Position Measured**.
 3. Change the Trigger Source to Position Target with the Level set to zero.
 4. Ensure Trigger Mode is Normal.
 5. Change Time/Div to 20-50 msec.

Step 3: Tuning



1. With the Scope/Tuning window still open, select *Tuning > Gain Set 0* or *Gain Set 1* from the System Browser, depending on which Gain Set is currently used for the active Configuration.
2. In the Gain Set tab, set all gains to zero (Kp-Proportional, Ki-Integral, Kd-Derivative, Vff-Velocity Feedforward, and Aff-Acceleration Feedforward).
3. The *Set Position* function is used to set the measured and target position to the value defined in the Preset Position field. It is recommended to set the Preset Position to zero before beginning tuning to avoid any unexpected jumps when the drive is enabled. Enter "0" in the Preset Position field, then click the *Set* button.
4. Enable the drive by clicking the Enable icon. Set the waveform *Amplitude* between 1/8 and 1/2 revolution for a rotary motor. Use the Proportional Gain, Integral Gain, and Derivative Gain sliders or arrow buttons in the Position Loop window to adjust the Position Measured waveform on the oscilloscope and match the Position Target as closely as possible without excessive overshoot. It is not necessary to adjust the Velocity or Acceleration Feed-forward Gains.
5. Readjust the Gains as Necessary.
6. When position loop gain adjustments are complete, disable the drive by clicking the Disable icon on the toolbar. Turn off the Waveform Generator by clicking the *OFF* button in the waveform generator pane.
7. Click the Store icon  on the toolbar to store parameters to the drive's nonvolatile memory.

5 Motion Tasks

The Base Motion and Motion Engine selections of the System Browser are used to configure motion tasks. These features are used when it is desired to distribute motion to the drive, offloading the HMI, PC or PLC from calculating motion trajectories. This functionality provides greater flexibility to modify the drive behavior for the application.

Before executing any Motion Tasks, be sure to have:

- Entered in the motor and feedback parameters.
- Configured the drive limits and events.
- Tuned the necessary control loops and successfully completed AutoCommutation.

5.1 Motion Tasks

Motion Tasks are commands in the drive that will cause pre-defined motion on the axis. The tasks will generate trajectories that will be fed into the position loop. Motion Tasks may be performed on the benchtop or with a load on the motor. There are five types of Motion Tasks available for configuration in the setup software.

- Homing
- Indexes
- PVT
- Jogs
- Sequences

5.1.1 Homing

Homing is a Motion Task that defines Absolute Position to the drive with respect to the machine typically involving a sensor or switch located at a known position. The Home Task is not required to be used in applications with an absolute feedback device. The absolute position can be defined in the case of an absolute feedback device through the [Phase Detect](#) routine. Note that position limits will be ignored during homing routines. This setting can be changed via network commands.


Many different homing routines are supported. These routines rely on signals such as limit switches, home switches, and encoder indexes to accurately position the load.

To open the Home window, select *Base Motion > Home* from the System Browser. Set the Homing Speeds and Acceleration, then configure the Homing Method.

Home Parameter	Description
Fast Velocity	Value of the maximum velocity that can be commanded during search for first switch.
Slow Velocity	Value of the maximum velocity that can be commanded during search for Home. The slower the velocity, the more accurate the homing routine should be.
Homing Acceleration	Value of the acceleration and deceleration for motion.
Home Position	Position value set as the Home location.
Index	Selects whether an Index pulse is used on motor feedback for Homing.
Home Switch	Selects whether a Home Switch is in use.
Limit Switch	Selects whether a Limit Switch is in use.
Direction	Selects whether motion during the Home Task will begin in the positive or negative direction.

If no switches, index, or direction are selected, the homing routine will default to "Current Position". The "Current Position" homing routine will set the measured position equal to the specified home position value (typically zero) when executed.

The example below uses the index, the falling home switch edge and the positive limit switch to define the homing routine. The direction in which homing ends is in the negative direction as shown by the arrow.

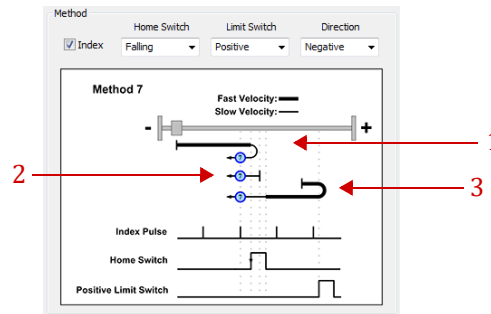

For this particular routine, there are three possible scenarios. The scenarios are described as shown from top to bottom.


1. The home switch is inactive. Motion begins in the positive direction. When the home switch is encountered, motion starts in the negative direction. Homing completes at the first index pulse after the falling edge of the home switch.
2. The home switch is active. Motion begins in the negative direction. Homing completes at the first index after the falling edge of the home switch.
3. The home switch is inactive. Motion begins in the positive direction. When the positive limit switch is encountered, motion starts in the negative direction. Homing completes at the first index after the falling edge of the home switch.

Homing method The set of drawings below illustrate the different components used to define the different homing routines. The components are grouped in the diagram to show events relative to motor/load position.

Load and physical limits: The square near the middle of the drawing shows the load object that is to be moved. The end points represent physical limitations or barriers in which the load cannot travel past. The left side is in the negative direction with the right side in the positive direction.



Direction of travel: The vertical line on the right side represents the starting position. The load travels in the direction of the arrow. In the drawing shown, the load would begin traveling in the negative direction and then switch directions to move in the positive direction. The circle represents the home position. This position is captured before the motor decelerates to zero velocity.



Index Pulse: Each vertical line represents one index pulse.



Limit and Home Switches: As shown, the switch can be either high or low. The vertical lines represent a toggle point.



5.1.2 Indexes

An Index task is defined by a set of basic parameters that define a profiled move. Up to 16 separately defined Index tasks can be configured (Index 0 - Index 15). An Index task can be either of the following types:




- **Absolute** - Commands a pre-defined move to an absolute position.
- **Relative** - Commands a pre-defined move relative to the current position.

To configure an Index task, select *Motion Engine > Indexes > Index 0...15* from the System Browser. Each Index task (Index00 - Index15) can be assigned a unique identifier in the *Name* field in the Indexes window, and any further labels or important information can be added in the *Comment* Field. Select the Index Type (Absolute or Relative) from the drop-down menu, then configure the Index task by setting values for the following parameters:






Index Parameter	Description
Position/Distance	- (Absolute Index) The target position for the task. - (Relative Index) The target distance for the task relative to the current position.
Velocity	Value of the maximum velocity of the profile that can be commanded. The motion may not reach the maximum velocity depending on the values set for Acceleration, Deceleration, and Position/Distance.
Acceleration	Value of the acceleration for the profile. The profile will continue at this rate until Velocity is reached or the profile enters the deceleration phase.
Deceleration	Value of the deceleration for the profile. The profile will continue at this rate until the axis reaches zero velocity. The profile starts decelerating at a position so that the axis is at zero velocity at the Position value.
Dwell	After completion of motion the axis will dwell for this period of time. The task is still active during dwell time.
Start Location	Define a starting position for the index task.


Click *Apply* to save the Index configuration once the values are entered.

Executing an Index Task To perform an Index task, note that the drive and the Motion Engine must be enabled. The active drive Configuration should be set to Position around Velocity, and the Absolute Position Valid status must be active via the Homing, Phase Detect, or Set Position functions. Homing parameters are configured in the *Base Motion > Home* window in the System Browser. See "[Homing](#)" on page 76 for information on how to configure the Homing routine.




1. Configure an Index task from the Indexes window as described above.
2. Enable the drive by clicking the Enable icon  on the toolbar. Select *Motion Engine > Run* from the menu bar or click the Motion Engine On icon  on the toolbar to enable the Motion Engine.
3. Select *Tools > Motion Panel* from the menu bar to display the Motion Panel controls.
4. Use the drop-down arrow at the top-right of the Motion Panel window to select Indexes.
5. In the Motion Panel window, select a configured Index task from the *Motion* drop-down box in the *Identification* section. The selected index parameters will then be displayed in the Motion Panel.
6. Click the Home icon  on the Motion Panel toolbar to home the drive.






7. To execute the selected Index task, click one of the following.


Index Motion Commands	Description
	Repeatedly Execute Motion in Reverse (Loop Reverse) - Relative Indexes only
	Execute Motion in Reverse (Reverse) - Relative Indexes only
	Execute Motion (Forward)
	Repeatedly Execute Motion (Forward Loop) - Relative Indexes only
	Loop over Forward and Reverse Motion (Cycle Motion) - Relative Indexes only

8. For a looped Index task, once the desired motion has occurred click the Halt Motion icon  at the top of the Motion Panel to complete the move.

Dynamic Indexes Dynamic Index tasks are configurable within the Motion Panel window. Both Absolute and Relative Index tasks can be defined using the Dynamic Index tool. The drive and the Motion Engine must be enabled to perform a Dynamic Index task. The active drive Configuration should be set to Position around Velocity, and the Absolute Position Valid status must be active via the Homing, Phase Detect, or Set Position functions. Homing parameters are configured in the *Base Motion > Home* window in the System Browser. See "[Homing](#)" on [page 76](#) for information on how to configure the Homing routine. To execute a Dynamic Index task:

1. Enable the drive by clicking the Enable icon  on the toolbar. Select *Motion Engine > Run* from the menu bar or click the Motion Engine On icon  on the toolbar to enable the Motion Engine.
2. Select *Tools > Motion Panel* from the menu bar to display the Motion Panel controls.
3. Use the drop-down arrow at the top-right of the Motion Panel window to select Dynamic.
4. In the Motion Panel window, select the Index Type (Absolute or Relative).
5. Enter the desired motion parameters (Position, Velocity, Accel, Decel, and Dwell) into the Motion Panel.
6. Click the Home icon  on the Motion Panel toolbar to home the drive if necessary.
7. To execute the selected Dynamic Index task, click one of the following.


Dynamic Index Motion Commands	Description
	Repeatedly Execute Motion in Reverse (Loop Reverse) - Relative Indexes only
	Execute Motion in Reverse (Reverse) - Relative Indexes only
	Execute Motion (Forward)
	Repeatedly Execute Motion (Forward Loop) - Relative Indexes only
	Loop over Forward and Reverse Motion (Cycle Motion) - Relative Indexes only

8. For a looped Dynamic Index task, once the desired motion has occurred click the Halt Motion button  at the top of the Motion Panel to complete the move.

5.1.3 PVT

Typically, Position-Velocity-Time (PVT) is used to stream motion data between multiple axes for coordinated motion. Arbitrary position and velocity profiles can be executed on each axis. A PVT command contains the position, velocity, and time information of the motion profile's segment end points. The servo amplifier performs a third order interpolation between segment end points. This results in a kind of partial trajectory generation where both host controller and servo amplifier generate a specific portion of the overall move profile trajectory. The host controller calculates position and velocity of intermittent points on the overall trajectory, while the servo amplifier interpolates between these intermittent points to ensure smooth motion. The actual position loop is closed within the amplifier. This reduces the amount of commands that need to be sent from host controller to amplifier, which is critical in distributed control systems. The number of segments and the time duration of each segment need to be selected based upon required accuracy and network bandwidth.

Suppose the motor is at rest and the values $P1$, $V1$, and $T1$ are entered in the buffer to represent a PVT point $S1 = (P1, V1, T1)$. If the profile is executed, the drive will attempt to move the motor a distance of $P1$ in $T1$ seconds with a final velocity of $V1$. The path of motion is calculated by using the difference between the initial and the target position and velocity points, and running them through a third order equation to produce a smooth motion profile. The figure below shows an example which involves multiple PVT points $S1, S2, S3, \dots, Sn$ and displays how smooth motion between these points can be produced.

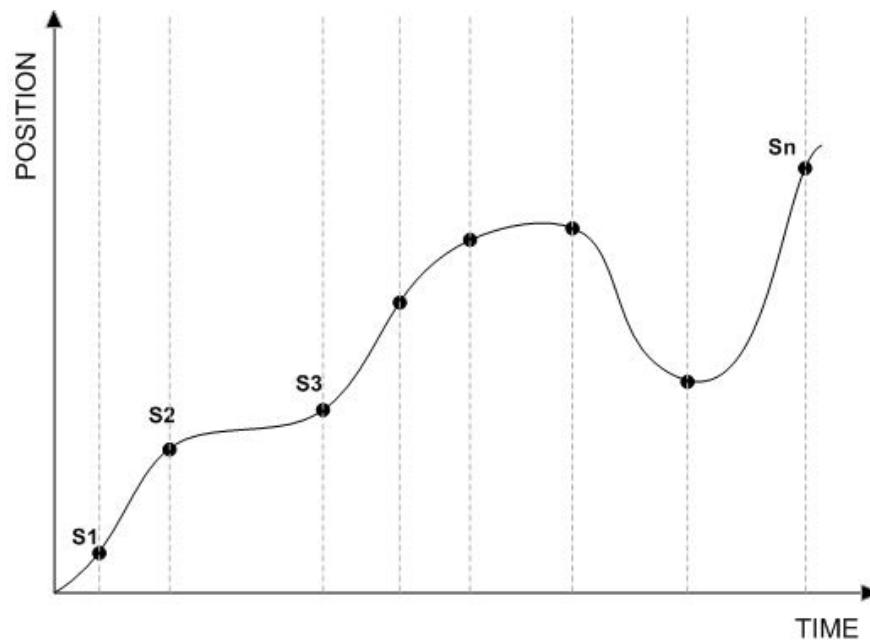

PVT Plot

How To Construct A PVT Points File A PVT file can be constructed using any simple-text editor (such as Microsoft® NotePad). Each line in the file represents a PVT point by specifying position, velocity, and time separated by semicolons.

Position and velocity are specified in user units (see "[User Units](#)" on page 92) whereas time is always in milliseconds. Furthermore, velocity is specified on an absolute basis whereas time is

specified on an incremental basis with the largest allowable increment being 65535 milliseconds. Position must be absolute.



CAN standard supports a time step up to and including 255 milliseconds.


Enter the desired PVT points in a text file and load that data into the Motion Panel. When first saving a PVT file, be sure to replace the default *.txt extension with *.pvt when specifying the file name.

If using the *Repeatedly Execute Motion (Forward Loop)* option with a PVT file, be sure that the first PVT point in the file can follow logically after the last point in the PVT file, and that they contain the same position value. Lastly, when looping through several PVT points with small incremental times, be aware of the fact that the PVT buffer may have time to empty out all of its points before the PVT Generator has time to refill the buffer. Such an event will result in no more than the PVT Buffer Empty status becoming active and is the result of restrictions on the RS232 baud rate used by the software to communicate with the drive.


There is no limit to the number of PVT points you can place in the PVT file. These files are useful to repeat a desired sequence several times or to save the data for future use.

1. To get started, select the Open PVT File button.
2. Navigate to your PVT file (make sure it has a *.pvt extension).
3. The file name is displayed below the Open PVT File button.
4. To execute the selected PVT file, click one of the following.

PVT Motion Commands	Description
	Execute Profile (Run)
	Loop over Profile (Repeat)

5. For a looped PVT command, once the desired motion has occurred press the Halt Motion button  at the top of the Motion Panel to complete the move.

An example of a PVT file with correct formatting, named pvt_points_file.pvt, is shown below.

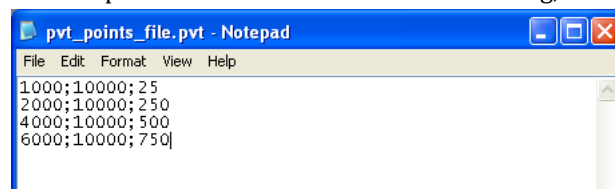

```
pvt_points_file.pvt - Notepad
File Edit Format View Help
1000;10000;25
2000;10000;250
4000;10000;500
6000;10000;750
```

PVT Points File Example


5.1.4 Jogs


Jogs are Position Mode Motion Tasks that command motion at a defined constant velocity with infinite distance. Four separate Jog velocities can be defined (Velocity 0, 1, 2, and 3).



To configure a Jog Task, select *Base Motion > Jog* from the System Browser, then enter values for the following parameters:

Jog Parameter	Description
Velocity (0,1,2,3)	Value of the maximum velocity of the profile that can be commanded.
Acceleration	Value of the acceleration for the profile. Shared by all Jog Velocity parameters. (Note: Value may be rounded after entry to account for drive unit conversion).
Deceleration	Value of the deceleration for the profile. Shared by all Jog Velocity parameters. (Note: Value may be rounded after entry to account for drive unit conversion).
Display Time	Sets the Jog graph time duration. For estimation/graphing purposes only, does not affect actual duration of Jog motion.

Click Apply to save the Jog parameters.

Executing a Jog Task To perform a Jog Task, the drive must be enabled. Note that the Motion Engine must be disabled before a Jog Task can be executed. If the Motion Engine is currently turned on, select *Motion Engine > Run* from the menu bar or click the Motion Engine ON icon  on the toolbar to turn off the Motion Engine.

1. Configure a Jog Task from the Jog window as described above.
2. Enable the drive by clicking the Enable icon  on the toolbar.
3. Select *Tools > Motion Panel* from the menu bar to display the Motion Panel controls.
4. Use the drop-down arrow at the top-right of the Motion Panel window to select Jog.
5. In the Motion Panel window, select the desired Jog Velocity. The selected Jog parameters will then be displayed in the Motion Panel.
6. To execute the selected Jog Task, **click and hold** one of the following.




Jog Motion Commands	Description
	Execute Motion in Reverse (Reverse)
	Execute Motion (Forward)

7. The Jog motion will continue as long as the motion task button is held down. Release the motion task icon when the desired motion is complete.

5.1.5 Sequences

A Sequence is a set of steps that are Motion Tasks and Control Functions linked together and executed in a sequential order. With the exception of Jogs, any Motion Task can be used in a Sequence. Control Functions are all the non-motion steps that impact the flow of a sequence.

The setup software allows up to 16 different Sequences to be saved and stored to the project file and drive NVM. The *Storage Used* field will automatically update with the amount of memory used by the configured Sequences. Each Sequence can be given a unique name or number as an identifier, and selected by using the *Seq ID* drop-down menu or by choosing the desired Sequence from the System Browser tree view.

Each step in a Sequence is a distinct state of the Sequence. Steps are organized into one of the following groups: Motion, Sequence, If/Then, Wait For, and Set/Clear. Drag-and-drop step items from the *Functions* pane over to the Sequence list area in the *Sequence* pane to create a Sequence. The order of steps within a Sequence can be changed by using the , , or  buttons in the Sequence window.

Functions

Motion	Description
Home	Runs the currently configured Homing routine.
Index	Runs an Index routine. After dropping the Index function into the Sequence list area, select the desired Index routine from the <i>Identification</i> pane. Indexes may be pre-configured or configured directly in the Sequence window.

Sequence	Description
Start	Used to start a new Sequence, allowing Sequences to be chained together.
End	Used to end a Sequence. Note that it is not required to place an End function as the last step of a Sequence.
Label	Assigns a label to a point in a Sequence. After dropping the Label function into the Sequence list area, the label name can be entered in the <i>Label Step</i> pane. Labeled steps within a Sequence can be called out in other Sequence control functions within the same Sequence.
Jump To	Commands the Sequence to jump to a pre-configured Label within the same Sequence. Note that the labeled step in the Sequence must be configured before it can be selected in the Jump step. After dropping the Jump function into the Sequence list area, select the labeled point to jump to from the <i>Jump to Step</i> pane.

If/Then	Description
Event / Input / Logic Bit	If/Then commands are used as test statements within a Sequence. Events, Digital Inputs and Logic Bits are selectable as test items. After dropping the desired test function into the Sequence list area, select the item to be tested from the <i>If Event</i> drop-down menu, and select whether to test if the item state is Set or Clear (Active or Inactive). The action the test step will take can then be selected from the <i>then:</i> drop-down menu. Some actions will only be available if the appropriate step has already been configured. For example, the option to "Jump To" a specific point in the Sequence will only be available if a Label has already been configured.

Wait For	Description
Event / Input / User Bit / Time / Value	Wait For commands will hold a Sequence from progressing to the next step for either a defined time period or until a specified event or action has occurred. A <i>Time-out</i> duration and subsequent <i>Action</i> can be entered for Wait For commands that are waiting for an event or action to occur. The setup software allows Wait For commands for certain drive Events, Digital Inputs, User Bits, and Measured and Target Position Values. The configurable <i>Action</i> taken at the end of the <i>Time-out</i> duration if the specified event has not occurred can be one of the following options: End the current Sequence, Start a new Sequence, Jump to a labeled point within the current Sequence, or Continue to the next step in the current Sequence.

Set/Clear	Description
Output	Commands a specified Digital Output to either trigger or clear.
Logic Bit	Commands a specified Logic Bit to either trigger or clear.

Break Points

- Up to two Break Points can be added to an inactive or active Sequence to pause the Sequence at a desired location. The Sequence will remain paused until either the *Run* or *Single-Step* button is selected to restart the Sequence progression.
- Break Points are added or removed by clicking on the white space between the Sequence # and the Sequence *Step* name in the Sequence list area.

I/O Assignments

- The I/O Assignments pane lists all the Digital Inputs and Outputs that may be selected for use in a Sequence.
- Digital Inputs or Outputs that are already assigned to other drive functions will be marked as "In Use".

Invalid Sequence Steps

- In the case where a step in any of the sequences has not been properly configured or initialized, a red flag icon will be visible next to the invalid step in the step list. All invalid sequence steps must be corrected before any sequences can be executed.
- If an invalid sequence step exists, the red flag button at the bottom of the Sequences window will automatically open the first sequence that contains an invalid step.

6

Downloading the Firmware

Each time the manufacturer releases a new setup software version or issues a firmware patch, you should update the firmware on your existing digital drives. When you work closely with the manufacturer, particularly for custom products, firmware changes may be required several times throughout your development process.

6.1 Prepare for Download

1. Connect to the drive.
2. Open the Connection Settings window by going to *Drive > Connect*, and changing the connection setting to a high baud rate.
3. Make sure the parameters are correct in both the setup software and the drive.
4. Store parameters to the drive's nonvolatile memory.

6.2 Open the Firmware Download Window

Select *Drive > Firmware Download* on the menu bar to open the Firmware Download window.

This window allows changes and upgrades to the drive run-time firmware. For example, you may need to upgrade when a new version of software is to be used with an older drive or when a new drive needs a previous version to work in a system.

Check the Current Information window to view which firmware is currently in the drive. If the firmware file name matches the recommended name in the Select Firmware window, a firmware upgrade is unnecessary and you may click the cancel button. If the two names are different, you should update the firmware.

Browse Folder/Browse File: If the drive firmware is not installed in the default directory, you may need to browse for it. Use these buttons to navigate to where the firmware file is located.

6.3 Downloading the Firmware

1. Select the recommended firmware file.
2. Click on the Download button.
This process may take several minutes depending on your connection.
3. The *Close the dialog box when download completes* box is checked by default so that you will return to the main workspace after firmware upgrade completes.
4. If the 'Bridge State on Power-up' option in the Power-up Control tab in Limits and Options is set to **Enable**, you will see a dialog window during the download asking if you would like to reset the drive after the firmware download is complete:
Be aware that resetting the drive in this case will cause the power bridge to be enabled after the download is complete, unless there is a hardware limiting event active (invalid halls, digital inputs, etc). If you choose not to reset the drive, the bridge will be disabled upon download completion, and the drive will not go through its normal power-up sequence.
5. When the upgrade is complete, store the parameters to nonvolatile memory.
6. Read the release notes for information about new features and issues.



Caution


Do not power down or lose your connection during the process. If this happens, you may have to restart the download, or in extreme cases, send the drive back to the manufacturer.

This appendix describes helpful tools provided by the setup software.

A.1 Digital Oscilloscope

The digital scope is a powerful tool used for tuning and diagnostics. You can select from more than forty different signals to monitor while testing or troubleshooting your machine. Slower baud rates can affect the scope performance.

To open the digital oscilloscope, do one of the following:

- Select *Tools > Scope/Tuning* on the menu bar.
- Click on the Scope/Tuning icon  on the tool bar.
- Select *Control Loops > Scope/Tuning* from the System Browser.

The oscilloscope provides real-time feedback and adjustment during tuning and setup. This multichannel digital scope behaves similarly to a traditional oscilloscope but provides access to internal drive signals. You can show up to eight channels at any time depending on the bandwidth used for each channel. The units used in the vertical division setting depend on the selected signal.

Standard prefixes such as μ (micro-), m (milli-), k (kilo-), M (mega-), are used for scaling factors. The bridge does not need to be enabled to use the scope. All that is required is that the drive be powered up and connected.

Channel Select The Channel Select section provides selection of oscilloscope signals.

- **Add Signal:** Adds a new channel to the scope (if available) and allows you to select a corresponding signal of your choice. This button will be disabled (grey) if all oscilloscope channels are used.
- **Change:** Changes the currently selected signal to another one of your choice.
- **Remove:** Removes the selected channel from the scope.

A list of available channels and their definitions can be found in the [“Signal Definitions”](#) on page 95.

Presets Automatically configured oscilloscope settings that are frequently used when tuning the drive. Each preset has pre-determined unit and time per division scaling. Click on the corresponding button to either load a preset or save the existing layout as a preset. The presets will be reset to the defaults when DriveWare is closed and re-opened.

- **Current:** Configures the oscilloscope settings for monitoring a target current command and the measured drive output current.
- **Velocity:** Configures the oscilloscope settings for monitoring a target velocity command and the measured motor velocity.
- **Position:** Configures the oscilloscope settings for monitoring a target position command and the measured motor position.

Display The Display section provides configuration of the oscilloscope display settings.

- **Time/Div:** Shows the horizontal scaling time per division for the corresponding signal as seen in the digital scope display.
- **Scale:** Shows the units per division for the corresponding signal as seen in the digital scope display.
- **Offset:** Shows the offset associated with the signal as seen in the digital scope display.
- **Horizontal Location:** Allows adjustment of the horizontal (time-based) level at which the scope triggers.

Trigger The Trigger section provides configuration of the oscilloscope settings.



- **Source:** Displays the currently selected signal to be used as a trigger.
- **Level:** Allows you to select the level at which you want the scope to trigger.
- **Slope:** Sets the trigger slope to positive slope or negative slope.
- **Mode:** Sets the trigger mode to one of the following:
 - Normal Mode: The scope triggers according to the settings specified.
 - Single: The scope triggers once, according to the settings specified, after Run/Stop button is selected.
 - Auto: The scope triggers automatically, ignoring the settings specified.
 - Roll: The scope triggers in a continuous roll. Note: you will be limited to 200 msec/Div minimum while in roll mode.

Measure The Measure section provides real-time measurement between any two signals displayed on the oscilloscope.

- **Time:** This allows you to measure time differences between any two points on the scope display. Click the Time checkbox to display two vertical lines on the scope plot. The difference in time between the two lines is displayed in the box to the right of the check box. Left click to drag each line or right click to drag both.
- **Signal Level:** Select a channel for measurement from one of the two dropdown boxes. You may use either of the two dropdown menus to select a channel. The difference between the lines is displayed next to the channel selection dropdown; the selected channels units apply. Depending on whether the Time checkbox is selected, the values measured will either be horizontal time/div or vertical units/div. Left click to drag each line or right click to drag both.

A.1.1 Waveform Generator

The Waveform Generator is used to generate an internal signal during drive tuning and other procedures, eliminating the need for external signal sources during tuning. The Waveform Generator is in the Scope/Tuning window.

- **Target:** Select the destination for the waveform signal. Not Connected means the waveform signal will not be used. Command Limiter means the command signal will be limited as defined in the Command Limiter section of the active Configuration.
- **Type:** Select a DC (constant), square wave, triangle wave, or sinusoidal waveform.
- **Frequency:** Select the frequency of the waveform signal. This becomes inactive when "DC" is selected for the waveform type.
- **Amplitude:** Corresponds to the amplitude of the waveform signal (equivalent to half of the peak-to-peak value). Disabled in the case where a DC waveform is selected. Clicking on the  button will set the amplitude to zero.
- **Offset:** Adds an offset to the selected waveform. If a DC waveform is selected, the offset corresponds to the DC signal amplitude.
 - When the Position Loop is enabled, the  button will set the offset equal to the measured position.
- **Symmetry:** Corresponds to the duty cycle or symmetry of the waveform signal. This becomes inactive when DC is selected for the waveform type.

A.1.2 Data Capture

The Digital Oscilloscope includes an export feature that allows a user to capture oscilloscope data in a .CSV format. In order for the export feature to appear, the setup software must be connected to a drive. The *Data Capture* button at the bottom right of the Oscilloscope will be visible once connected. Selecting the *Data Capture* button will begin capturing oscilloscope data, and will open a *Save As...* dialog window that will specify where to save a .CSV file that will contain the data for the active oscilloscope signals. Once the desired oscilloscope data has been captured, click the *End Capture* button to stop the data export. The .CSV file will now be saved, and will organize the oscilloscope data for the active signals during the capture time frame as shown in the example below:

Time	Position Target	Position Measured
0	1746	1676
20	1962	1899
40	2137	2082
60	2280	2237
80	2393	2362
100	2464	2447
120	2498	2492
140	2493	2499
160	2446	2469
180	2365	2397
200	2240	2283
220	2088	2133

Depending on the Trigger Mode selected, the Data Capture feature will function as given below:

- **Single:** File will contain 100 points for each signal. The data will include 50 points before / after the trigger.
- **Normal:** File is continuously filled with data 100 points at a time. The data is not continuous because it captures only 50 points before / after each trigger. Time starts over with each update.
- **Auto:** File is continuously filled with data 100 points at a time. The data is not continuous because it captures only 50 points before / after each update with some dead time. Time starts over with each update.
- **Roll:** File is continuously filled with data points. The data is continuous; however, the maximum capture rate is 10 points per 200ms.

A.1.3 Import

- Selecting a .CSV file for data import will render the captured signals in the file on the scope and prevent parameters in the Display, Trigger, Measurement, and Waveform Generator panes from being edited. Selecting the Live-Data button will clear the imported data and resume regular use of the scope.
- For .CSV files containing more data than can be rendered in a single scope screen, the buttons in the Import pane can be used to navigate the data.
- Separate scaling and Time/Div parameters are available in the Import pane to adjust the imported signals on the scope.


A.2 Multimeter

The Multimeter allows you to monitor a multitude of signal types including positions, velocities, torques, and voltages. Use the *Change Signal* button to select the signal to monitor and display.

A resettable counter keeps track of the maximum and minimum values found, and shows the current maximum and minimum values in the corresponding display gauges. These values will update automatically if higher or lower values are detected. The *Reset* button below each display gauge will erase and reset the current maximum and minimum values.

You must be connected to a drive to use the Multimeter functions.

To open the multimeter, do one of the following:

- Select *Tools > Multimeter* on the menu bar.
- Click on the multimeter icon  on the tool bar.

Up to four Multimeter windows can be opened at any given time. The Multimeter windows can be dragged, docked, and nested to multiple locations within the software workspace. Click and hold on the Multimeter window title bar, and drag the window to the desired location.

To see a list of available signals for the multimeter, see [“Signal Definitions” on page 95](#).




Note

The multimeter samples signals at a rate of once every 250 ms or four times per second. If you want to measure a faster signal, use the Digital Scope.

A.3 User Units

The User Units window allows the specification of the general units to be used throughout the application. A variety of units are selectable. The User Units window also allows the definition of custom units.








The User Units window is found under *Settings > User Units* in the menu bar or by clicking on the User Units icon  in the toolbar.

- Select the type of unit to be used for each data type (Torque, Position, Velocity, etc.) and the Load type (Rotary or Linear) from the drop-down menus. A scaling ratio between Feedback and Load units can also be defined.
- Selecting the Custom Units checkbox will allow the definition of custom units and labels. A scaling ratio between standard and custom units can also be defined.

A.4 Motion Panel

The Motion Panel controls are opened by selecting *Tools > Motion Panel* from the menu bar. The Motion Panel is used to select and execute motion tasks that have been pre-defined in the Home, Jog, and Indexes windows, or to define parameters for a single index task with the Dynamic Index tool. The Motion Panel is also used to execute PVT commands.

The Motion Panel provides a set of control buttons for various motion functions. Note that Jogs only allow forward or reverse motion, and cannot be set for automatic looping.

Icon	Description
	Execute the Home Method (home)
	Halt Motion (halt)
	Repeatedly Execute Motion in Reverse (loop reverse)
	Execute Motion in Reverse (reverse)
	Execute Motion (forward)
	Repeatedly Execute Motion (forward loop)
	Loop over Forward and Reverse Motion (cycle motion)

Indexes For more information on Indexes, see [“Indexes” on page 78](#).

- Selects a pre-defined Index task (Index00 - Index15). Only Indexes that have already been defined in the corresponding Index window will be available for selection.
- The Index parameters will be displayed in the Motion Panel window.
- The available Motion Panel Index controls will depend on the type of index selected (Absolute or Relative).

Dynamic Index For more information on Dynamic Indexes, see [“Indexes” on page 78](#).

- Configure parameters for a single index task within the Motion Panel window.
- Both Absolute and Relative Index tasks can be defined with the Dynamic Index tool.

Jog For more information on Jogs, see [“Jogs” on page 82](#).

- Selects a pre-defined Jog task (0 or 1).
- The corresponding Jog velocity, accel, and decel will be displayed in the Motion Panel window.
- The Motion Engine does not need to be enabled to execute Jog tasks.

PVT For more information on PVT and how to construct a PVT points file, see [“PVT” on page 80](#).

- Used to execute PVT commands from a PVT points file. Note that the Motion Engine must be turned off to use the PVT generator.
- A PVT file can be constructed using Notepad or a similar text editor program. Each line in the file represents a PVT point by specifying position, velocity, and time separated by semi-colons.

- Before running a PVT file, it is recommended to connect at the highest baud rate available, and to minimize the number of applications running in the background. Also close any unnecessary windows in DriveWare as they will slow down the rate at which the drive receives PVT points, possibly resulting in a PVT buffer error.

Motion Status

- Displays the real-time measured values for Position, Velocity, Torque (% of continuous current limit as defined in the Current Limits window), and position error.
- The Motion Status panel also displays the current state of the Motion Engine.

Status	Definition
Disabled	The Motion Engine is not active. Enable the Motion Engine by using the toolbar icon or select Run from the Motion Engine menu bar selection.
Ready	The Motion Engine is enabled and ready to execute an Index or Sequence.
Executing	The Motion Engine is executing motion.
Loading	A Sequence or Index program is loading.
Halting	A Halt command has been asserted during an Index or Sequence move.
Not Homed	Absolute Position is not valid. A Homing routine or Set Position function must be used before a motion task can be executed.
Bridge Wrong	The drive is disabled or stopped. The drive must be enabled before running a motion task.
Fault on Test	The If/Then test produced an error.
Single Step	A Sequence is being executed in Single-Step mode.
Break Point	A Sequence has stopped at a Break Point.

A.5 Motor Diagnostics

The *Motor Diagnostics* window is used to assist in system troubleshooting and diagnostics. Typically, the *Motor Diagnostics* procedure is ran while monitoring signals on the digital oscilloscope or Multimeter (i.e., comparing the *Commanded Phase Angle* to the measured position).

Procedure Settings

- The *Motor Diagnostics* procedure will move the motor at the entered *Holding Current* at the *Commanded Phase Angle* entered in the window for the amount of time entered in the *Holding Time* field.
- The drive must be enabled and clear of any disabling faults or event actions in order to run the *Motor Diagnostics* routine. Click the *Start* button to run the procedure. The routine will end automatically after the *Holding Time* has completed.

A.6 Signal Definitions

The following tables show all of the signals that can be measured using the Oscilloscope and Multimeter. These signals may also be used as analog outputs in compatible drives.

Current measurements

Value	Definition
Current Target (Iq)	This is the commanded torque-producing current. Current limit settings are ignored.
Current Demand (Iq)	The commanded torque-producing current, after current limits have been applied. This value is zero when the drive is inhibited.
Current Measured (Iq)	The actual measured torque-producing current being delivered to the motor. Ideally, this value should be as close as possible to the demand current.
Id - Target	This represents the flux producing stator current in an AC induction motor. Id should equal zero when using a permanent magnet motor.
Id - Demand	This represents the flux producing stator current in an AC induction motor. Id should equal zero when using a permanent magnet motor.
Id - Measured	This represents the flux producing stator current in an AC induction motor. Id should equal zero when using a permanent magnet motor.
Current Phase A	The measured current in motor phase A. The sum of all three phases should add up to zero.
Current Phase B	The measured current in motor phase B. The sum of all three phases should add up to zero.
Flux Ref. Current Target	The commanded flux reference current ignoring limits. The flux reference current is the current induced in the rotor of an AC induction motor.
Flux Ref. Current Demand	The commanded flux reference current, after limits have been applied. The flux reference current is the current induced in the rotor of an AC induction motor.
Flux Ref. Current Measured	The measured flux reference current. The flux reference current is the current induced in the rotor of an AC induction motor.
Flux Ref. Current Error	The difference between the flux reference current target and the flux reference current measured.
Current Reference	This is the commanded torque-producing current before current loop input filtering or current offset.
Torque Offset	The offset applied to the Current Target (Iq)

For Iq and Id, "I" represents the peak of the current sine wave for an individual phase in a three phase motor.

Depending on the drive type, motor type, and motor settings, some of the signals may not be available.

Velocity measurements

Value	Definition
Velocity Target	This is the commanded velocity ignoring velocity limit settings.
Velocity Demand	The commanded velocity, after velocity limits have been applied. This value is zero when the drive is inhibited.
Velocity Measured	The velocity as measured by the velocity feedback device (after filtering).
Velocity Feedback	The velocity as measured by the velocity feedback device (before filtering).
Velocity Error	The difference between the motor's target velocity and measured velocity.
Velocity Reference	This is the commanded velocity before velocity loop input filtering or velocity offset.
Velocity Offset	The offset applied to the Target Velocity.

Position measurements

Value	Definition
Position Target	This is the commanded position ignoring position limit settings.
Position Demand	The commanded position, after position limits have been applied.
Position Measured	The position as measured by the position feedback device.
Position Error	The difference between the motor's target position and measured position.
Position Reference	This is the commanded position before position loop input filtering or position offset.
Position Offset	The offset applied to the Target Position.

Commutation

Value	Definition
Sync Error	Synchronization is used with brushless motors to verify the commutation angle is valid for the measured position. When synchronization occurs, the drive compares the expected position to the measured position. If the two are not aligned, the drive cannot reliably commutate and a synchronization error results.
Hall State	The decimal equivalent of the binary combination of the three hall states where Hall A is bit 0 and Hall C is bit 2. (5V = 1, 0V = 0). It is important to note that the binary value is inverted for PCB drive models. For example, a standalone drive may read a Hall State of 1-1-1, while a PCB-mounted drive would read a Hall State of 0-0-0 in the same situation.
Phase Angle	The present number of degrees of the rotor inside one electrical cycle. Also may be called Electrical Angle.
Sync. Capture	The encoder count captured at the Synchronization edge. This will vary depending on the Sync edge chosen from AutoCommutation (Hall or Index edge).
Stator Angle	The present number of degrees of the stator inside one electrical cycle. This value is equal to the phase angle plus the slip angle.

Voltage

Value	Definition
Analog Output	The present voltage applied to the analog output.
DC Bus Voltage	The voltage the drive can output during the ON state of a PWM cycle. This is generally equivalent to the DC or rectified AC supply voltage to the drive. The DC Bus Voltage may be greater than the supply voltage when the motor is in a state of regeneration.
Voltage Phase A	The voltage, with respect to DC bus ground, applied to motor phase A
Voltage Phase B	The voltage, with respect to DC bus ground, applied to motor phase B.
Voltage Phase C	The voltage, with respect to DC bus ground, applied to motor phase C.
Analog Input	The voltage measured on the analog input pin with respect to signal ground.

Command Limiter

Value	Definition
Command Limiter Input	The commanded signal before being profiled by the command limiter.

Temperature

Value	Definition
Drive Temp.	The baseplate temperature of the drive. This value will remain at a constant value of 25°C for FlexPro drives that do not have the appropriate temperature sensor.
Motor Temp.	The calculated motor temperature after being measured on the selected input and scaled according to the specified scaling value.

Torque

Value	Definition
Torque Measured	The torque applied by the motor. This value is calculated from measured current, as delivered to the motor from the drive, and the motor torque constant entered in the Motor Data window.

Drive

Value	Definition
Drive Position	The position as measured by the drive in counts.
Drive Velocity	The velocity as measured by the drive in counts per second.
Raw ADC One	The full scale raw value of the ADC used for Analog Input 1
Raw ADC Two	The full scale raw value of the ADC used for Analog Input 2
Raw ADC Three	The full scale raw value of the ADC used for Analog Input 3
Raw ADC Four	The full scale raw value of the ADC used for Analog Input 4

Feedback

Value	Definition
Primary Feedback	This signal is used by the drive for commutation purposes, and may differ from the measured position. For determining measured position, reference the Position Measured signal.

Interface Input

Value	Definition
Interface Input	The decimal value read from the interface input.

Deadband Input

Value	Definition
Deadband Input	The commanded input before deadband is utilized. Measured in units of current, velocity, or position depending on configuration.

PWM Input

Value	Definition
PWM Duty Cycle	This represents the duty cycle of the input when the drive is configured for PWM as a command.

PLS

Value	Definition
PLS Input	The value for the position signal configured as the source PLS.
PLS Pulse 1 State	This is the value corresponding to the state of the PLS Pulse 1 output.
PLS Pulse 2 State	This is a value corresponding to the state of the PLS 2 output.

Capture

Value	Definition
Position Capture	The value of the measured position when an index is detected for the encoder configured as the Position Feedback Source.

A.7 Drive Status






The Drive Status panel shows drive events (current and history) and is a useful troubleshooting diagnostics tool. Click on the Drive Status tab in the Status Panel to view the Drive Status information.

The Drive Status pane shows data in three categories:





- Drive protection
- System protection
- System Status

For a description of drive events and recommended troubleshooting methods, see [“Events and I/O Descriptions and Troubleshooting Methods” on page 121.](#)

Use the icons at the top of the pane to select viewing options.

Icon	Name	Description
	Expand All	Show all sub-categories.
	Collapse All	Hide all sub-categories.
	Reset Events	Clear the Drive Status window of any history events.
	Show Inactive	Show or hide the inactive status events.
	Show History	Show or hide the status history events.



Event States

Icon	Name	Description
	Active	An event that is active but not assigned to an action. This includes events assigned to No Action in the Event Manager window and pure status events that cannot be assigned an action.
	Disabling Event	An event that is active and assigned to an action. An action either inhibits motion partially or disables motion completely according to the action assigned in the Event Manager window.
	History	An event which is not presently active, but was active at some point after the last time the drive was powered on or the last time the Reset Events button was used.
	Inactive	An event that is not presently active, and has not been active since after the last time the drive was powered on or the last time the Reset Events button was used.

A.8 Critical Event Activity

The Critical Event Activity window is a list of drive protection events along with the time they occurred. The critical event activity window contains entries such as Short Circuit and Current Overshoot.



Click on the Critical Event Activity tab to view the Critical Event Activity information.

Icon	Name	Description
	Refresh	Refresh the Event Activity log.
	Export	Export the Event Activity log to a text file.

A.9 Event Counters

Lists the total operating time of the drive and the number of times faults have occurred since the drive has been in operation.

Click on the Event Counters tab to view the Event Counters information.

Icon	Name	Description
	Refresh	Refresh the Event Counter values.
	Export	Export the Event Counter values to a text file.



Note


Event Counters automatically stores to the drive approximately once every nine minutes. If the drive power is shut off within this time frame and a manual store to NVM is not performed, the counter will not be incremented.

B Current Limiting

This topic explains current limiting for digital servo drives. The basic concepts of current limiting are introduced first, followed by a detailed explanation of some underlying formulas.

B.1 Understanding the Limit Envelope

Digital drives limit current output according to a well-defined software and hardware current limit envelope. These envelopes consist of Peak Current, for a specified amount of Peak Current Time, followed by a foldback to Continuous Current for an amount of time specified by the Foldback Time Constant.

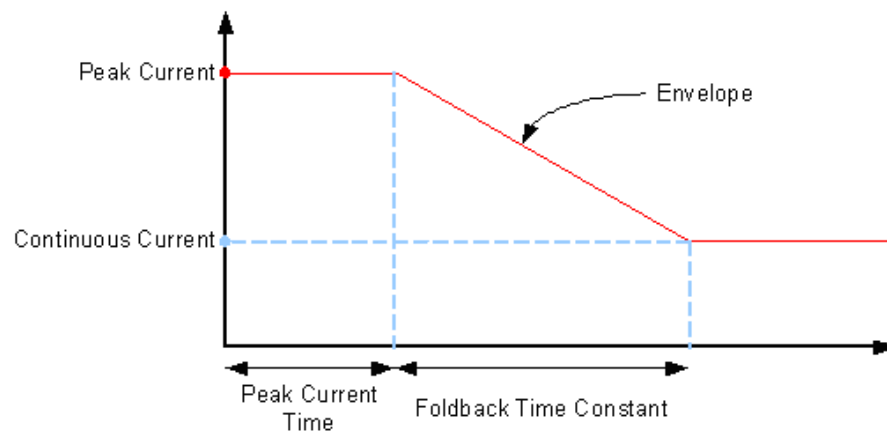

Foldback & current limit envelope

1. The current limit envelope is shown in red.
2. You use drive setup software to configure the software envelope while the hardware envelope is fixed and defined by drive hardware limitations.
3. The Peak Current Time and Foldback Time Constant of the hardware envelope is the same for all drives, fixed at 2 and 10 seconds, respectively. The current values, however, depend upon the hardware with Peak Current and Continuous Current always equal to the maximum peak and continuous current rating of the drive.

The drive always compares each point on the user specified software envelope against each point on the hardware envelope and takes the lesser of the two to generate the actual application envelope. An example of this, where the hardware envelope almost entirely overrides the software envelope, is shown in Table 1. In this example, a constant 100% peak current command (shown in white) was given to the drive. Because, beyond the first two seconds, the hardware envelope (2 seconds Peak Current Time and 10 second Foldback Time Constant) is less demanding than the software specified envelope (65 second Peak Current Time and 65 second Foldback Time Constant), hardware current limiting is applied.

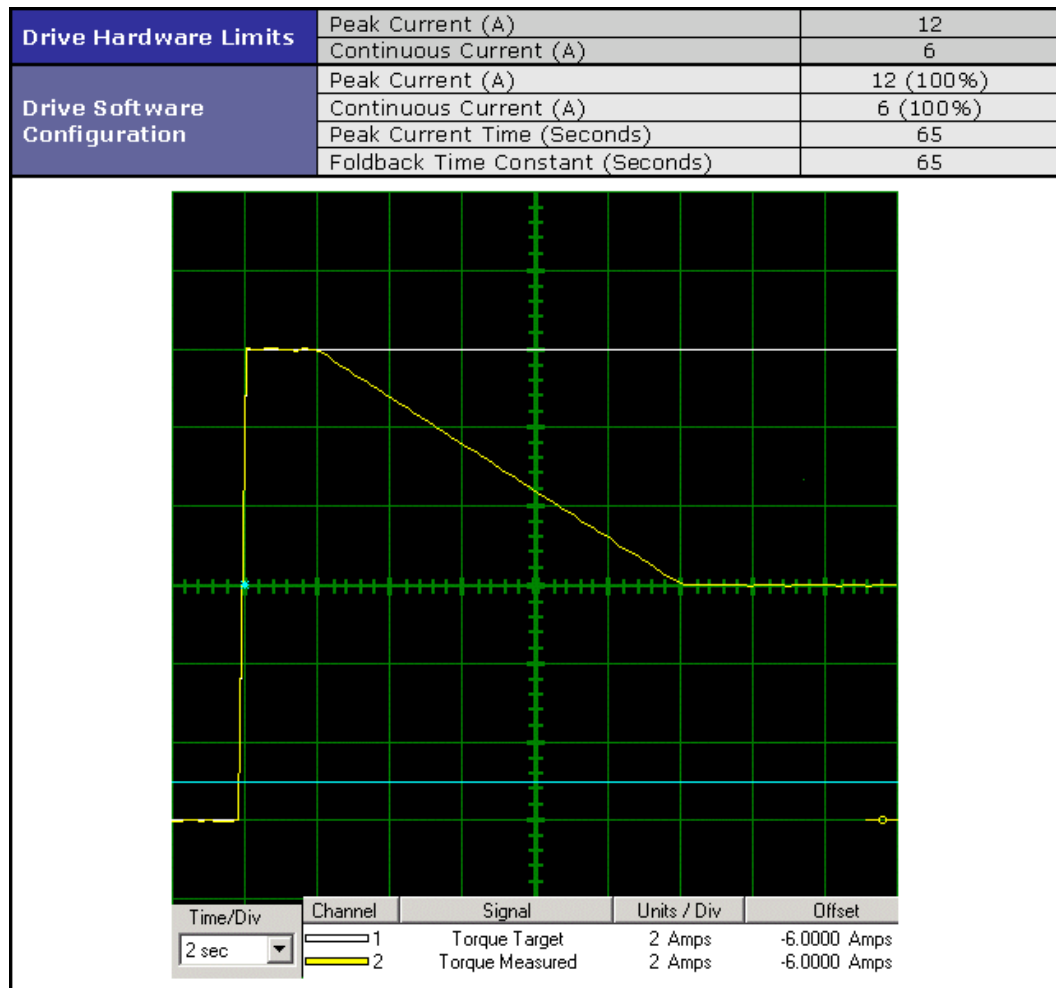


Table 1

In order to have the software envelope entirely hold true, it must be specified such that it remains equal to or within the hardware envelope of the drive. Table 2 shows an example of a software configuration that will hold true in application (i.e. not be overridden by hardware limitations). For convenience, the drive hardware envelope has been superimposed (in red) on the image of Table 2.

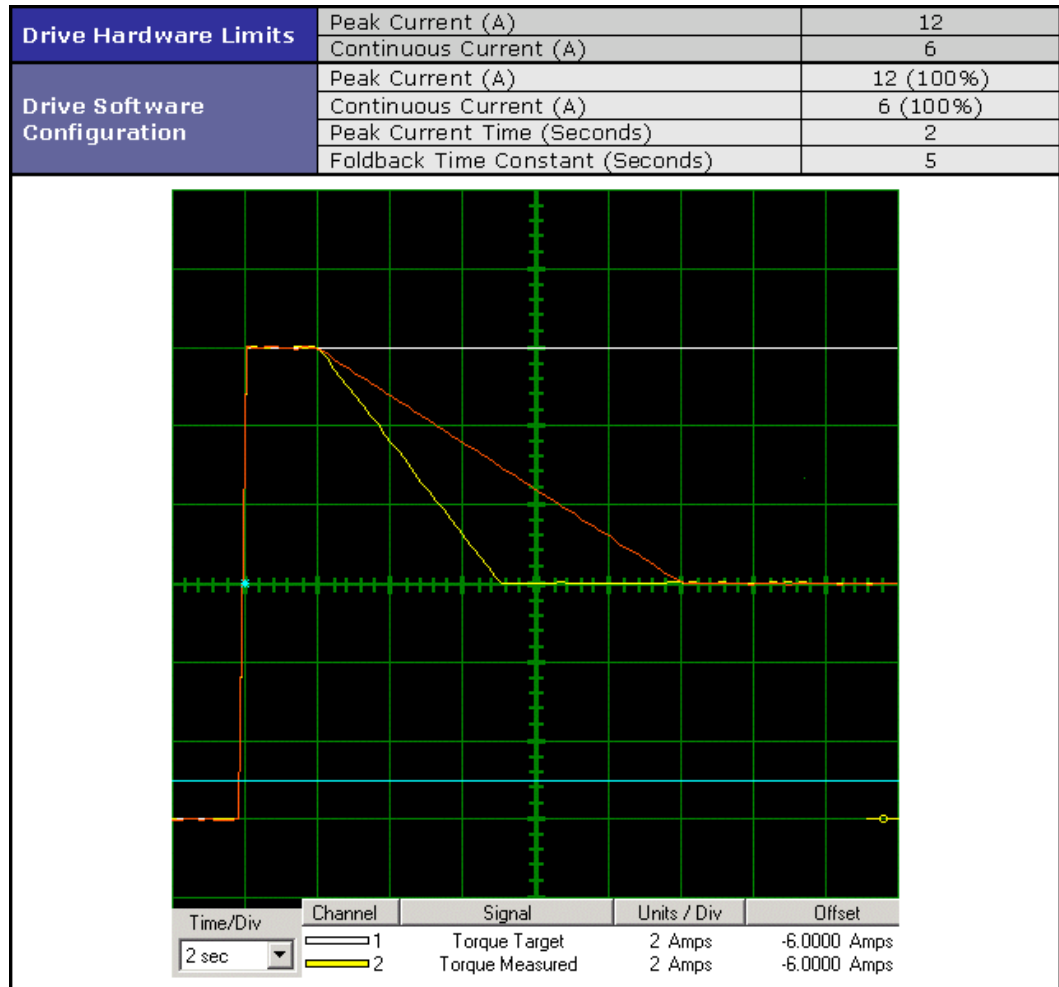


Table 2

On the other hand, Table 3 shows the result of a user configured software envelope that falls outside of the allowed hardware envelope. The image in Table 3 shows how the drive will follow the specified software envelope up until it intersects the hardware envelope.


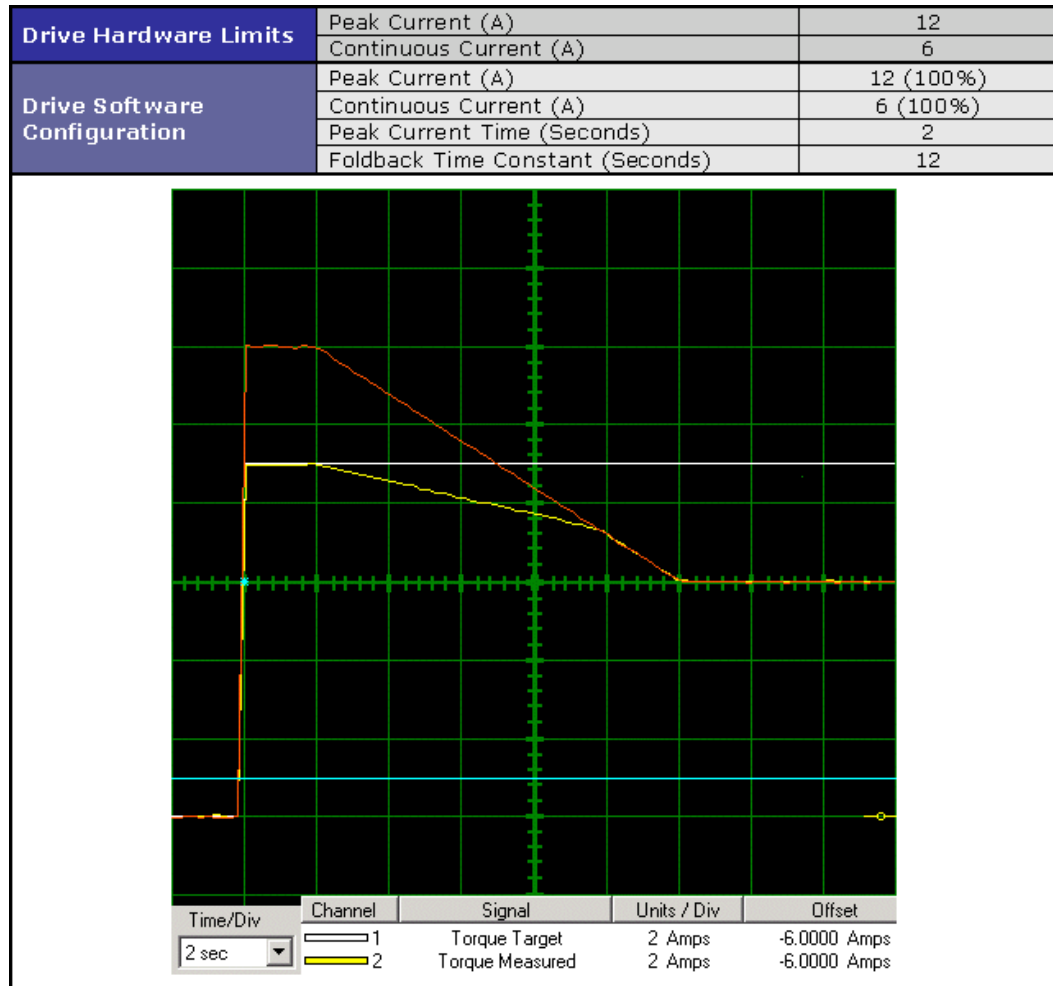


Table 3

B.2 Current Limiting Algorithm

In order to understand the current limiting algorithm used by digital servo drives, it is necessary to first understand the different current limiting regions. The graph in [Figure B.1](#) breaks the available current into three different regions.

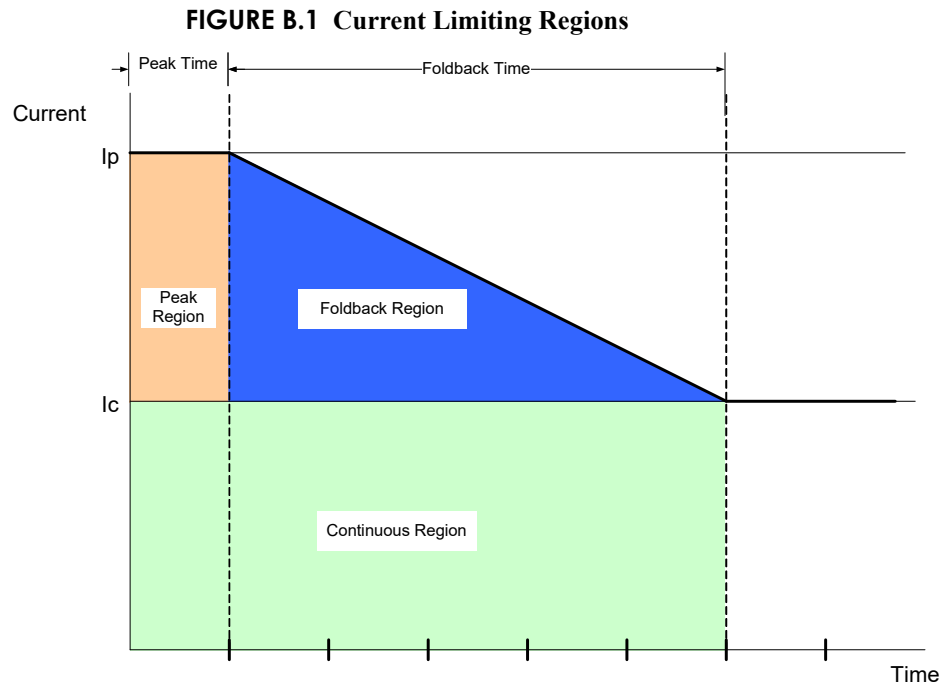

- **Continuous Region:** The commanded current is less than or equal to the continuous current limit. The available current is equal to the commanded current.
- **Peak Region:** The commanded current is between the continuous and peak current limits. The available current is equal to the commanded current for a limited time (Peak Time).
- **Foldback Region:** Commanded current is between the continuous and peak current limits of the drive. The available current is less than the commanded current. The available current decreases over time until it equals the continuous current limit. The rate of this decrease is equal to:


$$Slope = \frac{I_p - I_c}{t_f}$$

I_p	Peak current limit
I_c	Continuous current limit
t_f	Foldback time

B.2.1 Time-Based Peak Current Limiting


The full peak value of current is available to begin with. When a current command is equal to the peak current limit, the current begins to foldback to the continuous limit after T_p , following the same slope as given in Figure B.1 on page 105. Once the available current has reached the continuous current limit after t_f , the available current will be limited to the continuous current limit until the commanded current is dropped below the continuous level.

FIGURE B.2 Time-Based Peak Current Limiting

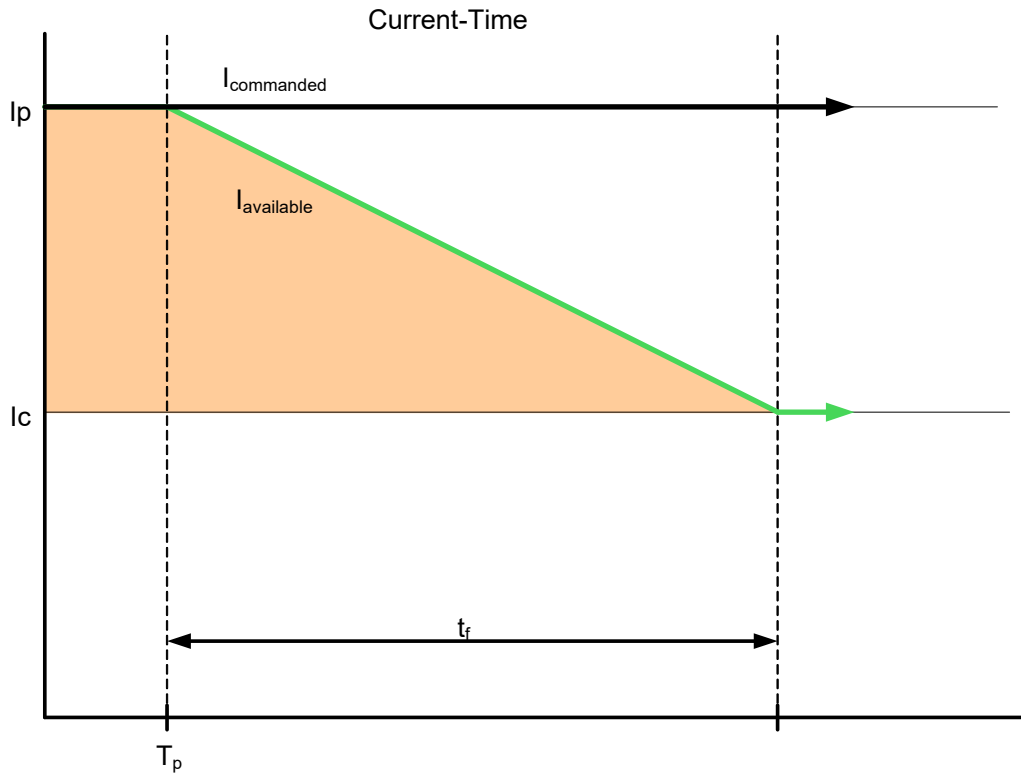

B.2.2 Time-Based Non-Peak Current Limiting

When the commanded current is between the peak and continuous current limits, the available current will begin to foldback at the intersection with the slope from [Figure B.2 on page 106](#). The larger the commanded current, the sooner the available current will begin to foldback.

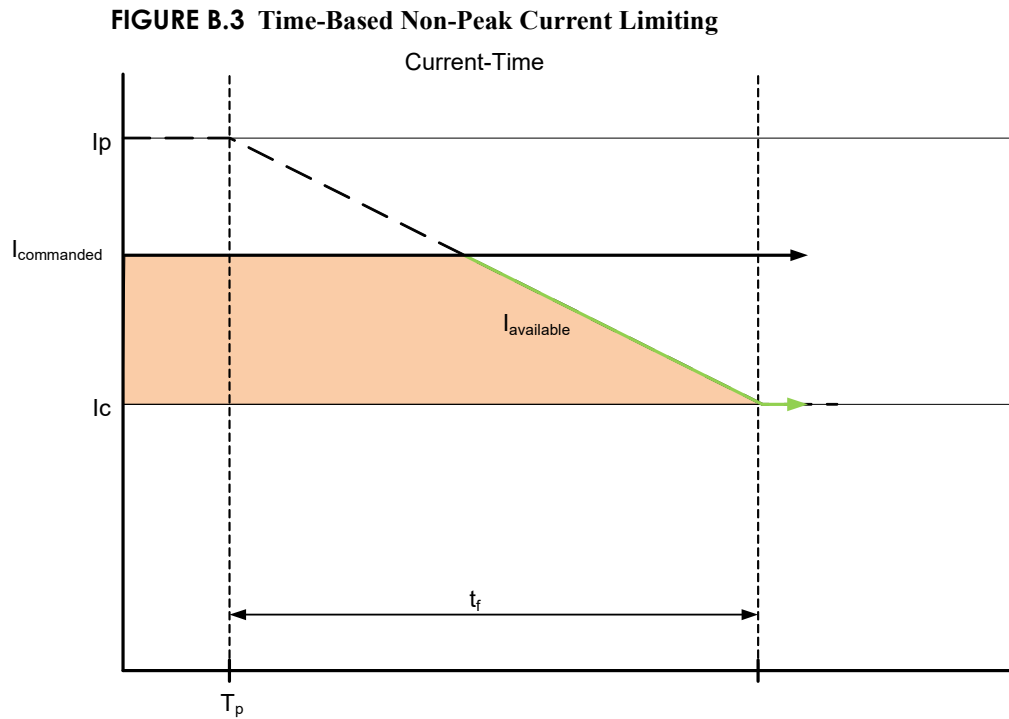

B.2.3 Time-Based Current Recovery


Initially, the full peak value of current is available. A commanded current above the continuous level causes the available current to foldback to the continuous level as shown in the first graph of Figure B.4. When the commanded current drops below the continuous current limit value (A_1 in the first graph), the available current will then begin to recover along the slope of the foldback line towards the peak current level, as shown in the second graph of Figure B.4. The relationship between the commanded current and the recovered current is given as:

$$A_2 = \frac{1}{2}A_1$$

Using this relationship, you can calculate the amount of time recovered, Δt , by using the following equation:

$$\Delta t = \frac{A_1}{2(I_p - I_c)}$$

FIGURE B.4 Time-Based Current Recovery - Foldback and Commanded Current

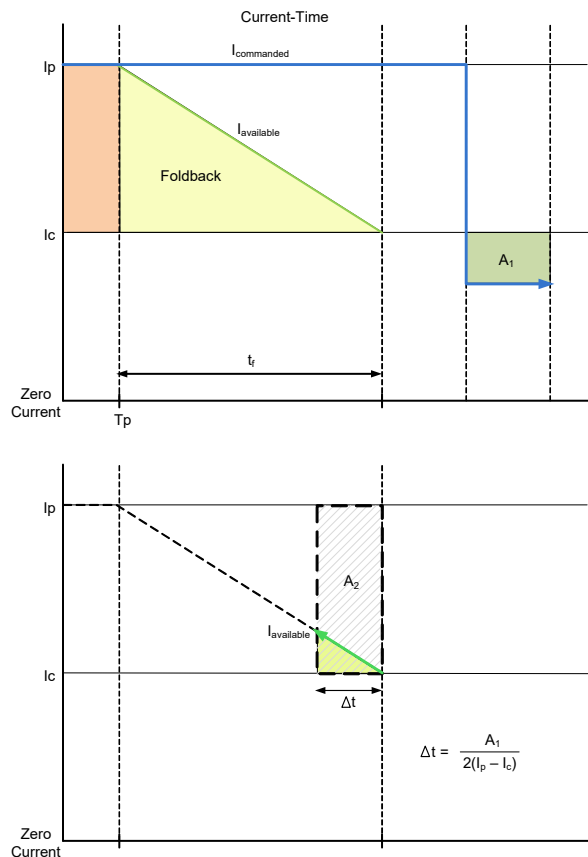


Note that current must be commanded below the specified continuous value to start recovering from a foldback condition.

B.2.4 Charge-Based Peak Current Limiting

The charge is full to begin with. When a current greater than the continuous current limit is commanded, the charge begins to decay. The loss of charge is determined by the area under the curve as shown in Figure B.5. The larger the command, the faster the charge will decay. When the charge decreases to zero, the available current will be limited to the continuous current limit until the charge is restored.


FIGURE B.5 Charge-Based Peak Current Limiting

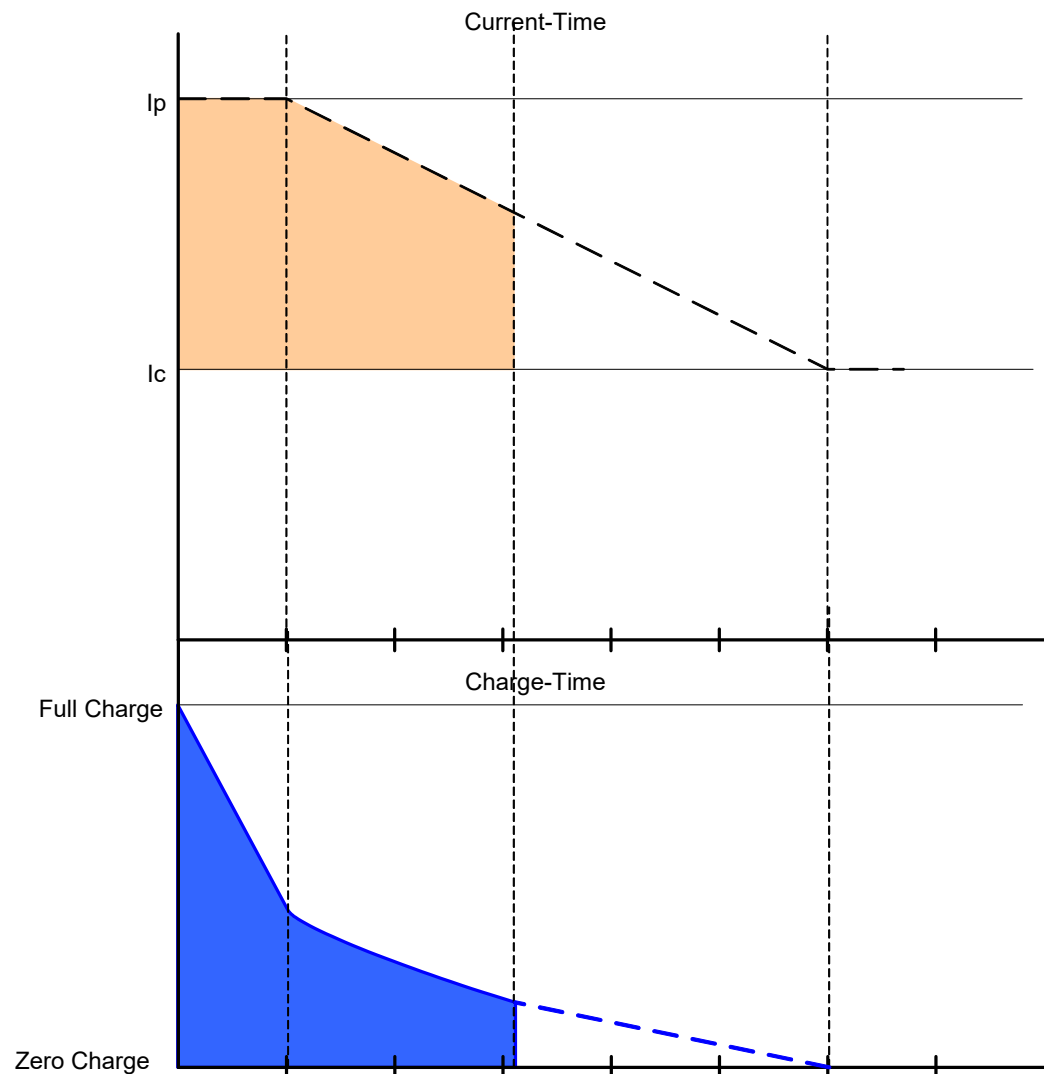

B.2.5 Charge-Based Non-Peak Current Limiting

When the commanded current is between the peak and continuous current limits, the commanded current will be available for a longer period when compared to limiting at peak command. Note that the slope of the line during foldback is the same for both cases.


FIGURE B.6 Charge-Based Non-Peak Current Limiting

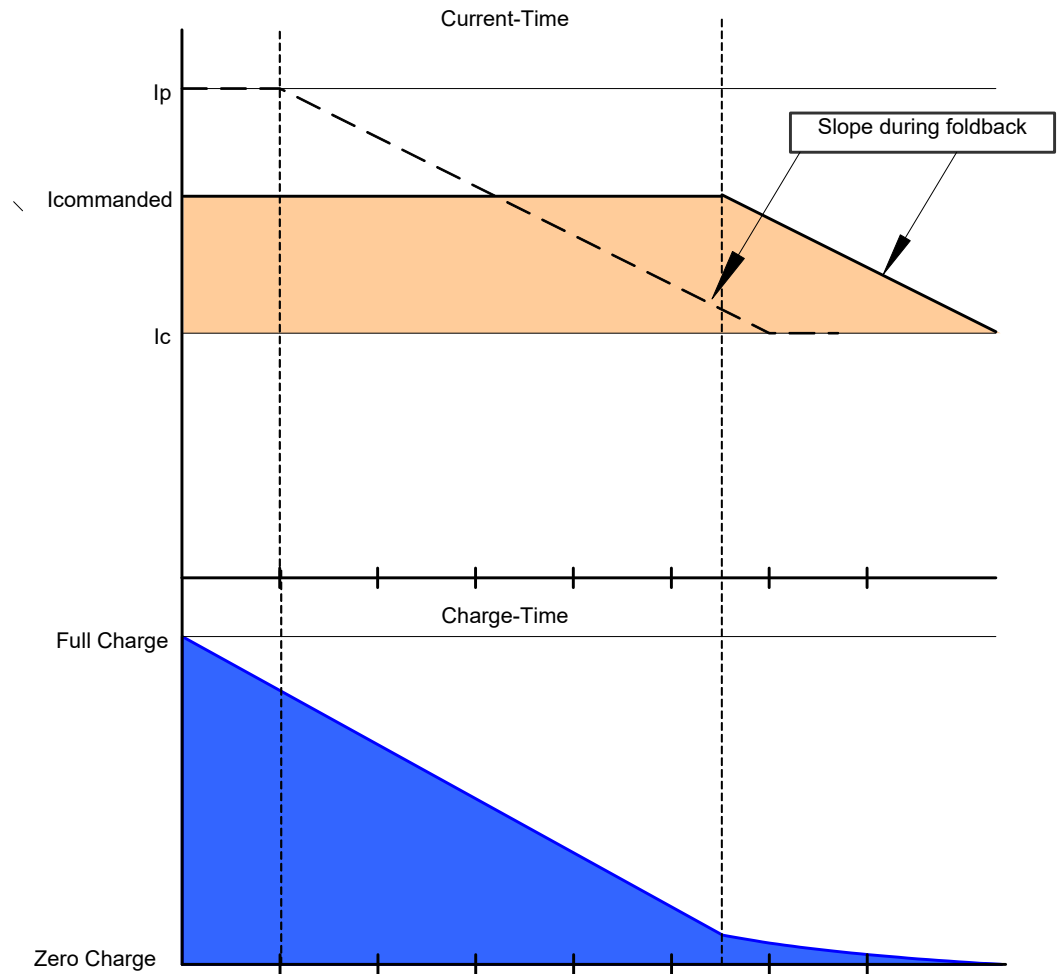

B.2.6 Charge-Based Current Recovery

After losing some value of charge, the charge may be recovered when the commanded value is dropped less than the continuous current limit. The amount of charge recovered depends on the magnitude of the commanded current and the amount of time in which it is commanded. The amount of charge recovered can be calculated by measuring the area within the curve as shown during the charge recovery phase in Figure B.7.

FIGURE B.7 Charge Recovery

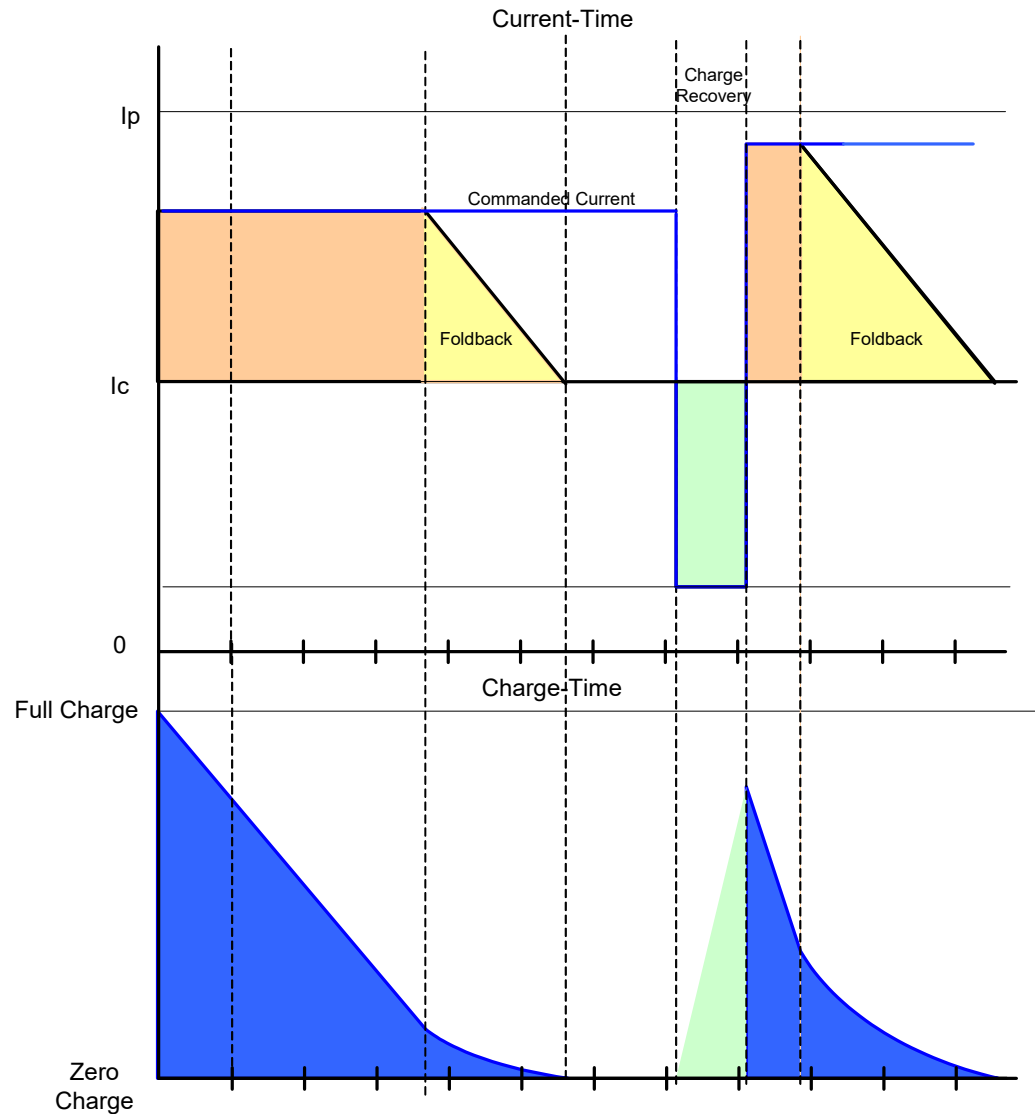


B.2.7 RMS Current Scaling

RMS Current Scaling uses the charge-based algorithm described above. The only difference is the value of the continuous current the drive is capable of outputting. The continuous RMS limit can be used when the motor is moving so that the electrical cycle frequency is greater than the upper frequency assigned to that drive. The upper frequency is typically around 5Hz or 150 RPM for a 4-pole motor. The continuous RMS value is the continuous DC value multiplied by the square root of two.

$$I_{rms} \equiv \sqrt{2} \cdot I_{dc}$$

When the electrical cycle frequency drops below the upper frequency, the continuous current drops below the RMS value. When the motor is moving at slow speeds, the continuous current is equal to the DC value of the current.

FIGURE B.8 RMS Current Limiting

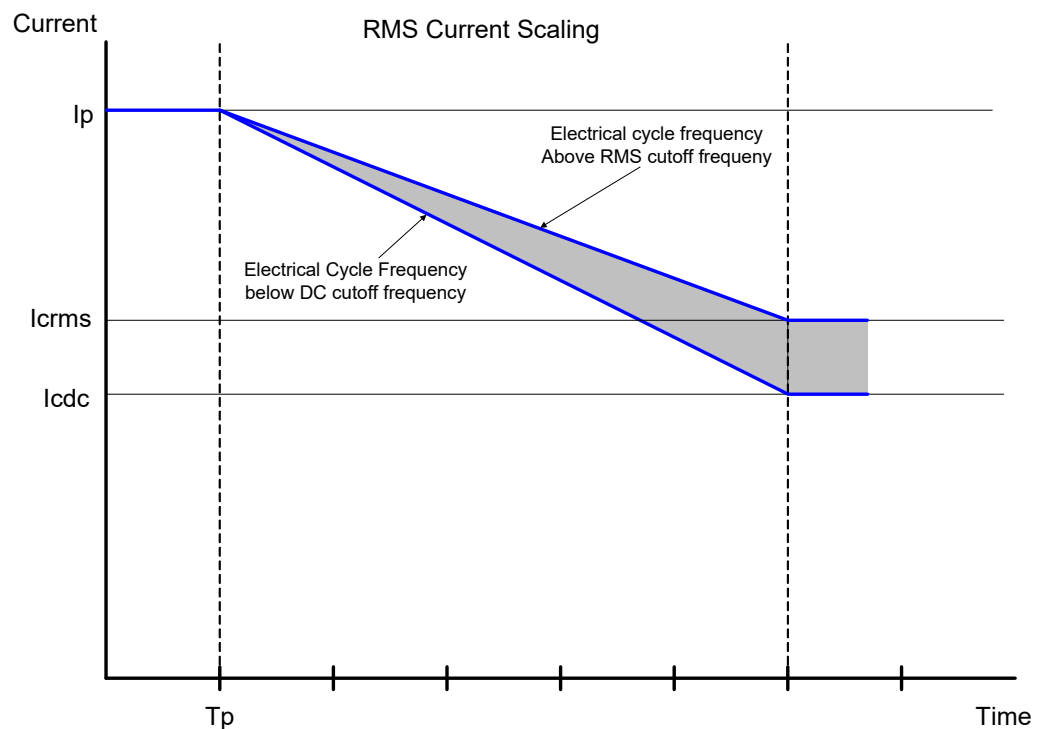

B.3 Calculating Current Limits

Availability of output current greater than continuous current depends on the level of an internal charge reservoir. Upon power-up, the drive begins with a full reservoir having a charge equal to:

$$Q_P = 2(I_P - I_C)(t_P + t_F)$$

Q_P	=	Peak Reservoir Charge
I_P	=	Peak Current
I_C	=	Continuous Current
t_P	=	Peak Current Time
t_F	=	Foldback Time Constant

A drive with a fully charged reservoir can always output peak current. However, any time the target output current goes above the Continuous Current setting of the drive the reservoir begins to discharge. The rate of discharge is given as:

For $I_T > I_C$,

$$2(I_P - I_C)C/s$$

I_T	=	Target Current (units of amps)
C	=	coulombs
s	=	seconds

Once the reservoir discharges past a threshold necessary to output peak current, the amount of current available to output begins to foldback linearly (assuming hardware limits do not override software limits) from I_P to I_C according to the Foldback Time Constant (t_F).

When the reservoir becomes empty, no more than Continuous Current can be output by the drive. The peak current threshold can be calculated as:

$$Q_{Th} = (Q_P \times t_F) / (t_P + t_F)$$

which is simply the amount of charge that would be depleted over a complete current foldback. The reservoir recharges (up to a maximum of Q_P) anytime the target output current drops below the Continuous Current setting. The rate of charge depends upon how far the target output current is below the Continuous Current as given by:

For $I_T < I_C$,

$$(I_C - I_T)C/s$$

As a result, the reservoir will recharge most rapidly when the target output current is zero (no command or drive inhibited).

B.3.1 Example 1: Foldback Current

What is the output current of a drive enabled in the foldback state ($0 < Q < Q_{Th}$) if the drive is configured according to the parameters in “Table 2” on page 103? Assume that the charge reservoir has been tracked since power-up and is known to be half empty ($Q = Q_p/2$) at the instant it is enabled. Because current limits are set within hardware limits the current foldback will be linear and easily represented by the first order equation:

For $0 < t < t_x$,

$$I_F = Mt + I_0$$

I_F	=	the foldback current
M	=	the rate of foldback
t	=	is time (drive enabled at $t=0$)
I_0	=	the initial current output

Starting with I_0 , the initial amount of current available beyond continuous current will be the maximum difference between peak and continuous current ($I_P - I_C$) weighed against the percentage of charge Q available relative to Q_{Th} . Using I_C as a baseline, this is formulated as,

For $0 < Q < Q_{Th}$,

$$I_0 = (I_P - I_C)Q / Q_{Th} + I_C$$

Taking the drive parameters of Table 2, I_0 is calculated as follows.

$$\begin{aligned} I_0 &= (I_P - I_C) \times [Q_p/2] / [(Q_p \times t_F) / (t_P + t_F)] + I_C \\ &= (I_P - I_C) \times (t_P + t_F) / 2t_F + I_C \\ &= (12 - 6) \times (2 + 5) / 10 + 6 \\ &= 10.2 \text{ A.} \end{aligned}$$

The rate of foldback can be formulated as

$$M = (I_C - I_P) / (t_F)$$

Again using the parameters of Table 2, this gives $M = (6 - 12) / 5 = -1.2$. Lastly, we need to calculate the time at which foldback ends. Knowing that foldback always ends with I_C , we can use the line equation we just generated to calculate t_x by solving for time as follows:

$$\begin{aligned} t_x &= (I_F - I_0) / M \\ &= (6 - 10.2) / -1.2 \\ &= 3.5 \end{aligned}$$

Combining all our results, this yields the formula:

For $0 < t < 3.5$,


$$I_F = -1.2t + 10.2.$$

B.3.2 Example 2: Peak Current Recovery

If recovery time is the only interest, there's an easy way to calculate the amount of time required to recover maximum peak current. This is shown in the following example.

How long will it take to recover maximum peak current on a drive which, from power-up, is depleted for t_D seconds, where $t_D < t_P + t_F$?

Assume the current command is initially held at a constant current of I_H , where $I_H > I_C$, for t_P seconds and then held constant at I_L , where $I_L < I_C$, for t_R seconds. These parameters are illustrated as:

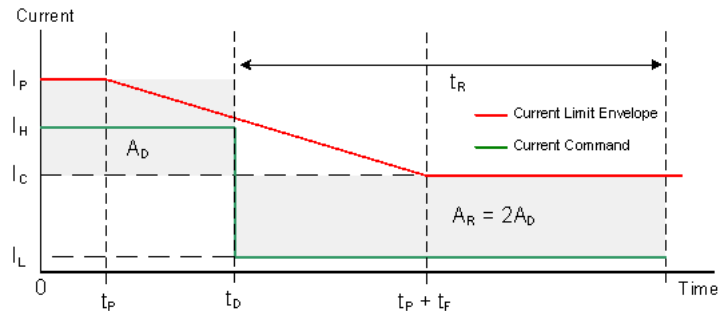

Depletion of the reservoir always happens at the rate $2(I_P - I_C)$ which means the amount of charge depleted over t_D will be $Q_D = 2(I_P - I_C) \times t_D$. Similarly, for a recharge time of t_R , the charge recovered will be $Q_R = (I_C - I_L) \times t_R$. In order to fully recharge the reservoir, the amount of charge depleted must match the amount recovered such that $Q_R = Q_D$ or $(I_C - I_L)t_R = 2(I_P - I_C)t_D$. The final step is to solve for t_R as shown below.

$$t_R = 2(I_P - I_C)t_D / (I_C - I_L)$$


The concept of peak current recovery can be approached a little differently by matching the area of two squares. This method tends to be more intuitive and is easy to visualize. The previous figure illustrates a typical current limiting envelope (in red) with an example current command (in green) and two square areas marked A_D and A_R . Note that the area of A_D is equal to $(I_P - I_C) \times t_D$ while the area of A_R is equal to $(I_C - I_L) \times t_R$. Now, from Example 2, we know that the charge recovered should match the charge depleted. Given this, we can equate areas as given below:

$$\begin{aligned} Q_R &= Q_D \\ (I_C - I_L)t_R &= 2(I_P - I_C)t_D \\ A_R &= 2A_D \end{aligned}$$

Thus, in order to completely recover peak current, the area of the square $(I_C - I_L) \times t_R$ must double the area of the square $(I_P - I_C) \times t_D$.

Control Loop Architecture


The following diagram shows how the various PID and feed-forward terms are implemented in the control loop for Position around Velocity around Current (Torque) tuning. Other drive configurations are possible as well.

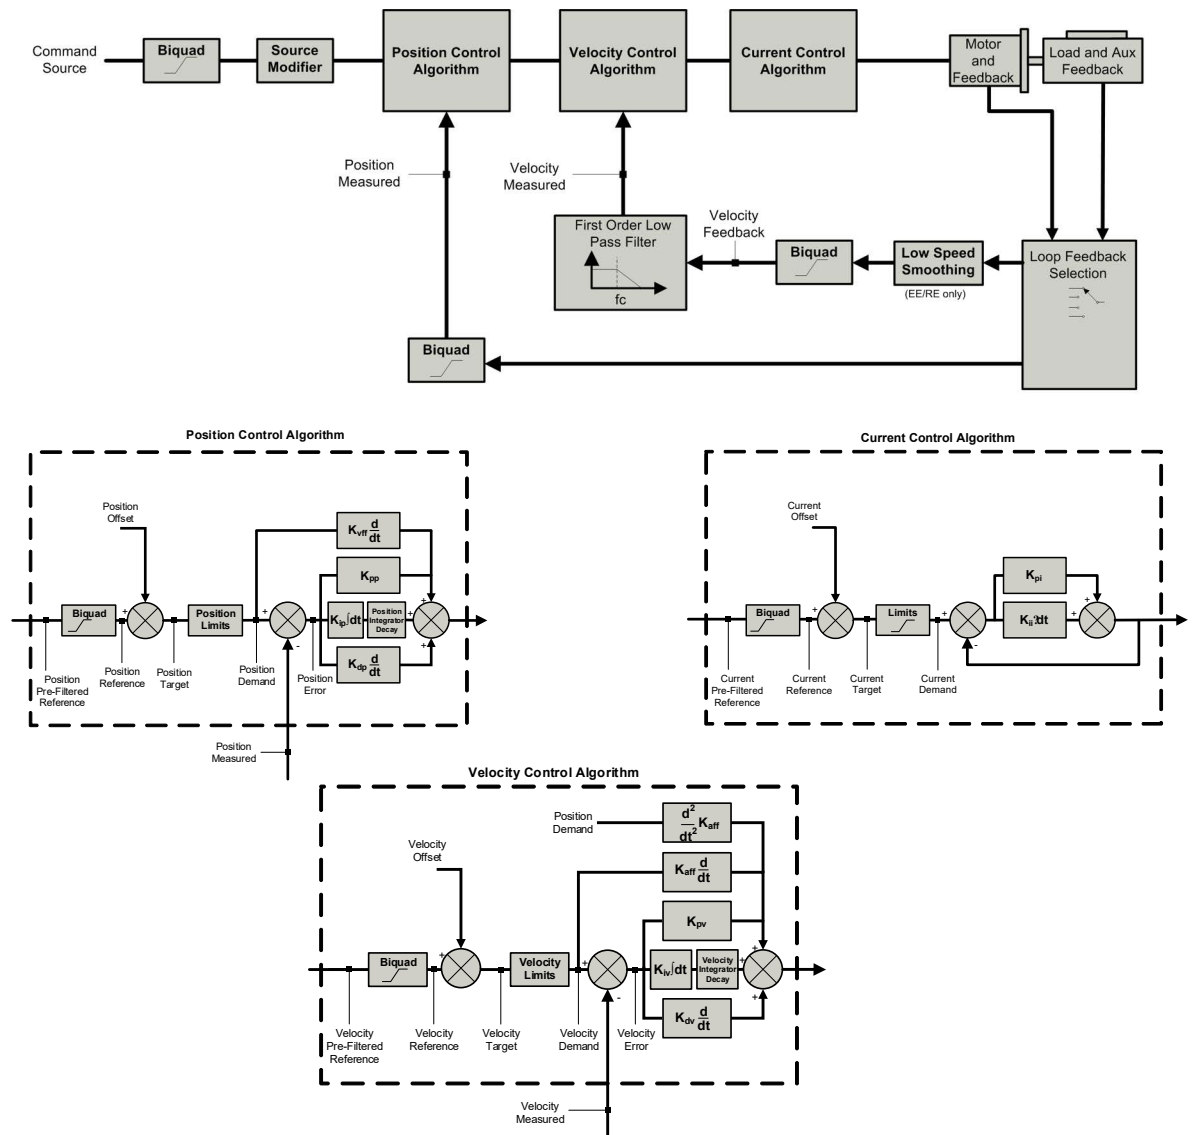



Filtering Velocity Feedback


The velocity loop feedback filter uses a single pole low-pass filter to attenuate changes in velocity feedback. This helps to avoid responding to high frequency “spikes” in velocity, resulting in a smoother response to velocity commands.

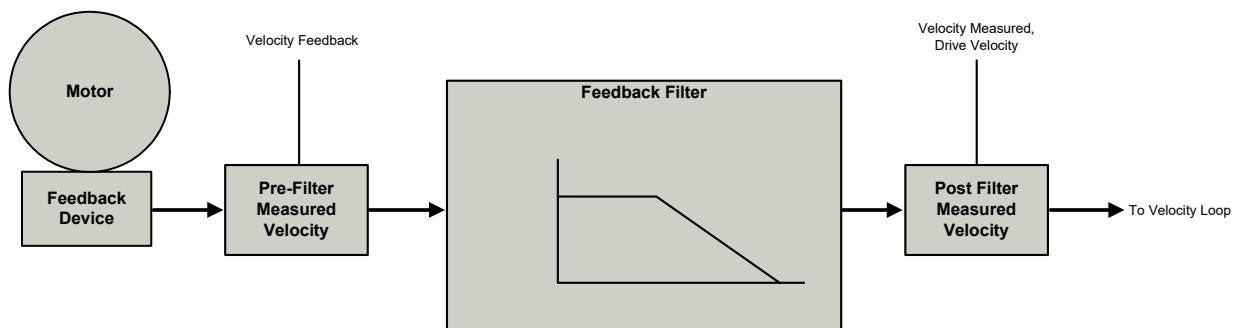

D.1 Effects of the Feedback Filter


The figures below show how the filter affects measured velocity and, in turn, motor response. For this example, a 10Hz, 100,000-count/sec sine wave is commanded by the drive. This will be considered the worst-case move required for the application. The motor uses a 2000 line encoder, and has a low inertia load coupled to the motor shaft. The current loop and velocity loop gains are tuned aggressively for a fast response.

D.1.1 Cutoff Frequency Set to Infinite

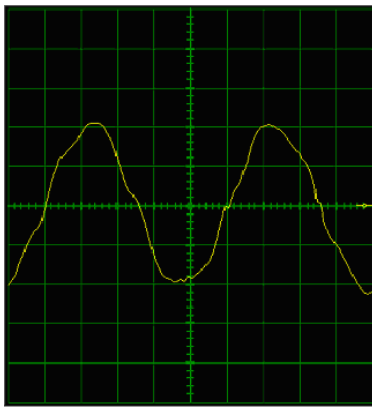


With no feedback filter, the velocity measured and velocity feedback are equal. The velocity loop responds instantly to all measured changes in velocity. The resulting velocity profile is distorted. A loud audible noise is heard from the motor.

D.1.2 Cutoff Frequency Set to 300Hz

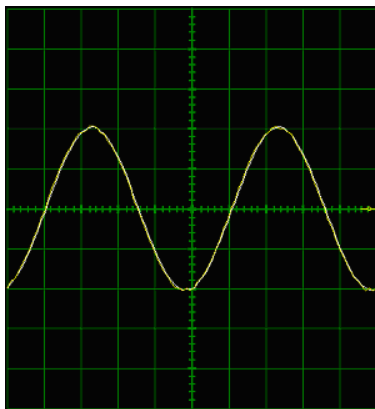


At this level, the audible noise is no longer present and the response is smooth. The two waveforms are nearly identical. This is the optimum setting because it results in no distortion and no phase lag.

D.1.3 Cutoff Frequency Set to 50Hz

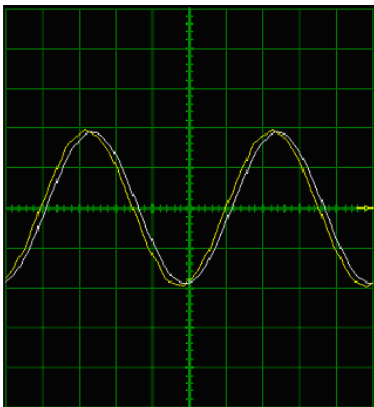

At this level, the response is still smooth, but phase lag is apparent as the two waveforms begin to separate.

D.1.4 Cutoff Frequency Set to 10Hz

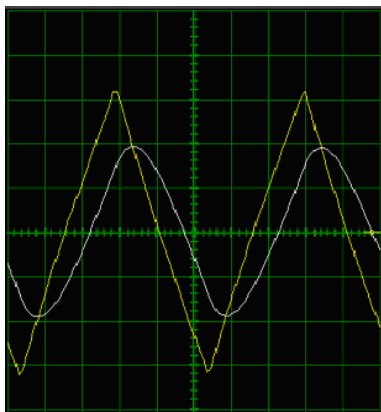

With the cutoff frequency set to 10Hz, there is an obvious difference between the two waveforms. The response is also noticeable in the motor shaft. The phase lag results in the motor motion becoming unstable.

D.2 Conclusion

The velocity loop cutoff frequency filter allows you to tune with higher velocity loop gains, which results in a faster response. Most applications will benefit from a velocity feedback filter cutoff frequency between 50Hz and 1500Hz. Too high of a cutoff frequency may result in audible noise from the motor. Too low of a cutoff frequency will cause significant phase lag and may lead to instability. The cutoff frequency should be adjusted during velocity loop tuning. For the worst-case move, the motor should follow the command smoothly, and there should be little or no phase lag between the velocity feedback and velocity measured traces.

E.1 Setup Software Safety Actions

The following table provides a brief explanation of how certain safety actions are effected in the drive hardware and software configuration.

Drive Safety Action	Description
Disable Bridge	No power is delivered to the motor. Motor is allowed to move freely.
Dynamic Brake	Motor leads are shorted together internally. The drive regulates the switching of the bottom side power devices to protect the motor from over current.
Apply Brake	This event action activates the Brake Active event which is typically mapped to a programmable digital output. This output is used to indicate when an external brake should be active in a system.

E.2 Potential External System Errors

The following is a list of potential non-drive-related system errors, and how the setup software and drive are equipped to automatically protect drive hardware.

System Error	Drive Action
Loss of Logic Power	The bridge will be disabled. The brake output device will open, engaging the brake.
Loss of Supply and Logic Power	The bridge will be disabled. The brake output device will open, engaging the brake.
Logic Power is too Low	The bridge will be disabled. The brake output device will open, engaging the brake.
Communication Connection is Disconnected	Results in a "Communication Channel Error", which should be configured by the user for Dynamic Brake (or Disable Bridge). The brake output device will open, engaging the brake. The timeout value and host watchdog must be properly configured by the host/controller.
Communication Signal Times Out	Results in a "Communication Channel Error", which should be configured by the user for Dynamic Brake (or Disable Bridge). The brake output device will open, engaging the brake. The timeout value and host watchdog must be properly configured by the host/controller.
Encoder/Halls Cable is Disconnected	If Hall Sensors are disconnected, will result in a "Hall State Error". The drive will fail Phase Detect on power up, and result in a "Phase Detect Error". If the encoder cable becomes disconnected while motion is commanded, a following error or continuous current foldback event will result, depending on the configuration and command. Faults should be configured by the user for Dynamic Brake or Disable Bridge.
Faulty Encoder Signals	Results in a "Phase Synchronization Error", which should be configured by the user for Dynamic Brake or Disable Bridge.
Disconnected Motor Wires	The drive does not directly detect that the motor wires are disconnected. The "Current Loop Saturated" and following error faults are secondary errors that are generated. It is recommended to use the faults as a possible indication of a disconnected motor.

E.3 Events and I/O Descriptions and Troubleshooting Methods

The following is a list of possible drive events and I/O signals, a brief description of the cause, issue, or behavior, and some recommended actions to take to remove the event if necessary.

Event	Description	Likely Cause	Recommended Actions
Absolute Position Valid	An absolute motor position has been established by one of the drive's positioning methods.	1) A homing routine has been initiated and completed successfully 2) An absolute position has been established by execution of the Set Position command 3) Phase Detect routine has completed successfully (only applies to drives with absolute feedback devices)	Status Only, no action needed.
At Command	Velocity Mode: The measured velocity has reached the target velocity, within the At Velocity Window. Position Mode: The measured position has reached the target position, within the In-Position Window. Torque Mode: The measured current is within range of the target current. In general, the At Command window will be 1/100 of the hardware peak current limit.	The drive has reached the commanded position within the range of the At Command window.	Status Only, no action needed.
Brake Active	A drive event may be configured to activate an external brake. This is accomplished by assigning the event action and by assigning a digital output to "Apply Brake".	The drive's Apply Brake action is enabled. If assigned to a digital output, the digital output will be active also. This occurs when an active event has its action assigned to Apply Brake. Note: SynqNet drives control the brake through the SynqNet interface.	Check all active events. Check the settings for the event actions to see which event actions are assigned to Apply Brake.
Bridge Active	The drive's power bridge is enabled.	The drive has been enabled.	Status Only, no action needed.
Capture Complete	The Capture routine has completed.	The High Speed Capture function has been initiated and completed successfully.	Status Only, no action needed.
Command Limiter Active	The command is currently being profiled by the Command Limiter.	The Command Limiter has been enabled.	Status Only, no action needed.
Communication Channel Error	The drive has experienced an interruption of communication on the communications interface. Note: Normal setup software communication interruption/loss will not trigger this error. RS485/232: If the drive is configured via index 0x04 for heartbeat this error will be thrown if the consumer heartbeat time is not reset within the defined time interval. CANopen: If the drive is configured for node / life guarding, the event will be thrown if the drive does not receive a node guard pulse within the specified time interval. If configured for heartbeat, the drive will throw the error if the host fails to reset the timer within the specified time interval. EtherCAT: The EtherCAT RPDO watchdog has been activated. This occurs when EtherCAT state machine is operational and the drive has not received an RPDO in more than 10 cycles. If configured for heartbeat, the drive will throw the error if the host fails to reset the timer within the specified time interval.	1) Communication cable has been disconnected 2) Host software has not been properly initialized	1) Check communication cable connections 2) Check to ensure host software is properly initialized.
Configuration Select	The active drive Configuration has switched.	A digital input has been configured to switch drive Configurations.	Status Only, no action needed.
Continuous Current Foldback	The drive has been commanded to output greater than continuous current and has folded back to the continuous value. The peak and continuous currents will be either the software or hardware limits. When this event is active, the drive is supplying continuous current.	The drive current has folded back to the continuous value.	This is application dependent. Default event action is 'no action' which is informational only. Can be configured to perform an event action (i.e. disable bridge).
Current Limit Active	The drive is applying current limiting based on the software settings specified, or is limiting according to the hardware limits of the drive.	The drive is being commanded to output current that exceeds software or hardware limits.	This is application dependent. Default event action is 'no action' which is informational only. Can be configured to perform an event action (i.e. disable bridge).

Event	Description	Likely Cause	Recommended Actions
Current Loop Saturated	The PWM output is at maximum duty cycle, and cannot deliver any more current under the given conditions.	1) The bus voltage is insufficient for a given motor / current level 2) The motor's resistance is high 3) The motor leads are not properly connected 4) The logic supply voltage is outside of the specified tolerance for the drive	1) Make sure there is sufficient bus voltage 2) Make sure motor resistance is not high 3) Turn the power off and make sure the motor leads are properly connected. 4) Measure the logic supply voltage and compare to the allowed logic supply tolerance for the drive
Drive Internal Error	The drive has experienced an internal error while executing its firmware.	Defective drive	Contact technical support
Drive Over Temperature	The drive has reached its maximum allowed temperature. The drive will disable when this occurs, and will be re-enabled when sufficiently cooled.	1) Inadequate heatsinking / ventilation 2) Excessive and repeated overcurrents	1) Ensure adequate heatsinking / ventilation 2) Ensure that motor exceeds minimum inductance requirements
Drive Reset	The drive's internal processor was reset. NOTE: This event will occur every time the drive is power cycled.	1) The drive was power cycled 2) A glitch in power caused a processor reset	1) None if the drive was power cycled (status only) 2) Check logic power coming to drive.
Dynamic Brake Active	A drive event may be configured to activate the dynamic brake. This is accomplished by assigning the event action and by assigning a digital output to "Dynamic Brake".	The drive's Dynamic Brake action is enabled. If assigned to a digital output, the digital output will be active also. This occurs when an active event has its action assigned to Dynamic Brake.	Check all active events. Check the settings for the event actions to see which event actions are assigned to Dynamic Brake.
Feedback Sensor Error	1) For a resolver drive, indicates that the resolver signals are excessively noisy or outside of the range required by the drive. 2) For sin/cos indicates the sin/cos signals are excessively noisy or the product of the sin and cos signals is outside of the range required by the drive. Note that Feedback Sensor Error does not trigger for Brush type motors using Sin/Cos feedback.	Resolver: 1) Resolver not connected 2) Faulty grounding / shielding of feedback connector 3) Resolver specs don't match drive Sin/Cos: 1) Sin/Cos encoder not connected 2) Faulty grounding / shielding of feedback connector	Resolver: 1) Check resolver connection 2) Check grounding / shielding of feedback connector 3) Check resolver specs against drive specs Sin/Cos: 1) Check the amplitude of sin/cos signals coming into drive 2) Check grounding / shielding of feedback connector
Gain Select	The active drive Gain Set has switched.	A digital input has been configured to switch Gain Sets.	Status Only, no action needed.
Hall State Error	The drive is seeing an invalid Hall state on the Hall sensor inputs. Note that this event is only valid when Hall sensors are used. Invalid Hall states are as follows where each binary digit represents a Hall sensor input. Hall sensor inputs are either high (1) or low (0). 120 degree phasing -111 (7 in decimal representation) -000 (0 in decimal representation) 60 degree phasing -101 (5 in decimal representation) 010 (2 in decimal representation)	1) Broken or disconnected Hall sensor(s)	1) Check hall sensor wiring 2) Move the motor by hand and verify that each of the individual Hall sensors are changing. If one or more of the Hall sensors are not changing, this could mean the Hall sensor is bad.
High Speed Capture	The High Speed Capture Function has been activated.	The drive was commanded to execute a High Speed Capture either through a digital input, network interface, or the setup software.	Status Only, no action needed.
Home Active	The drive's internal homing routine is active.	Homing was invoked either through a digital input, network interface, or the setup software.	Status Only, no action needed.
Home Done	The drive's internal homing routine has finished successfully.	Homing was invoked and completed.	The start homing command (invoked with digital input, network interface, or setup software) can now be removed.
Home Execute	The Homing routine has been activated.	The drive was commanded to execute a Home command either through a digital input, network interface, or the setup software.	Status Only, no action needed.
In Home Position	The motor is in the home position. The home position is defined by the Home Position Value and In-Home Position Window in the Position Limits tab. This event is active when the measured position of the motor is equal to the Home Position value within the window specified by the In-Home Position Window.	The motor is in the home position.	Status only, no action needed.
Index Active	An Index motion task is currently active and has control of the axis. No other motion tasks can be executed while this is active.	The drive was commanded to execute an Index task either through a digital input, network interface, or the setup software.	Status only, no action needed.
Index Busy	An Index motion task is currently active and has control of the axis. No other motion tasks can be executed while this is active.	The drive was commanded to execute an Index task either through a digital input, network interface, or the setup software.	Status only, no action needed.
Index Done	The Index motion task has completed, including dwell time, and no longer has control of the axis.	The drive was commanded to execute an Index task either through a digital input, network interface, or the setup software.	Status only, no action needed.

Event	Description	Likely Cause	Recommended Actions
Index Motion Done	An Index motion task has reached the target position for the task. The axis may still be in motion depending on the system. No other motion tasks can be executed while this is active.	The drive was commanded to execute an Index task either through a digital input, network interface, or the setup software.	Status only, no action needed.
Jog Active	A Jog task is currently active and has control of the axis. No other motion tasks can be executed while this is active.	The drive was commanded to execute a Jog task either through a digital input, network interface, or the setup software.	Status only, no action needed.
Jog Forward	The Jog Forward Task is currently active.	The drive was commanded to execute a Jog Forward task either through a digital input, network interface, or the setup software.	Status only, no action needed.
Jog Reverse	The Jog Reverse Task is currently active.	The drive was commanded to execute a Jog Reverse task either through a digital input, network interface, or the setup software.	Status only, no action needed.
Log Entry Missed	The drive attempted to write to the fault log counter, but was unable to.	An internal error prevented the drive from writing to the fault log counter.	If error persists, contact technical support.
Maximum Measured Position Limit	The measured position has exceeded the maximum value set by software. The Max Measured Position Limit can be found in the <i>Limits and Events > Position Limits</i> tab. NOTE: THE LIMITS ARE DISABLED VIA SOFTWARE BY DEFAULT. VALID ONLY IF 'DISABLE POSITION LIMITS' CHECK BOX IN THE POSITION LIMITS TAB IS UNCHECKED.	The measured position exceeds the measured position limit.	This is application dependent. Default event action is 'no action' which is informational only. Can be configured to perform an event action (i.e. disable bridge).
Maximum Target Position Limit	The Maximum allowed position target (positive direction) defined by software. The Max Target Position Limit can be found in the <i>Limits and Events > Position Limits</i> tab. NOTE: THE LIMITS ARE DISABLED VIA SOFTWARE BY DEFAULT. VALID ONLY IF 'DISABLE POSITION LIMITS' CHECK BOX IN THE POSITION LIMITS TAB IS UNCHECKED.	1) The drive has been commanded to go to a target position value that exceeds the maximum target position	This is application dependent. Default event action is 'no action' which is informational only. Can be configured to perform an event action (i.e. disable bridge).
Minimum Measured Position Limit	The measured position has exceeded the minimum value set by software. The Min Measured Position Limit can be found in the <i>Limits and Events > Position Limits</i> tab. NOTE: THE LIMITS ARE DISABLED VIA SOFTWARE BY DEFAULT. VALID ONLY IF 'DISABLE POSITION LIMITS' CHECK BOX IN THE POSITION LIMITS TAB IS UNCHECKED.	The resulting measured position exceeds the measured position limit.	This is application dependent. Default event action is 'no action' which is informational only. Can be configured to perform an event action (i.e. disable bridge).
Minimum Target Position Limit	The Minimum allowed position target (minimum direction) defined by software. The Min Target Position Limit can be found in the <i>Limits and Events > Position Limits</i> tab. NOTE: THE LIMITS ARE DISABLED VIA SOFTWARE BY DEFAULT. VALID ONLY IF 'DISABLE POSITION LIMITS' CHECK BOX IN THE POSITION LIMITS TAB IS UNCHECKED.	1) The drive has been commanded to go to a target position value that exceeds the minimum target position	This is application dependent. Default event action is 'no action' which is informational only. Can be configured to perform an event action (i.e. disable bridge).
Motion Engine Abort	The Motion Engine has aborted a motion task.	The Motion Engine has been stopped via a digital input.	Status only, no action needed.
Motion Engine Error	The Motion Engine is in a fault state.	1) A disabling event may be present that is preventing the bridge from enabling or not allowing motion to occur. 2) The drive may not be homed. 3) An Index or Sequence may be improperly configured.	1) Check the Drive Status panel and the Status Bar to see if any events are causing a disabling action. 2) Run the homing routine. 3) Examine all saved Sequences for flagged errors.
Motion Engine Executing	The Motion Engine is enabled and running a motion task.	The Motion Engine was commanded to run a motion task in the setup software either via the toolbar, a digital input, enable on Power-up, or through the network.	Status only, no action needed.
Motor Over Speed	The motor's measured velocity is higher than the motor overspeed limit set by software. The Motor Over Speed value can be found in the <i>Limits and Events > Velocity Limits</i> tab.	1) The drive is in current mode and the commanded current results in the motor spinning faster than the specified maximum velocity. 2) The limit is set too low 3) Excessive noise on feedback 4) Improper grounding / shielding of feedback cable	1) Make sure motor is connected to load. Do not command a current that will result in the motor spinning too fast. 2) Verify the limit is set properly. 3) Verify electrical noise 4) Verify proper grounding / shielding of motor feedback cable
Motor Over Temperature	A digital input or analog input assigned to be a motor over temperature is signaling the drive that the motor's temperature has been exceeded.	1) The motor has overheated 2) The temperature cutoff defined in software is artificially low 3) The sensor is faulty and/or disconnected	1) Check the motor for overheating 2) Check to ensure temperature cutoff defined in software is correct 3) Check to ensure that motor temperature sensor is not faulty or disconnected
Negative Stop Active	A drive event may be configured to halt motion in the negative direction. This is accomplished by assigning the event action "Negative Stop" to a drive event.	The drive's Negative Stop action is enabled. If assigned to a digital output, the digital output will be active also. This occurs when an active event has its action assigned to Negative Stop.	Check all active events. Check the settings for the event actions to see which event actions are assigned to Negative Stop.

Event	Description	Likely Cause	Recommended Actions
Negative Velocity Limit	The measured velocity has exceeded the negative limit set by software.	1) The magnitude of the velocity target is greater than the Negative Velocity Limit 2) The Negative Velocity Limit is too small for the velocity that is being commanded	This is application dependent. Default event action is 'no action' which is informational only. Can be configured to perform an event action (i.e. disable bridge).
Non-Sinusoidal Commutation	The drive is operating in the non-sinusoidal commutation mode (trapezoidal). Drives with incremental feedback will automatically enter this mode on power-up until the relative position is sensed via hall sensors or a phase detect routine.	1) Drive is configured for a Brushed motor 2) Drive is configured to use only Hall Sensor commutation (trapezoidal) 3) Drive powered up in trapezoidal mode. Relative position has not yet been determined by the drive. 4) A synchronization error resulted in the drive being unable to synchronize properly	1) Status only, no action needed 2) Status only, no action needed 3) Status only, no action needed 4) Check encoder and Hall Sensors or index for noise, or misalignment of Hall Sensors
Over Current	The measured output current has exceeded the Drive's rated current.	1) Inductance of motor is below drive's minimum 2) Noise 3) Current loop is over-tuned	1) Make sure motor inductance is above drive minimum 2) Check system for excessive electrical noise 3) Make sure current loop is not tuned too aggressively.
Over Voltage	The HV voltage (not logic power) is above the maximum HARDWARE specified voltage.	1) Excessive HV power supply 2) Drive drive is experiencing excessive regeneration	1) Ensure that HV voltage is below drive's maximum voltage rating 2) Make sure a shunt regulator is installed and sized to efficiently shunt off regenerative energy.
Parameter Restore Error	The drive encountered an error when reading project file parameters from the drive's non-volatile memory.	1) Corrupt non-volatile memory 2) Defective Drive	1) Reburn firmware 2) Contact technical support
Parameter Store Error	The drive encountered an error when writing project file parameters from the drive's non-volatile memory.	1) Corrupt non-volatile memory 2) Defective Drive	1) Reburn firmware 2) Contact technical support
Phase Detect Active	The drive is going into phase detection mode to determine proper phasing for commutation.	Phase Detect was invoked through a power-up option, digital input, network interface, or the setup software.	Status Only, no action needed.
Phase Detect Done	The phase detection algorithm is complete.	Phase Detect was invoked through a power-up option, digital input, network interface, or the setup software.	Status Only, no action needed.
Phase Detect Error	The drive was unable to correctly determine the proper phasing following a phase detect routine.	1) Phase detect current is excessive 2) Encoder wires broken / disconnected 3) Phase detection motion insufficient	1) Check encoder wiring 2) Check to see if phase detection motion is excessive. Lower current if necessary
Phase Synchronization Error	Indicates the number of counts seen by the drive between synchronization markers was not consistent with what had been determined during AutoCommutation and/or the initial parameters. VALID ONLY IF DRIVE IS COMMUTATING SINUSOIDALLY AND IS USING EITHER INDEX SYNCHRONIZATION OR HALL EDGE SYNCHRONIZATION.	1) The drive is not commutating properly 2) The feedback sensor is faulty 3) Excessive system noise 4) Poor grounding / shielding of feedback cable	1) Check to make sure commutation is established properly using AutoCommutation feature in the setup software a) Check encoder feedback parameters (i.e. line count / rev) b) Check for correct motor pole count 2) Check to ensure that the feedback sensor is operating properly 3) Check for excessive system noise 4) Inspect for poor grounding / shielding of feedback cable.
Position Following Error	The measured position is outside of the position following error window defined in the software. Only valid when drive is in position mode.	The magnitude of the difference between the position measured and the position target is greater than the Position Following Error value	This is application dependent. Can be configured to perform an event action (i.e. disable bridge).
Positive Stop Active	A drive event may be configured to halt motion in the positive direction. This is accomplished by assigning the event action "Positive Stop" to a drive event.	The drive's Positive Stop action is enabled. If assigned to a digital output, the digital output will be active also. This occurs when an active event has its action assigned to Positive Stop.	Check all active events. Check the settings for the event actions to see which event actions are assigned to Positive Stop.
Positive Velocity Limit	The measured velocity has reached the positive velocity limit set by software.	1) The velocity target is greater than the Positive Velocity Limit 2) The Positive Velocity Limit is set too low for the velocity being commanded	This is application dependent. Default event action is 'no action' which is informational only. Can be configured to perform an event action (i.e. disable bridge).
PVT Buffer Empty	The PVT point buffer has no points in it. VALID ONLY IF COMMAND SOURCE IS PVT.	1) The PVT point buffer has had no points sent to it	This is application dependent. Default event action is 'no action' which is informational only. Can be configured to perform an event action (i.e. disable bridge).
PVT Buffer Empty Stop	The PVT buffer ran out of points and motion is stopped. VALID ONLY IF COMMAND SOURCE IS PVT.	1) The drive ran out of points before seeing a PVT stop point 2) The stop point sent down was not correct	1) Make sure points are sent down continuously. When motion is to be stopped, a PVT stop point is sent.
PVT Buffer Failure	There is a failure in the PVT Buffer. VALID ONLY IF COMMAND SOURCE IS PVT.	The drive disabled while executing motion.	Check the drive status to see if there are any events causing the drive to disable.
PVT Buffer Full	The PVT point buffer has 16 points in it. VALID ONLY IF COMMAND SOURCE IS PVT.	1) The PVT point buffer has been filled prior to a motion starting	Do not send more points down until PVT motion is started
PVT Buffer Threshold	The drive has consumed points and has made the transition threshold that has been defined. VALID ONLY IF COMMAND SOURCE IS PVT.	The drive is expecting more points to be sent down.	Send more PVT Points.

Event	Description	Likely Cause	Recommended Actions
PVT Sequence Number Error	The drive has detected a sequence number error. VALID ONLY IF COMMAND SOURCE IS PVT.	1) User has sent down a PVT point with a discontinuous sequence number 2) User sent two points with the same sequence number	Make sure the sequence number of the PVT point is correct.
PWM/DIR Broken Wire	The drive has detected a PWM duty cycle input of 0% or 100%. VALID ONLY IF COMMAND SOURCE IS CONFIGURED FOR PWM.	1) Broken or disconnected PWM or Direction wire 2) PWM frequency below drive's minimum value	1) Check for broken or disconnected PWM or Direction wire 2) Check to ensure that PWM frequency is above drive minimum value (typically 1kHz).
Registration Invalid	Indicates no valid registration event was found in the defined target distance for the Registration Index Task.	No valid registration event was found within the Registration Limit Distance or Registration Window.	1) Check that a valid registration event is set to occur within the Registration Limit Distance or registration window.
Reset Events	The Drive Status Panel event states have been reset.	The drive was commanded to execute a Reset Events command either through a digital input, network interface, or the setup software.	Status only, no action needed.
Safe Torque Off	Safe Torque Off (STO) digital output has become active. This will prevent current from being output to the motor.	1) Safe Torque Off was triggered by the controller 2) The proper voltage is not being applied to the STO1 and STO2 pins.	1) Determine what system event triggered a Safe Torque Off event. 2) Check the STO connections, and verify the voltage levels on the STO1 and STO2 pins. See the drive's hardware manual for more details.
Set Position	The Set Position function has set the target position and measured position to the Preset Position value.	The drive was commanded to execute a Set Position command either through a digital input, network interface, or the setup software.	Status only, no action needed.
Set/Reset Capture A	The Capture A function has been Set/Reset.	The drive was commanded to execute a Set/Reset Capture command either through a digital input, network interface, or the setup software.	Status only, no action needed.
Set/Reset Capture B	The Capture B function has been Set/Reset.	The drive was commanded to execute a Set/Reset Capture command either through a digital input, network interface, or the setup software.	Status only, no action needed.
Set/Reset Capture C	The Capture C function has been Set/Reset.	The drive was commanded to execute a Set/Reset Capture command either through a digital input, network interface, or the setup software.	Status only, no action needed.
Sequence Active	A motion task Sequence is currently active and has control of the axis. No other motion tasks can be executed while this is active.	The drive was commanded to execute a Sequence either through a digital input, network interface, or the setup software.	Status only, no action needed.
Sequence Done	The motion task Sequence has completed, including dwell time and no longer has control of the axis.	The drive was commanded to execute a Sequence either through a digital input, network interface, or the setup software.	Status only, no action needed.
Short Circuit	The drive has detected that there is an insufficient amount of resistance between the motor leads and ground.	1) Inductance of motor is below drive's minimum 2) Noise 3) Short in the motor windings 4) Defective power component in power section of drive	1) Make sure motor inductance is above drive minimum 2) Check system for excessive electrical noise 3) Check for a short across the the motor phases 4) Contact technical support
Shunt Regulator Active	The shunt regulator is active (if equipped).	1) The drive is performing a regenerative operation and has engaged the shunt regulator 2) Shunt turn on voltage is at or below nominal bus voltage	1) Status Only, no action needed 2) Check to make sure that the shunt turn on voltage is not set too low
Software Disable	The drive has been commanded to disable via the communications channel or by clicking on the enable/disable icon on the toolbar. A Software Disable can also occur if the drive is configured to disable on power up.	A fault occurred or the host told the drive to disable the bridge.	1) Check to see if the host disabled the drive 2) Look for the presence of other faults 3) Check if bridge state is Disabled on power up
Software Negative Limit	Indicates the drive was commanded to disable the negative direction	Host commanded a Negative Limit over serial.	Verify if a Software Negative Limit is being commanded over the network.
Software Over Voltage	The HV voltage (not logic power) is above the maximum SOFTWARE specified voltage.	1) Drive is experiencing excessive regeneration 2) The software 'Over Voltage Limit' is set too low	This is application dependent. Default event action is 'no action' which is informational only. Can be configured to perform an event action (i.e. disable bridge).
Software Positive Limit	Indicates the drive was commanded to disable the positive direction.	Host commanded a Positive Limit over serial.	Verify if a Software Positive Limit is being commanded over the network.
Software Stop	The drive was commanded to perform a Stop.	An event action has been configured to perform a 'stop' when the event occurs.	1) If in response to an event action, check to see what event caused this response. 2) If commanded via network interface, then this is informational.
Software Under Voltage	The HV voltage (not logic power) is below the minimum SOFTWARE specified voltage.	1) The HV voltage is disconnected 2) The power is off 3) The software 'Under Voltage Limit' is set too high	This is application dependent. Default event action is 'no action' which is informational only. Can be configured to perform an event action (i.e. disable bridge).

Event	Description	Likely Cause	Recommended Actions
Stop Active	A drive event may be configured to halt motion. This is accomplished by assigning the event "Stop" to a drive event.	The drive's Stop action is enabled. If assigned to a digital output, the digital output will be active also. This occurs when an active event has its action assigned to Stop.	Check all active events. Check the settings for the event actions to see which event actions are assigned to Stop.
Under Voltage	The HV voltage (not logic power) is below the minimum HARDWARE specified voltage.	1) Insufficient power supply 2) HV power is disconnected	1) Ensure that HV voltage is above drive's minimum voltage rating 2) Ensure HV power is connected 3) Verify HV voltage is stable and does not drop, even momentarily, during system operation
User Aux. Disable	The drive has been commanded via a digital input to disable the drive.	The User Aux. Disable input has been asserted.	1) Verify under what system conditions the user-configured digital input will assert a User Aux. Disable. 2) Verify that the digital input mapped to User Aux. Disable is wired correctly to the drive. 3) Check to see that the input polarity for the digital input is configured correctly for the system (i.e. does the active low checkbox need to be checked?)
User Disable	The drive has been disabled by a user-configured digital input.	A digital input has been configured to disable the bridge.	1) Verify under what system conditions the user-configured digital input will disable the bridge 2) Verify that the user-configured digital input is wired correctly to the drive 3) Check to see that the input polarity for the user-configured digital input is configured correctly for the system (i.e. does the active low checkbox need to be checked?)
User Negative Limit	The drive has hit a negative limit switch. A digital input must be configured to be a negative limit.	The axis has reached the physical end of travel and has hit a mechanical limit switch.	Clear the axis away from the limit switch.
User Positive Limit	The drive has hit a positive limit switch. A digital input must be configured to be a positive limit.	The axis has reached the physical end of travel and has hit a mechanical limit switch.	Clear the axis away from the limit switch.
User Stop	A digital input has been assigned to perform a 'Stop' when asserted.	A digital input triggered a Stop.	1) Ensure that a Stop was commanded via digital input.
Velocity Following Error	The difference between the target and measured velocity is outside of the velocity following error window defined in the software.	1) The magnitude of the difference between the velocity measured and the velocity target is greater than the Velocity Following Error value 2) The Velocity Following Error value is too small	This is application dependent. Default event action is 'no action' which is informational only. Can be configured to perform an event action (i.e. disable bridge).
Zero Velocity	The measured motor velocity is within the Zero Velocity window as defined in the Velocity Limits.	The motor is not moving.	Status only, no action needed.

A		Control Loop Architecture 116	Event Actions 44
Absolute Position Valid 121	Critical Event Activity 100	Current Limit Active 121	Event Counters 100
Active High 37	Current Limiting 101–115	Current Limiting	Event Recoveries 45
Active Low 34	calculation of 113–115	Charge-Based 109–111	Events 44
Analog input 17	RMS Current Scaling 112	Time-Based 106–108	
Analog Inputs 33	Current Loop		F
Analog Outputs 34	command limiter control 19		Fault Activity
At Command 121	tuning		critical event activity 100
AutoCommutation™ 61	integral gain 58		event counter 100
warnings 62–63	proportional gain 58		event logs 100
	Current Loop Saturated 122		Feedback Assignment 21
B	Current Measured 57		Feedback Cutoff Freq. 71
BiSS Encoder Parameters 26	Current Target 57		Feedback Filter 117–119
Bit Monitor 48	Cutoff Frequency		Feedback Parameters 25
Brake Active 121	see Feedback Filter		Feedback Sensor Error 122
			Feed-forward Gain
C			velocity loop tuning 71
CAN Bus Speed 46	D		File Menu 3
Caption Bar 5	Deadband 33		Firmware
Capture Configuration 35	Derivative Gain		check drive version of 10
Comm. Channel 18	velocity loop tuning 71		download new version of 85–86
Command Limiter 19–20	Diagnostics		Foldback 101
current loop control 19	see I/O Configuration		time constant 101, 113
position loop control 19	Digital Inputs 34		G
velocity loop control 19	priority 34		Gain Set 16
Command Limiter Active ... 19, 121	Digital Outputs 37		H
Command Settings 16	Disable Negative Direction 44		Hall State Error 122
Command Source 16	Disable Positive Direction 44		Help Menu 4
analog input 17	Disable Power Bridge 44		Home Active 122
comm. channel 18	Disconnecting from the Drive 7		Home Done 122
DriveLibrary 19	Drive Internal Error 122		Homing 76
encoder following 18	Drive Menu 3		direction of travel 77
interface input 18	Drive Name 6		index pulse 77
no command 16	Drive Operation 46		limit and home switches 77
pwm & direction 17	Drive Over Temperature 122		load and physical limits 77
step & direction 17	Drive Parameters		Hotkey 7
Command Toolbar 8	configuration of 39		
Communication Channel Error 121	Drive Protection 99		
Commutation 61	Drive Reset 122		
AutoCommutation™ 61	Drive Status 99		
Manual Commutation 63	DriveLibrary 19		
Configuration	Dynamic Brake 44		
drive parameters 39	Dynamic Help 4		
Configure Input Scaling 17			I
Connecting to the Drive ... 6, 13–14	E		In Home Position 122
communication parameters 14	Encoder Following 18		Index Active 122
connection settings 13–14			Index Done 122
Continuous Current Foldback . 121			Index Motion Done 123

- current loop tuning 58
- velocity loop tuning 71
- Interface input 18
- J**
- Jerk Limiting 20
- Jog Active 123
- Jogs 82
- L**
- Latch 44
- Limit Envelope 101
- Limits 39
- Log Entry Missed 123
- Loop Configuration 16
- M**
- Manual Commutation 63
- Max Measured Position Limit .. 123
- Max Phase Detection Motion 66
- Maximum Target Position 123
- Menu 3
- Min Measured Position Limit .. 123
- Minimum Target Position 123
- Motion Engine Abort 123
- Motion Engine Error 123
- Motion Engine Executing 123
- Motor
 - rotation direction 23
- Motor Over Speed 123
- Motor Over Temp. 123
- Motor Parameters 23
- Motor Ratings
 - see Motor/Feedback
- Motor Selection 23
- Multimeter 3, 91
 - signal definitions 95
- N**
- Negative Stop 44
- Negative Velocity Limit 124
- Network Settings 46
- No Action 44
- No Command 16
- Non-Sinusoidal Commutation 124
- O**
- Open 3, 6
- Oscilloscope 87
 - signal definitions 95
- Over Current 124
- Over Voltage 124
- P**
- Parameter Restore Error 124
- Parameter Store Error 124
- PDO Configuration 47–48
- Peak Current Time 101
- Phase Detect 66–67
 - max phase detection motion 66
- Phase Detect Active 124
- Phase Detect Done 124
- Phase Detect Error 124
- Phase Sync. Error 124
- Position Following Error 124
- Position Loop
 - around torque 73
 - around velocity 73
 - command limiter control 19
 - tuning 73
- Position Measured 74
- Position Target 74
- Positive Stop 44
- Positive Velocity Limit 124
- Power up or down the bridge 3
- Programmable Limit Switch 37
- Proportional Gain
 - current loop tuning 58
 - velocity loop tuning 71
- PVT Buffer Empty 124
- PVT Buffer Empty Stop 124
- PVT Buffer Failure 124
- PVT Buffer Full 124
- PVT Buffer Threshold 124
- PVT File Creation 80
- PVT Generator 80
- PVT Sequence Number 125
- PWM & Direction 17
- PWM/DIR Broken Wire 125
- R**
- Recoveries 45
- Recovery Time 45
- Registration Invalid 125
- Restore 3, 15
- Rotation Direction 23
- RPDOs
 - CANopen 47
 - EtherCAT 48
 - Ethernet Powerlink 48
- S**
- Safety ii–iii
- Sequence Active 125
- Sequence Done 125
- Sequences 82
- Settings Menu 3
- Setup Panel 4
- Setup Software Files 2
- Short Circuit 125
- Shunt Regulator 41–42
- Shunt Regulator Active 125
- Signal Definitions 95
 - command limiter 96
 - commutation 96
 - current 95
 - deadband input 97
 - drive 97
 - interface input 97
 - position 96
 - temperature 97
 - torque 97
 - velocity 95
 - voltage 96
- Software Disable 125
- Software Negative Limit 125
- Software Over Voltage 125
- Software Positive Limit 125
- Software Stop 125
- Software Under Voltage 125
- Station Alias 46
- Status Bar 4
- Status Panel 4
- Step & Direction 17
- Stop 44
- System Protection 99
- System Status 99
- T**
- Technical Support 10
- Time-Out 45
- Timer 48
- Toolbar 3–4, 9
 - icons 3
- Tools Menu 3
- TPDO Events 48
- TPDOs
 - CANopen 47
 - EtherCAT 48
 - Ethernet Powerlink 48
- Tuning 52
 - position loop 73
 - velocity loop 68
- U**
- Under Voltage 126
- User Auxiliary Disable 126
- User Disable 126
- User Negative Limit 126
- User Positive Limit 126
- User Stop 126
- User Units 92
- V**
- Value Changed 48
- Value Reached 48
- Velocity Following Error 126
- Velocity Loop
 - command limiter control 19
 - feedback filter 117–119
 - tuning 68
 - derivative gain 71
 - feedback cutoff freq. 71
 - feed-forward gain 71
 - integral gain 71
 - proportional gain 71
- Velocity Measured 70
- Velocity Target 70
- View Menu 4
- W**
- Window Menu 4
- Z**
- Zero Velocity 126

ACE User Guide
MNDGACUG-05



3805 Calle Tecate • Camarillo, CA 93012-5068
Tel: (805) 389-1935 Fax: (805) 384-2315 www.a-m-c.com